

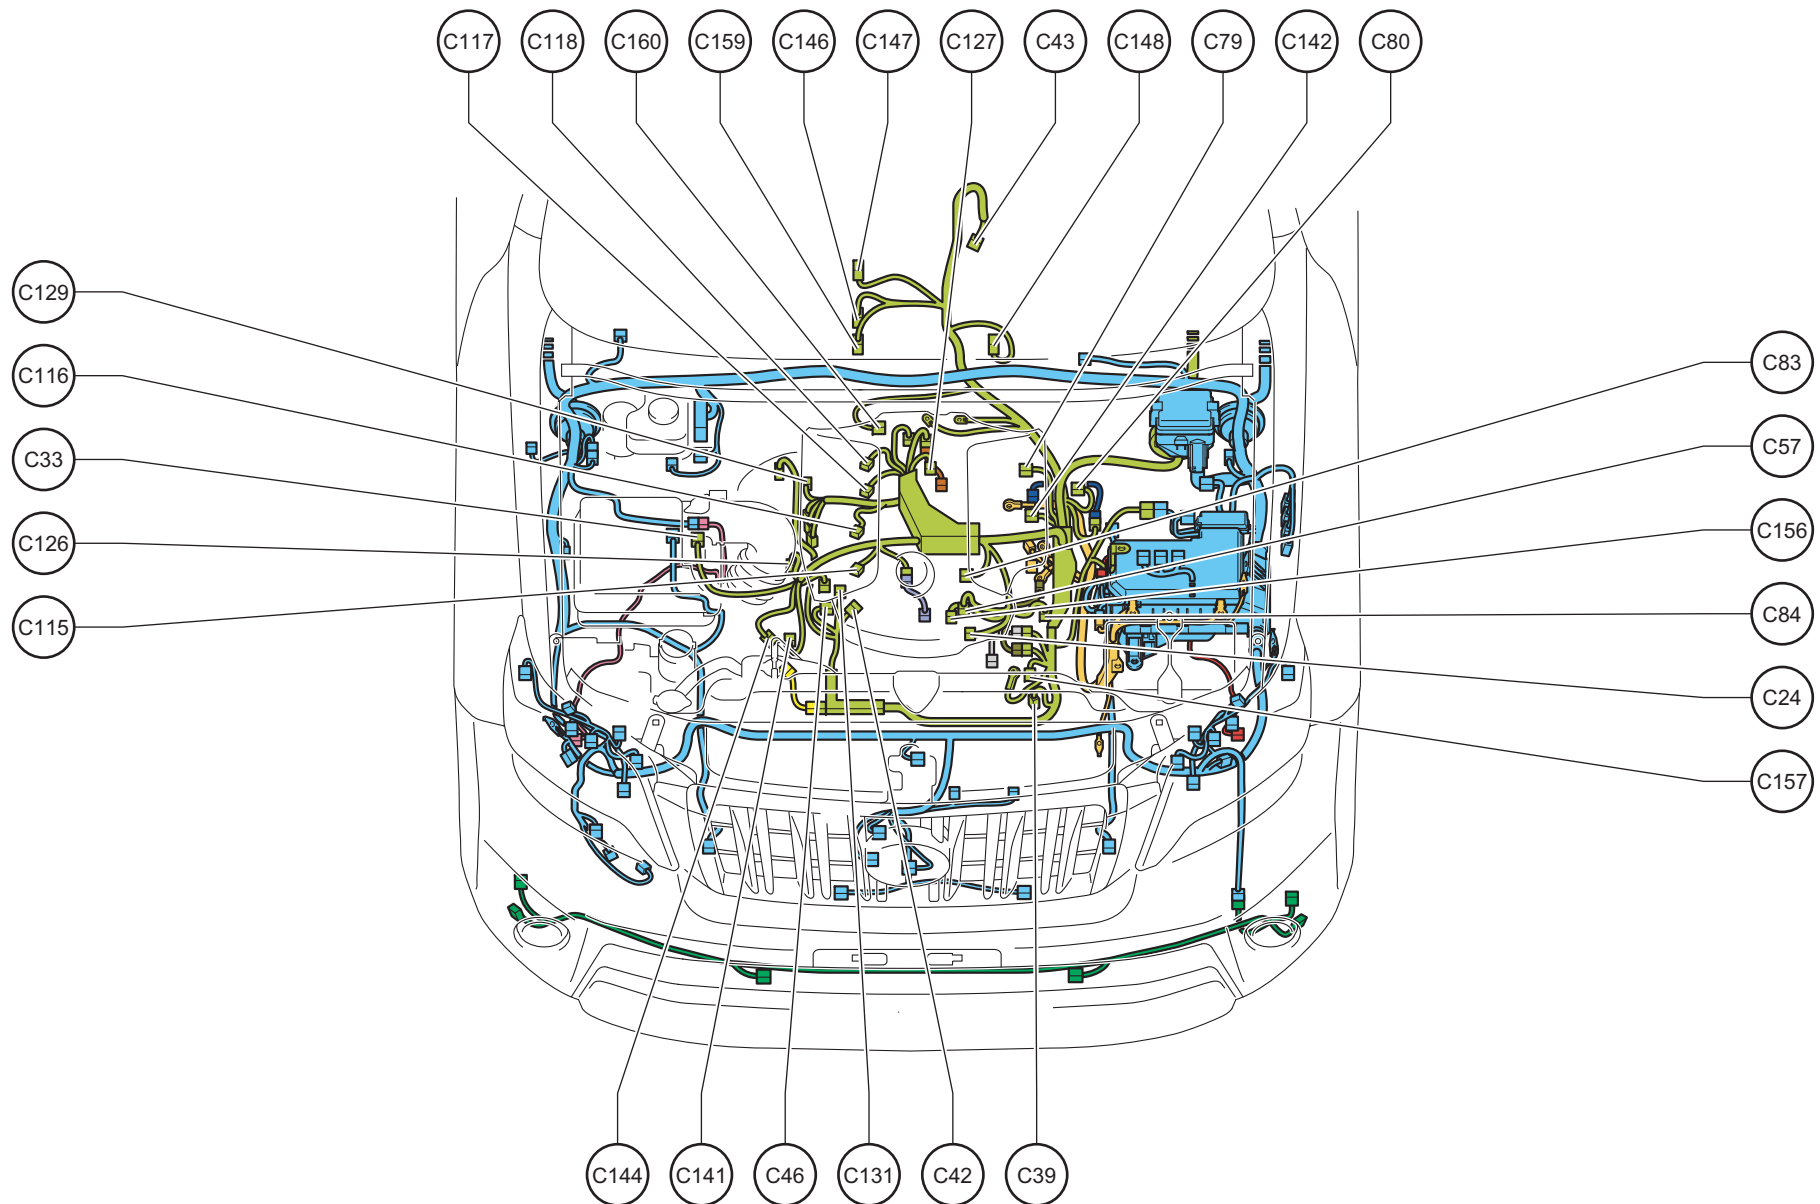
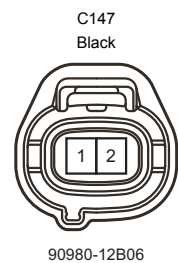
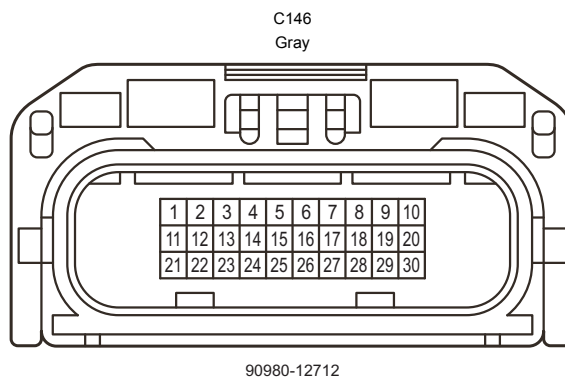
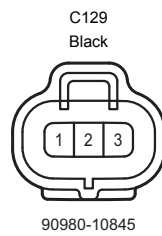
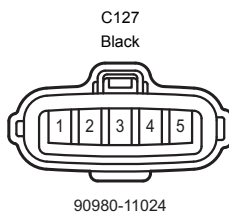
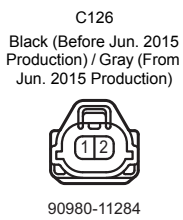
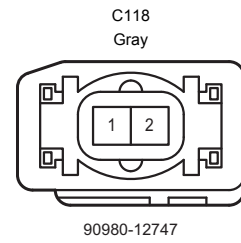
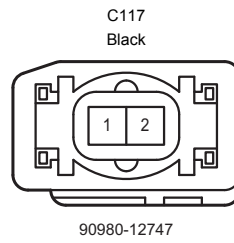
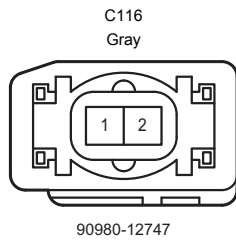
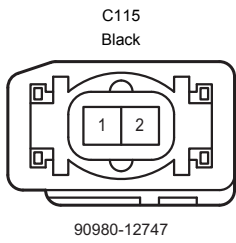
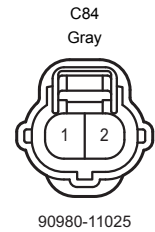
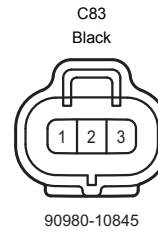
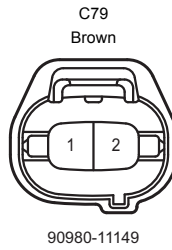


Position of Parts in Engine Compartment (RHD 1GD-FTV) (Before Aug. 2017 Production)

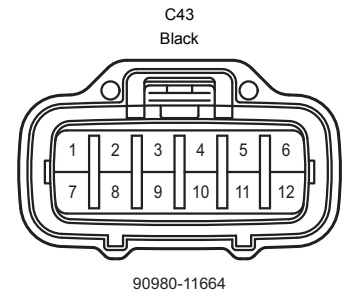

C 24	E.F.I. Engine Coolant Temperature Sensor
C 33	Intake Mass Air Flow Meter Sub-Assembly
C 39	Cooler Compressor Assembly
C 42	Engine Oil Pressure Switch Assembly
C 43	Transfer Shift Actuator Assembly
C 46	Engine Oil Level Sensor
C 57	Power Steering Oil Pressure Switch
C 79	VSV (for No. 2 Swirl Control Valve)
C 80	VSV (for Engine Mounting)
C 83	Vacuum Sensor (Diesel Turbo Pressure Sensor)
C 84	Intake Air Temperature Sensor
C115	Fuel Injector Assembly No. 1
C116	Fuel Injector Assembly No. 2
C117	Fuel Injector Assembly No. 3
C118	Fuel Injector Assembly No. 4
C126	Exhaust Fuel Addition Injector Assembly
C127	Electric EGR Control Valve Assembly
C129	Differential Pressure Sensor Assembly
C131	Air Fuel Ratio Sensor
C141	DC Motor
C142	No. 2 EGR Valve Assembly
C144	Nozzle Vane Position Sensor
C146	Electronically Controlled Transmission Solenoid
C147	Transmission Revolution Sensor (Counter Gear)
C148	Transmission Revolution Sensor (Turbine)
C156	Vane Pump Assembly
C157	Generator Assembly
C159	Park/Neutral Position Switch
C160	Back-Up Light Switch Assembly

Position of Parts in Engine Compartment (RHD 1GD-FTV) (Before Aug. 2017 Production)

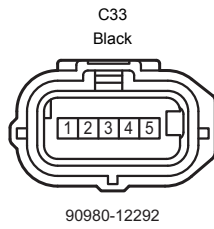

Position of Parts in Engine Compartment (RHD 1GD-FTV) (Before Aug. 2017 Production)

C148
Black




90980-12B06

C156
Black




90980-12B06

C157
Black

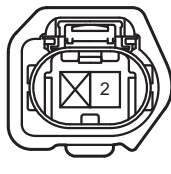

90980-12A88

C159
Gray

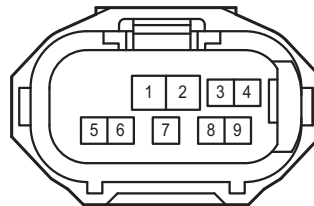

90980-12A23

C160
White



90980-12B06