


Position of Parts in Engine Compartment (LHD 1GR-FE) (From Aug. 2017 Production)

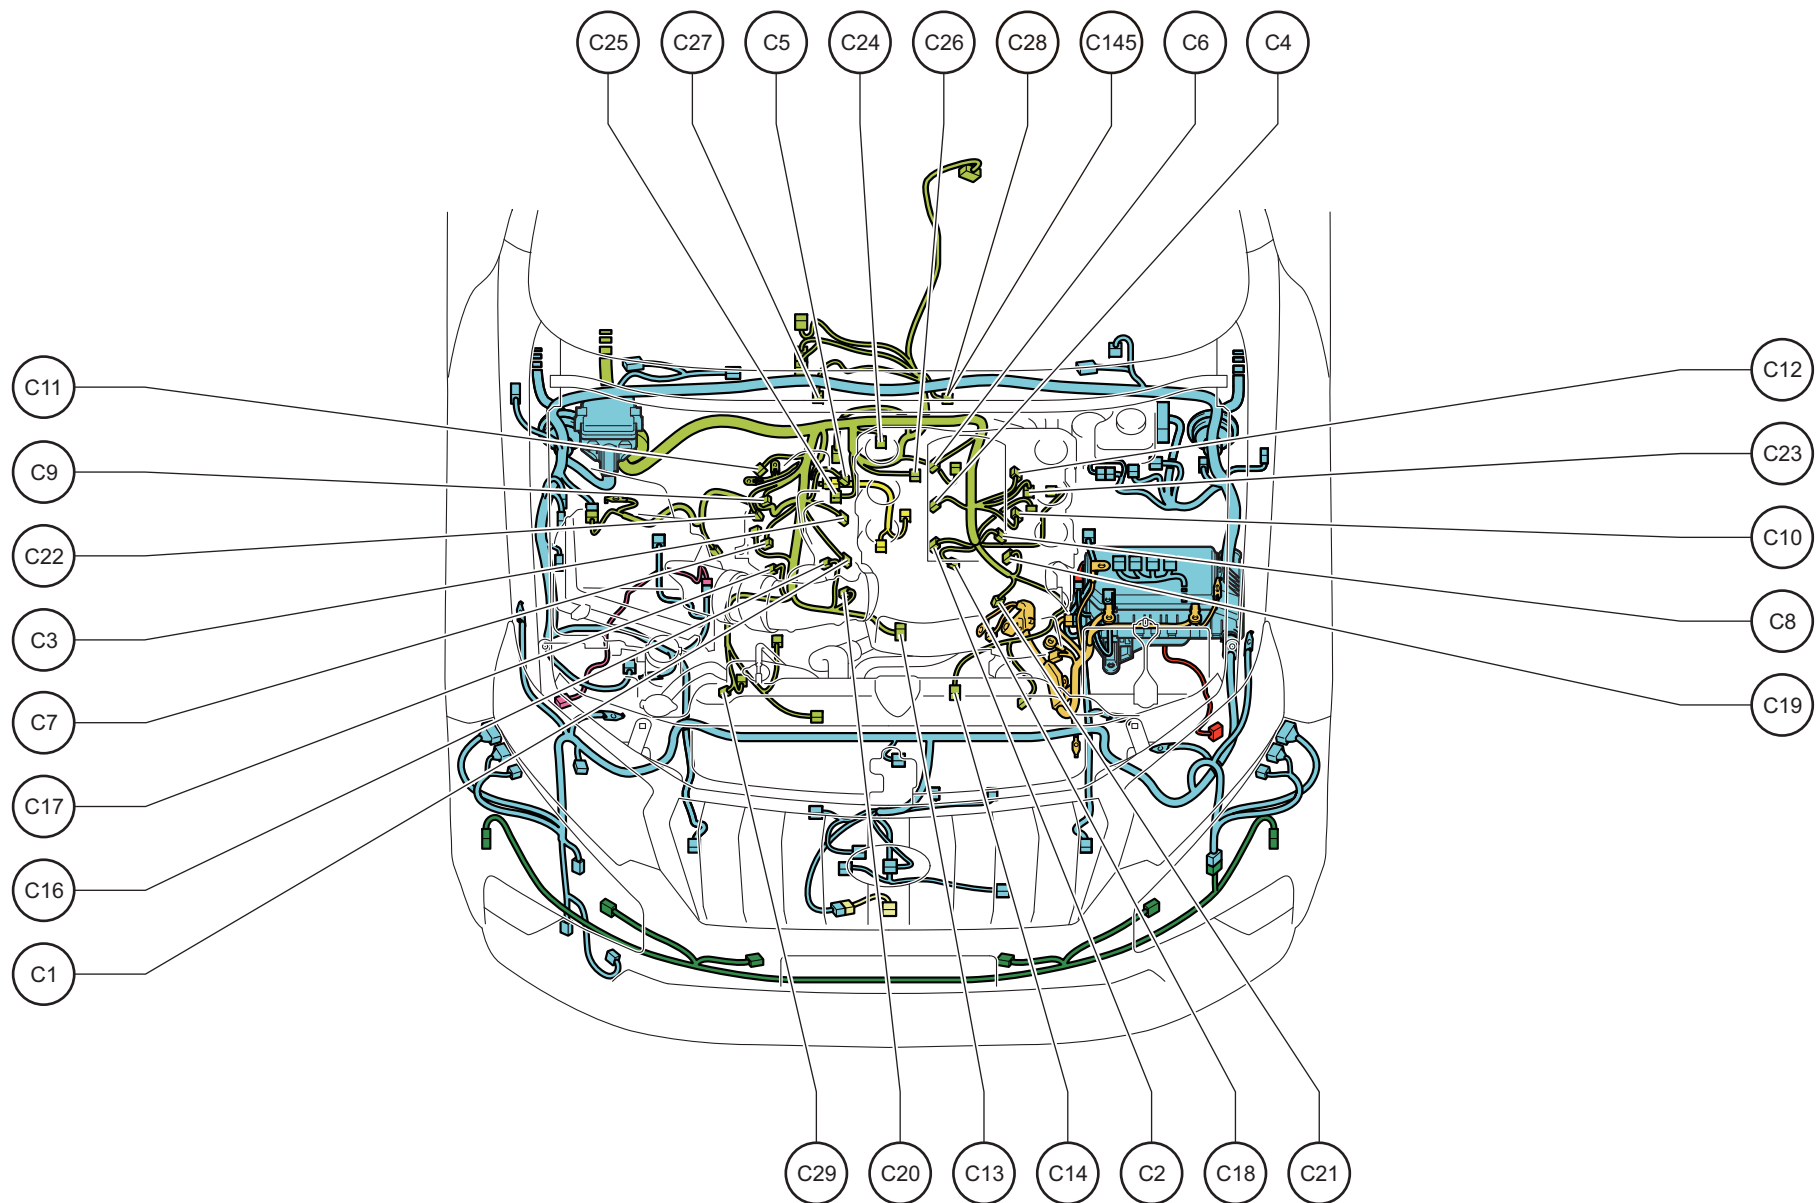

- C 1 Fuel Injector Assembly No. 1
- C 2 Fuel Injector Assembly No. 2
- C 3 Fuel Injector Assembly No. 3
- C 4 Fuel Injector Assembly No. 4
- C 5 Fuel Injector Assembly No. 5
- C 6 Fuel Injector Assembly No. 6
- C 7 Ignition Coil Assembly No. 1
- C 8 Ignition Coil Assembly No. 2
- C 9 Ignition Coil Assembly No. 3
- C 10 Ignition Coil Assembly No. 4
- C 11 Ignition Coil Assembly No. 5
- C 12 Ignition Coil Assembly No. 6
- C 13 Throttle Body Assembly
- C 14 Crank Position Sensor
- C 16 Cam Timing Oil Control Valve (Bank 1 Intake Side)
- C 17 Cam Timing Oil Control Valve (Bank 1 Exhaust Side)
- C 18 Cam Timing Oil Control Valve (Bank 2 Intake Side)
- C 19 Cam Timing Oil Control Valve (Bank 2 Exhaust Side)
- C 20 VVT Sensor (Bank 1 Intake Side)
- C 21 VVT Sensor (Bank 2 Intake Side)
- C 22 VVT Sensor (Bank 1 Exhaust Side)
- C 23 VVT Sensor (Bank 2 Exhaust Side)
- C 24 E.F.I. Engine Coolant Temperature Sensor
- C 25 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 26 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- C 27 Oxygen Sensor (Bank 1 Sensor 2)
- C 28 Oxygen Sensor (Bank 2 Sensor 2)
- C 29 Power Steering Oil Pressure Switch
- C145 Oxygen Sensor (Bank 2 Sensor 2)

Position of Parts in Engine Compartment (LHD 1GR-FE) (From Aug. 2017 Production)

