


Position of Parts in Engine Compartment (LHD 1GR-FE) (From Aug. 2017 Production)

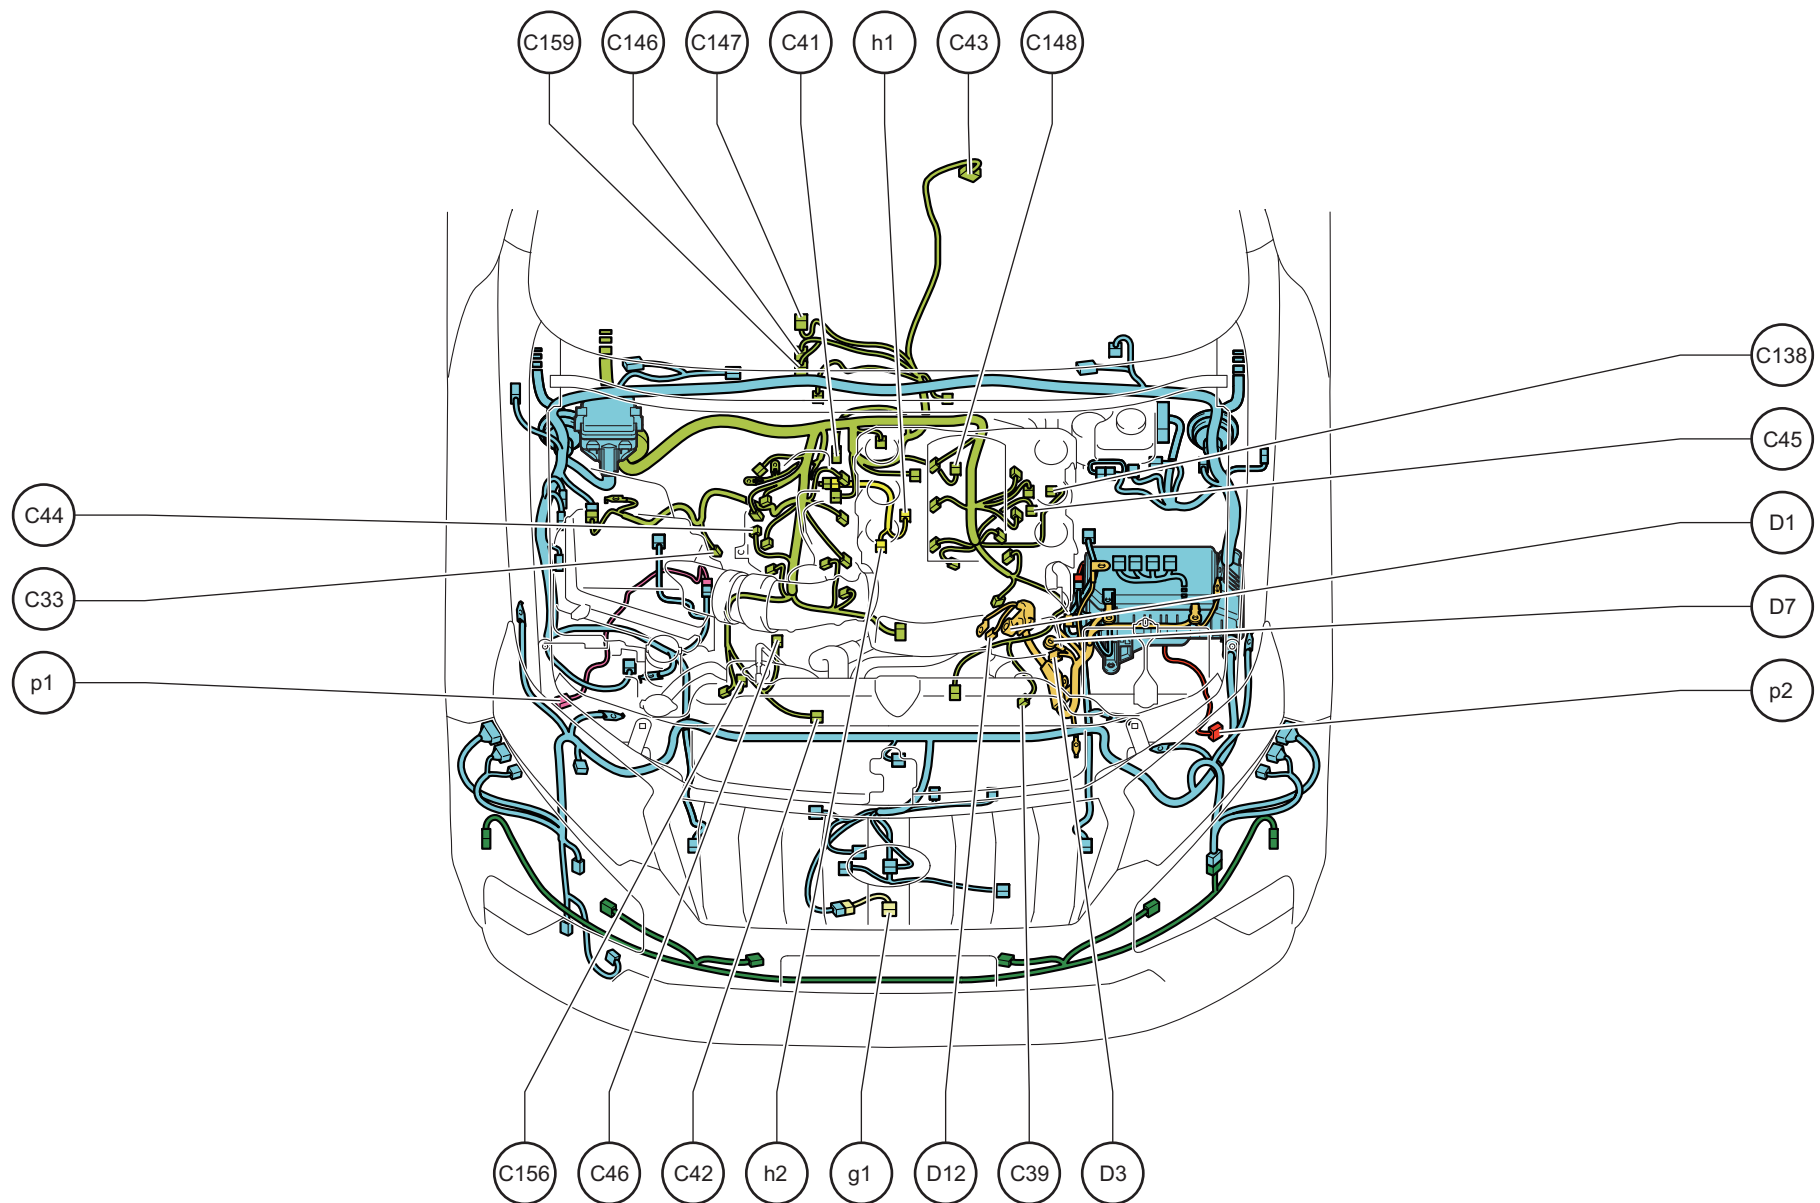

- C 33 Intake Mass Air Flow Meter Sub-Assembly
- C 39 Cooler Compressor Assembly
- C 41 Back-Up Light Switch Assembly
- C 42 Engine Oil Pressure Switch Assembly
- C 43 Transfer Shift Actuator Assembly
- C 44 Air Pump Assembly (Bank 1)
- C 45 Air Pump Assembly (Bank 2)
- C 46 Engine Oil Level Sensor
- C138 Purge VSV
- C146 Electronically Controlled Transmission Solenoid
- C147 Transmission Revolution Sensor (Counter Gear)
- C148 Transmission Revolution Sensor (Turbine)
- C156 Vane Pump Assembly
- C159 Park/Neutral Position Switch
- D 1 Starter Assembly
- D 3 Generator Assembly
- D 7 Generator Assembly
- D 12 Starter Assembly
- g 1 Front Television Camera Assembly
- h 1 Knock Control Sensor (Bank 2)
- h 2 Knock Control Sensor (Bank 1)
- p 1 Front Speed Sensor RH
- p 2 Front Speed Sensor LH

Position of Parts in Engine Compartment (LHD 1GR-FE) (From Aug. 2017 Production)

