


Position of Parts in Engine Compartment (LHD 1KD-FTV) (From Aug. 2017 Production)

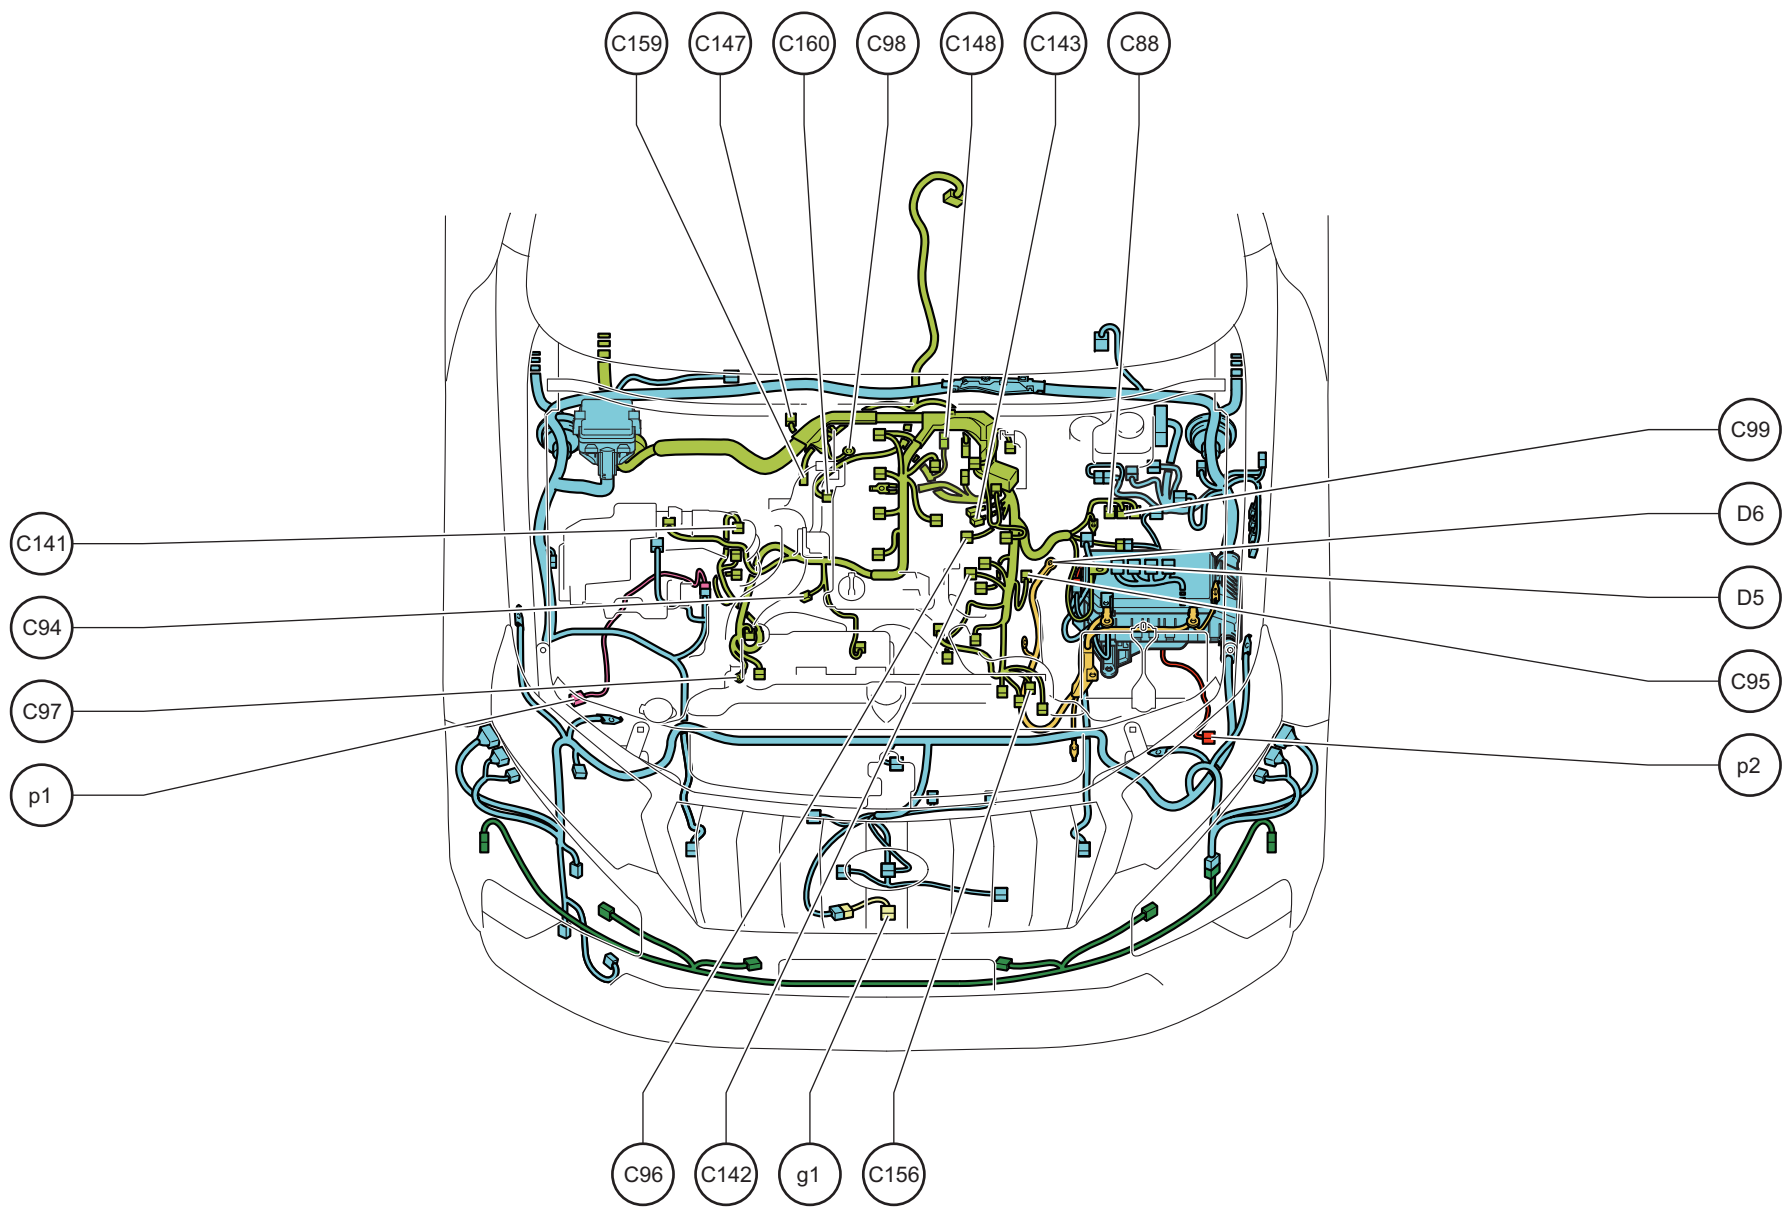

C 88 Injector Driver
C 94 Viscous with Magnet Clutch Heater Assembly
C 95 Starter Assembly
C 96 Engine Oil Pressure Switch Assembly
C 97 Generator Assembly
C 98 Glow Plug Assembly
C 99 Injector Driver
C141 DC Motor
C142 No. 2 EGR Valve Assembly
C143 VSV (for No. 1 Swirl Control Valve)
C147 Transmission Revolution Sensor (Counter Gear)
C148 Transmission Revolution Sensor (Turbine)
C156 Vane Pump Assembly
C159 Park/Neutral Position Switch
C160 Back-Up Light Switch Assembly
D 5 Starter Assembly
D 6 Starter Assembly
g 1 Front Television Camera Assembly
p 1 Front Speed Sensor RH
p 2 Front Speed Sensor LH

Position of Parts in Engine Compartment (LHD 1KD-FTV) (From Aug. 2017 Production)

