

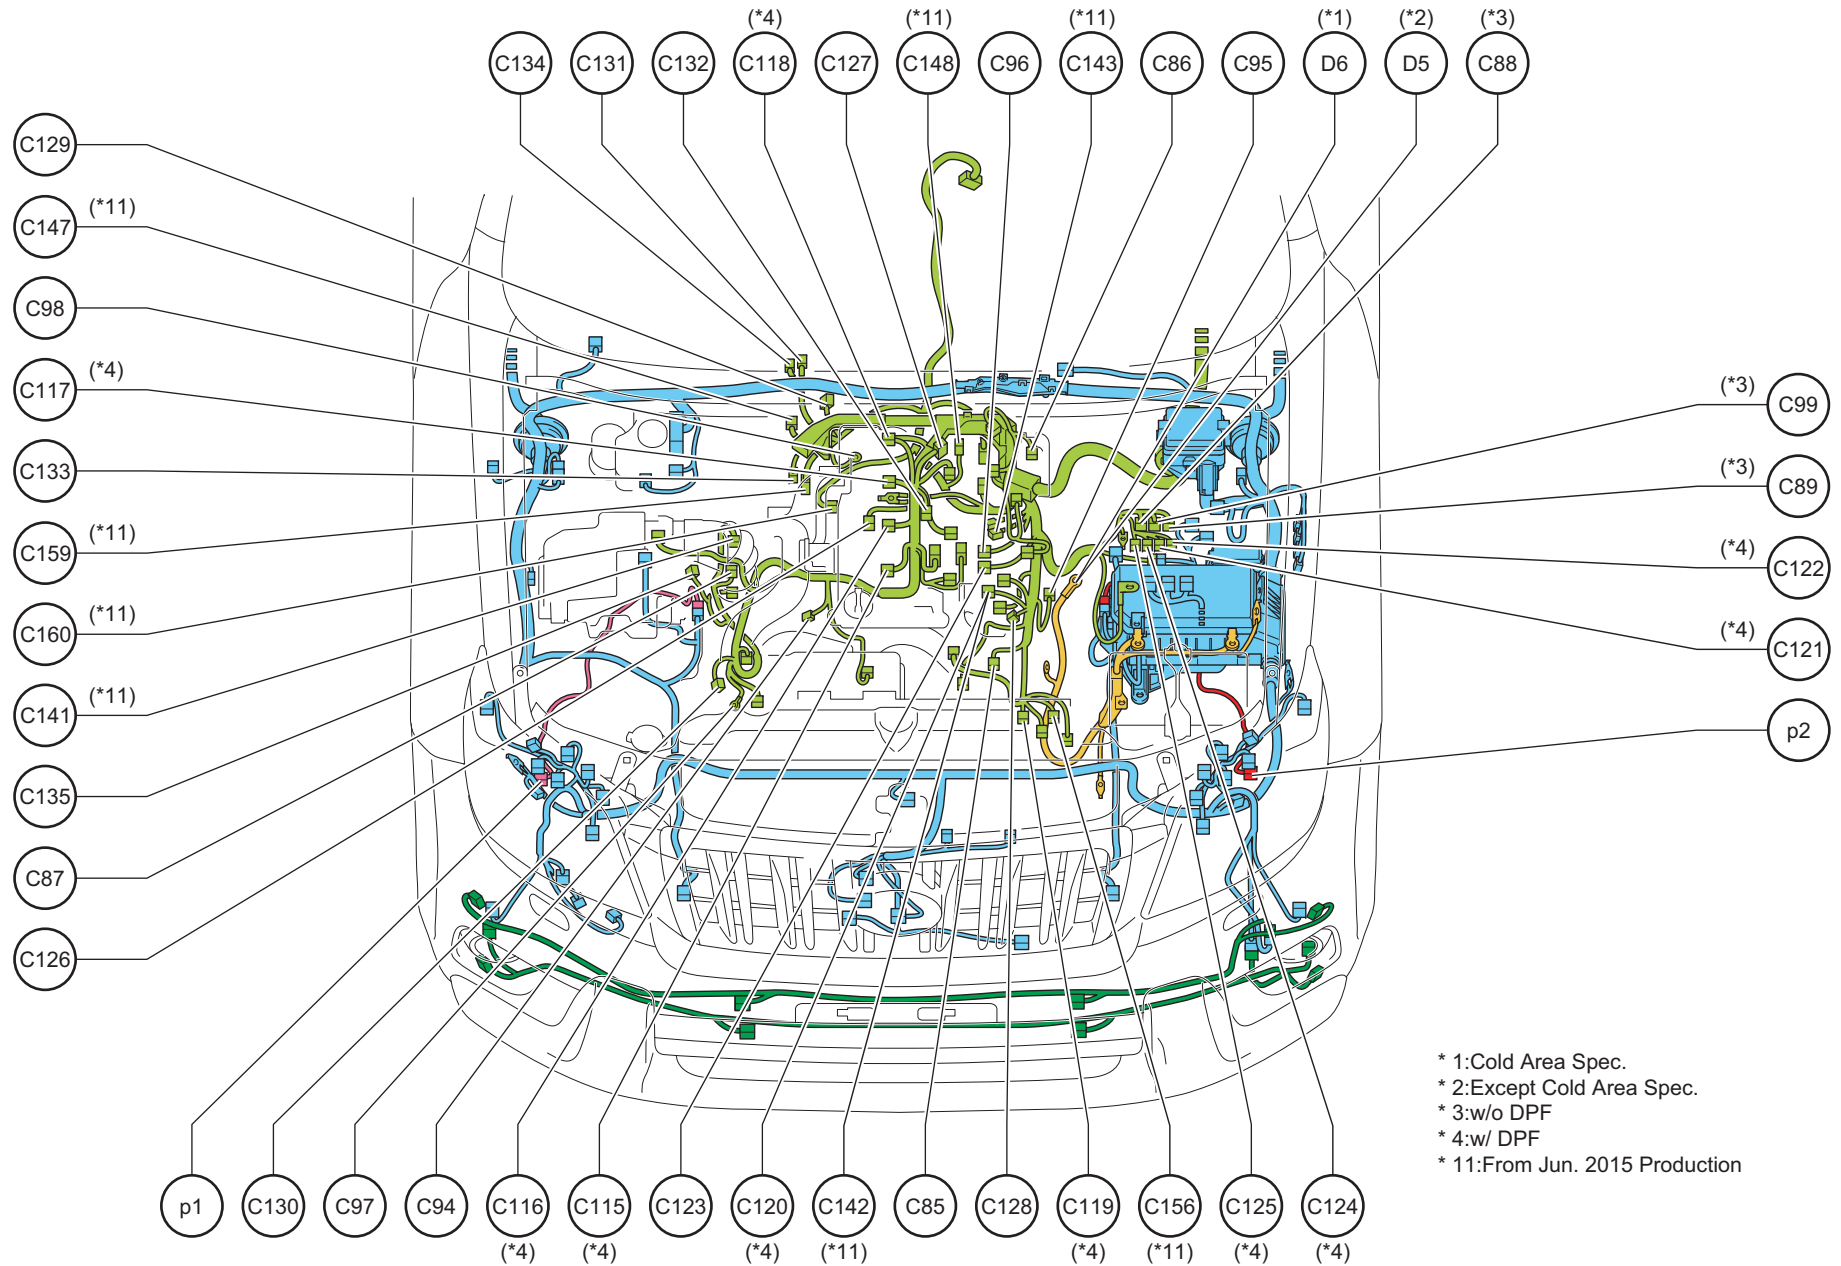
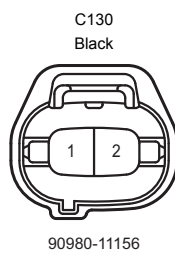
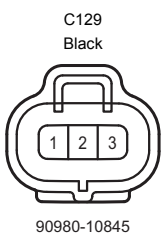
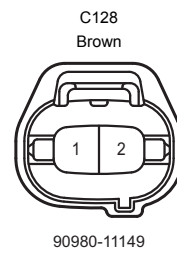
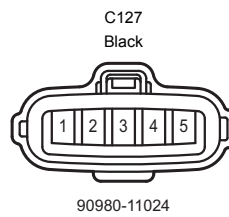
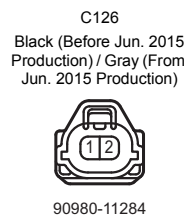
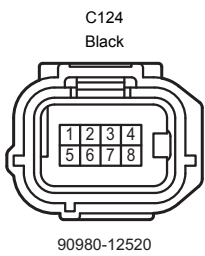
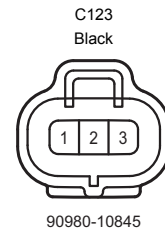
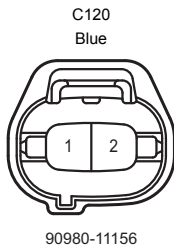
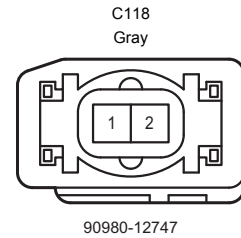
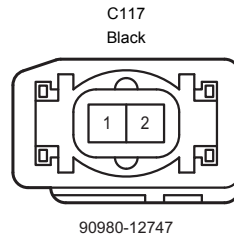
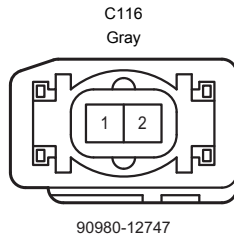
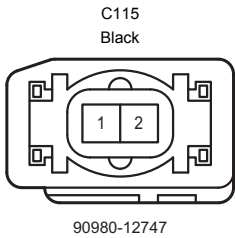
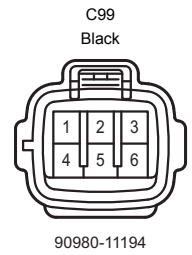
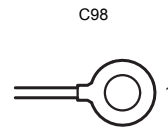
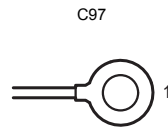
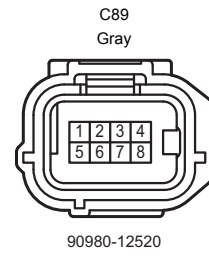


Position of Parts in Engine Compartment (RHD 1KD-FTV) (Before Aug. 2017 Production)

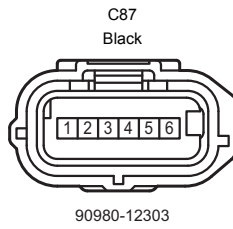

C 85	Fuel Temperature Sensor
C 86	Electric EGR Control Valve Sensor
C 87	Nozzle Vane Position Sensor
C 88	Injector Driver
C 89	Injector Driver
C 94	Viscous with Magnet Clutch Heater Assembly
C 95	Starter Assembly
C 96	Engine Oil Pressure Switch Assembly
C 97	Generator Assembly
C 98	Glow Plug Assembly
C 99	Injector Driver
C115	Fuel Injector Assembly No. 1
C116	Fuel Injector Assembly No. 2
C117	Fuel Injector Assembly No. 3
C118	Fuel Injector Assembly No. 4
C119	Crank Position Sensor
C120	No. 2 EGR Valve Assembly
C121	Injector Driver
C122	Injector Driver
C123	Oil Pressure Sender Gage Assembly
C124	Injector Driver
C125	Injector Driver
C126	Exhaust Fuel Addition Injector Assembly
C127	Electric EGR Control Valve Assembly
C128	VSV (for EGR Cooler)
C129	Differential Pressure Sensor Assembly
C130	Oil Pressure Switching Valve Assembly
C131	Air Fuel Ratio Sensor
C132	Glow Plug Assembly
C133	No. 2 Exhaust Gas Temperature Sensor
C134	No. 3 Exhaust Gas Temperature Sensor
C135	No. 1 Exhaust Gas Temperature Sensor
C141	DC Motor
C142	No. 2 EGR Valve Assembly
C143	VSV (for No. 1 Swirl Control Valve)
C147	Transmission Revolution Sensor (Counter Gear)
C148	Transmission Revolution Sensor (Turbine)
C156	Vane Pump Assembly
C159	Park/Neutral Position Switch
C160	Back-Up Light Switch Assembly
D 5	Starter Assembly
D 6	Starter Assembly
p 1	Front Speed Sensor RH
p 2	Front Speed Sensor LH

Position of Parts in Engine Compartment (RHD 1KD-FTV) (Before Aug. 2017 Production)

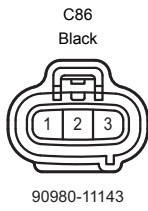

Position of Parts in Engine Compartment (RHD 1KD-FTV) (Before Aug. 2017 Production)

