














Position of Parts in Engine Compartment (LHD 2TR-FE) (From Aug. 2017 Production)

- * 1:w/ Entry & Start System
 * 2:w/o Entry & Start System

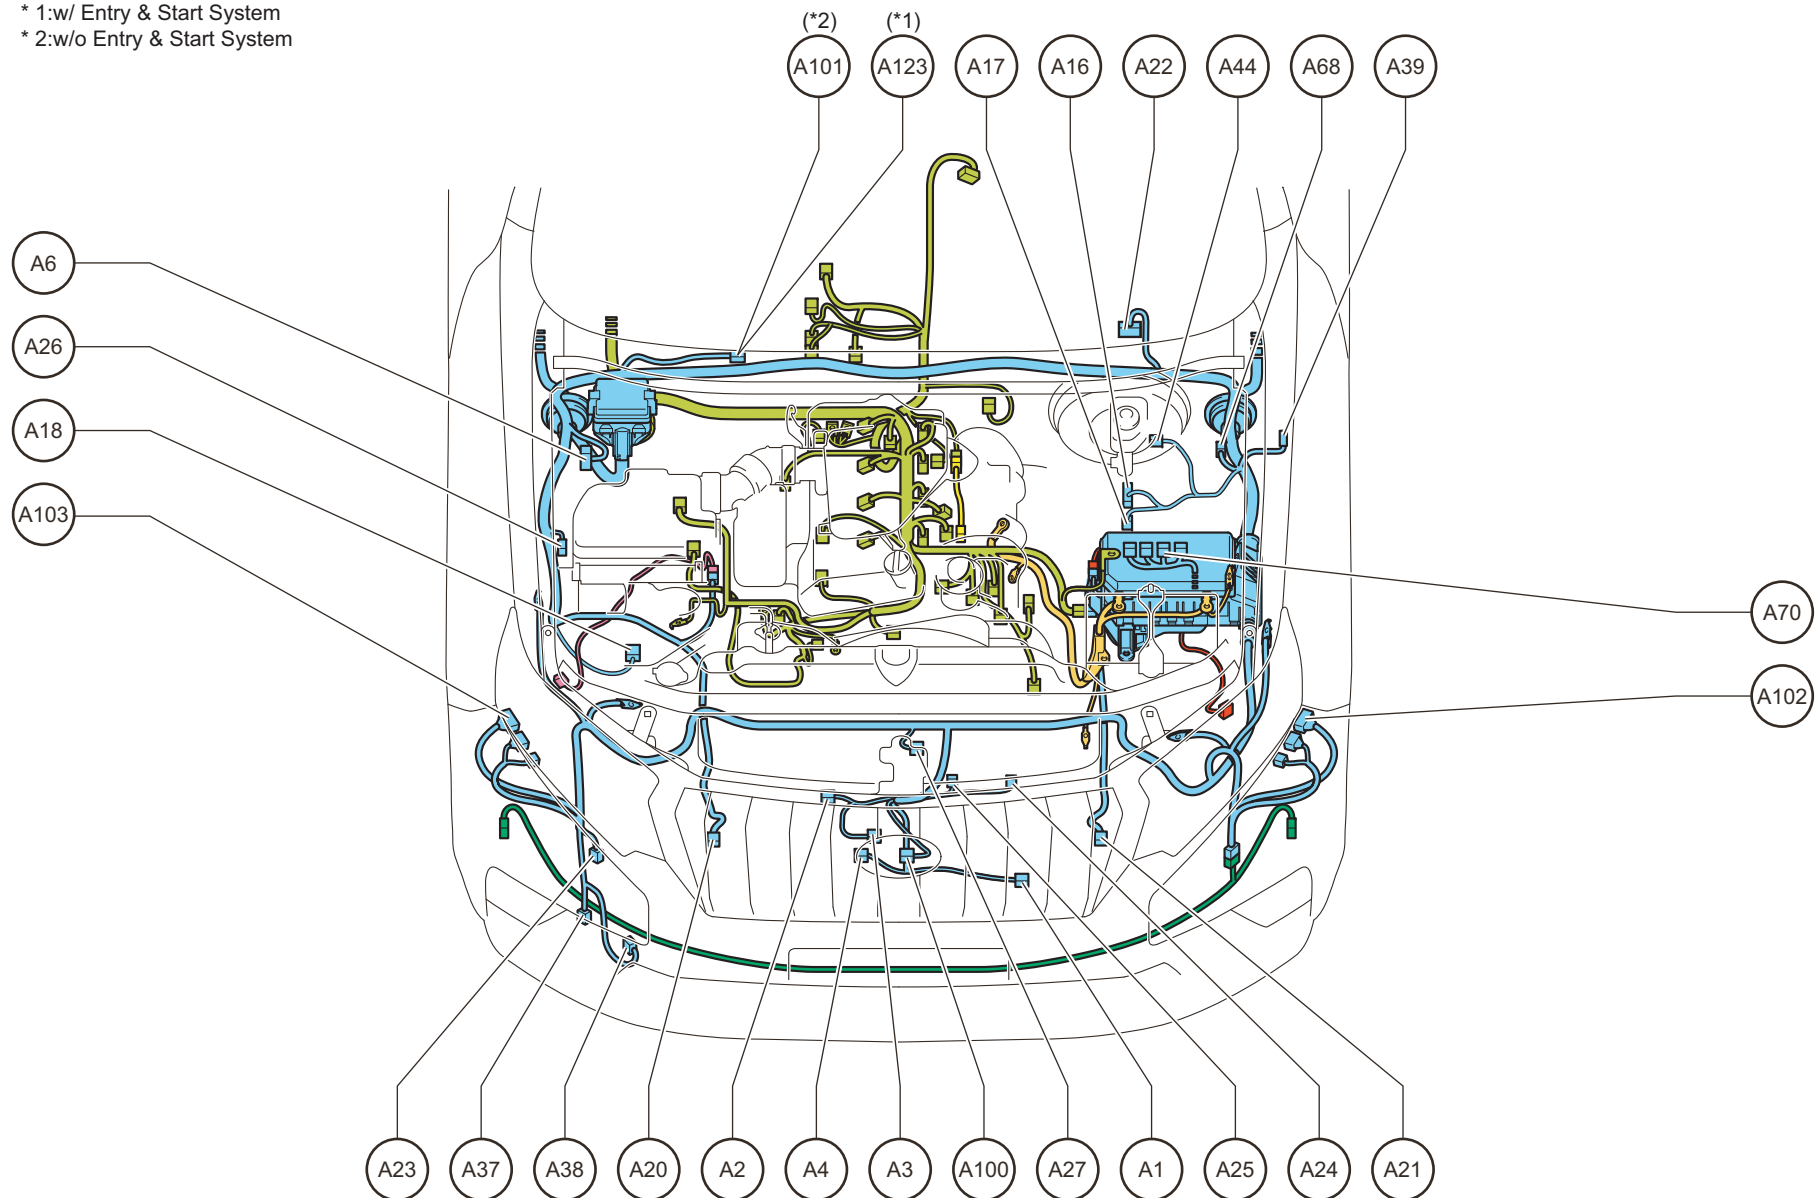

- A 1 Ambient Temperature Sensor
- A 2 A/C Pressure Sensor
- A 3 No. 1 Pressure Switch
- A 4 Condenser Fan Motor (With Shroud Blower Assembly)
- A 6 Brake Actuator Assembly
- A 16 Air Injection Control Driver
- A 17 Air Injection Control Driver
- A 18 Inlet Air Pump
- A 20 Front Airbag Sensor RH
- A 21 Front Airbag Sensor LH
- A 22 Windshield Wiper Motor Assembly
- A 23 Windshield Washer Motor and Pump Assembly
- A 24 Low Pitched Horn Assembly
- A 25 High Pitched Horn Assembly
- A 26 Security Horn Assembly
- A 27 Engine Hood Courtesy Switch
- A 37 Headlight Cleaner Motor and Pump Assembly
- A 38 Headlight Cleaner Control Relay
- A 39 Wireless Door Lock Buzzer
- A 44 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 68 Junction Connector
- A 70 Junction Connector
- A100 Millimeter Wave Radar Sensor Assembly
- A101 Front Wiper Deicer (Windshield Glass)
- A102 Headlight Assembly LH (Headlamp Computer Sub-Assembly Main)
- A103 Headlight Assembly RH (Headlamp Computer Sub-Assembly Sub)
- A123 Heated Windshield Defroster (Windshield Glass)

  Position of Parts in Engine Compartment (LHD 2TR-FE) (From Aug. 2017 Production)

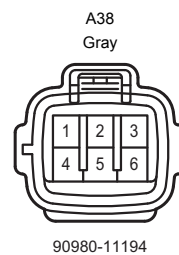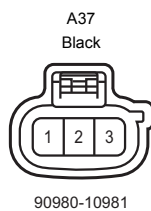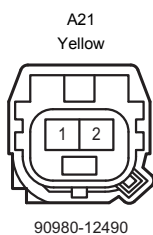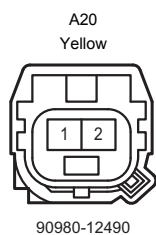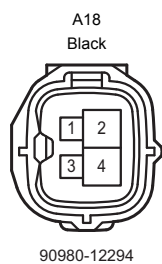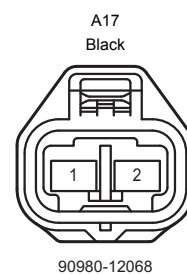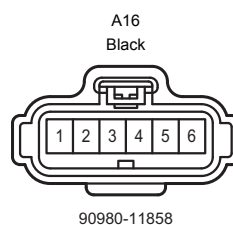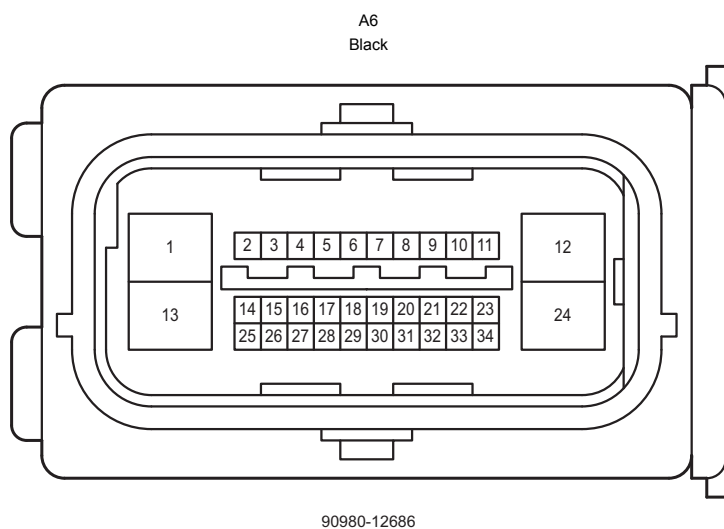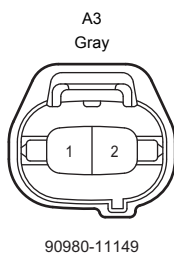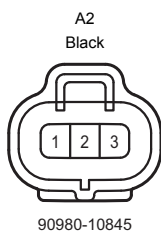

Position of Parts in Engine Compartment (LHD 2TR-FE) (From Aug. 2017 Production)

