



Position of Parts in Engine Compartment (LHD 2TR-FE) (From Aug. 2017 Production)

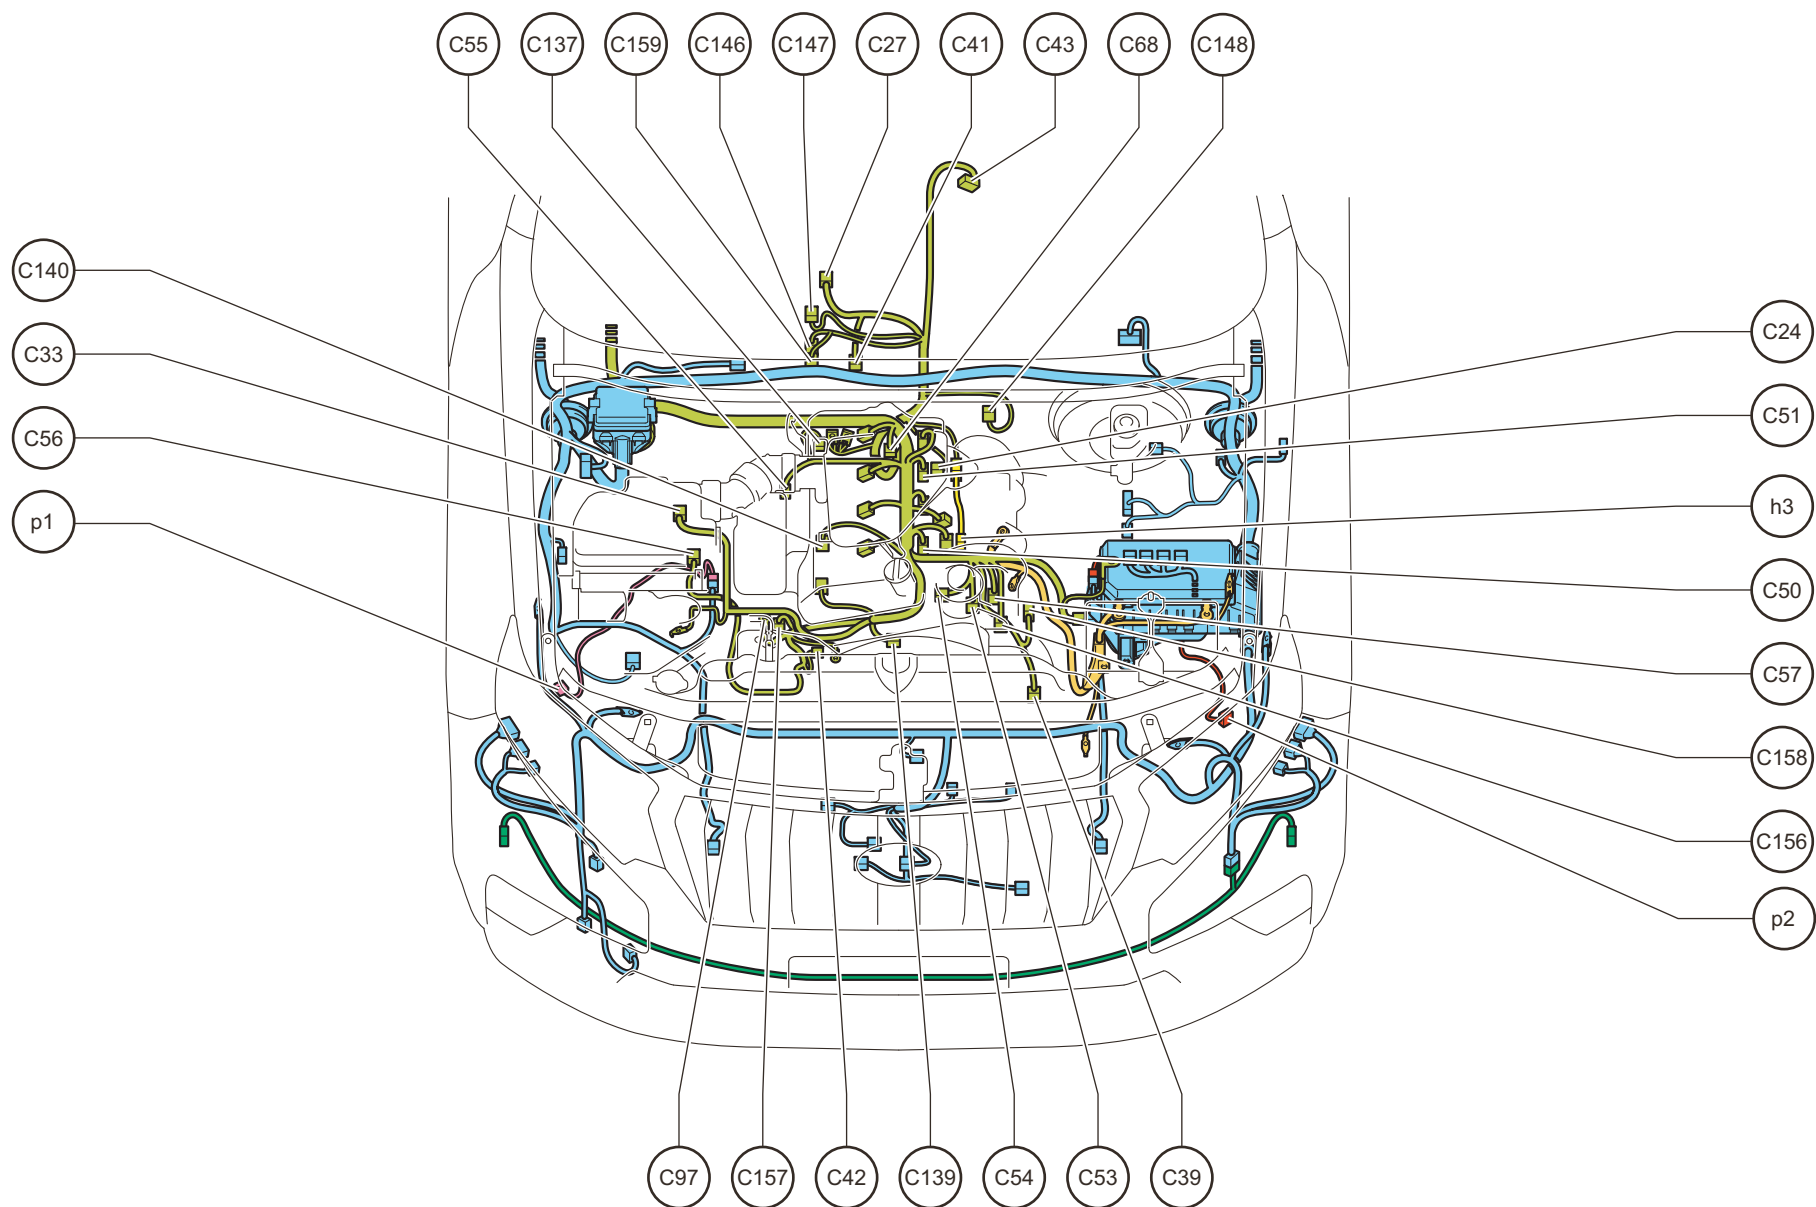

C 24	E.F.I. Engine Coolant Temperature Sensor
C 27	Oxygen Sensor (Bank 1 Sensor 2)
C 33	Intake Mass Air Flow Meter Sub-Assembly
C 39	Cooler Compressor Assembly
C 41	Back-Up Light Switch Assembly
C 42	Engine Oil Pressure Switch Assembly
C 43	Transfer Shift Actuator Assembly
C 50	Fuel Injector Assembly No. 1
C 51	Fuel Injector Assembly No. 3
C 53	Crank Position Sensor
C 54	Cam Timing Oil Control Valve (Bank 1)
C 55	Air Switching Valve Assembly
C 56	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 57	Power Steering Oil Pressure Switch
C 68	Noise Filter (Ignition)
C 97	Generator Assembly
C137	Air Pressure Sensor
C139	VVT Sensor (Intake Side)
C140	VVT Sensor (Exhaust Side)
C146	Electronically Controlled Transmission Solenoid
C147	Transmission Revolution Sensor (Counter Gear)
C148	Transmission Revolution Sensor (Turbine)
C156	Vane Pump Assembly
C157	Generator Assembly
C158	Starter Assembly
C159	Park/Neutral Position Switch
h 3	Knock Control Sensor (Bank 1)
p 1	Front Speed Sensor RH
p 2	Front Speed Sensor LH

Position of Parts in Engine Compartment (LHD 2TR-FE) (From Aug. 2017 Production)

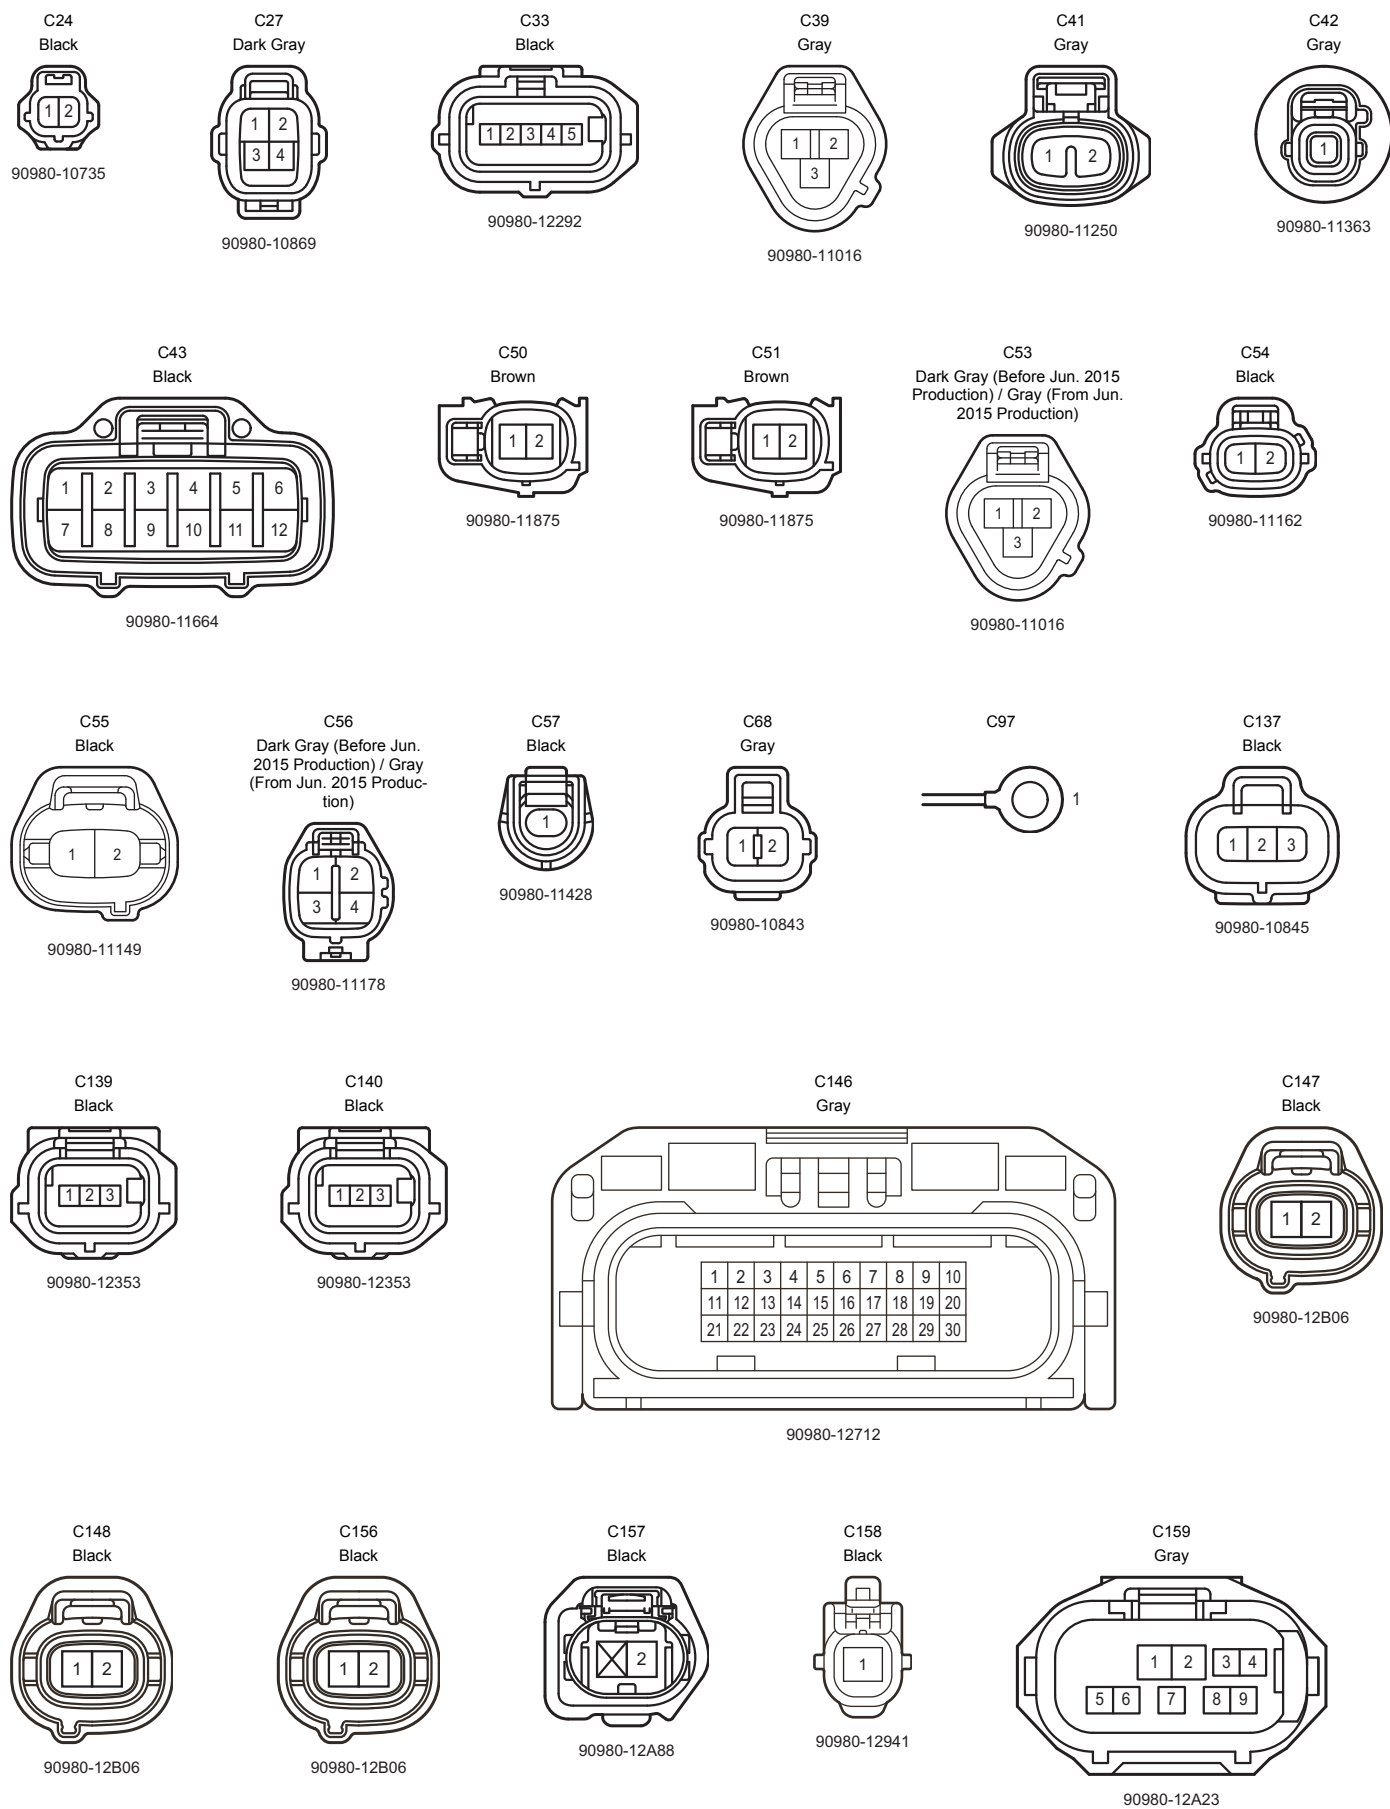

Position of Parts in Engine Compartment (LHD 2TR-FE) (From Aug. 2017 Production)

