



Position of Parts in Engine Compartment (LHD 2TR-FE) (From Aug. 2017 Production)

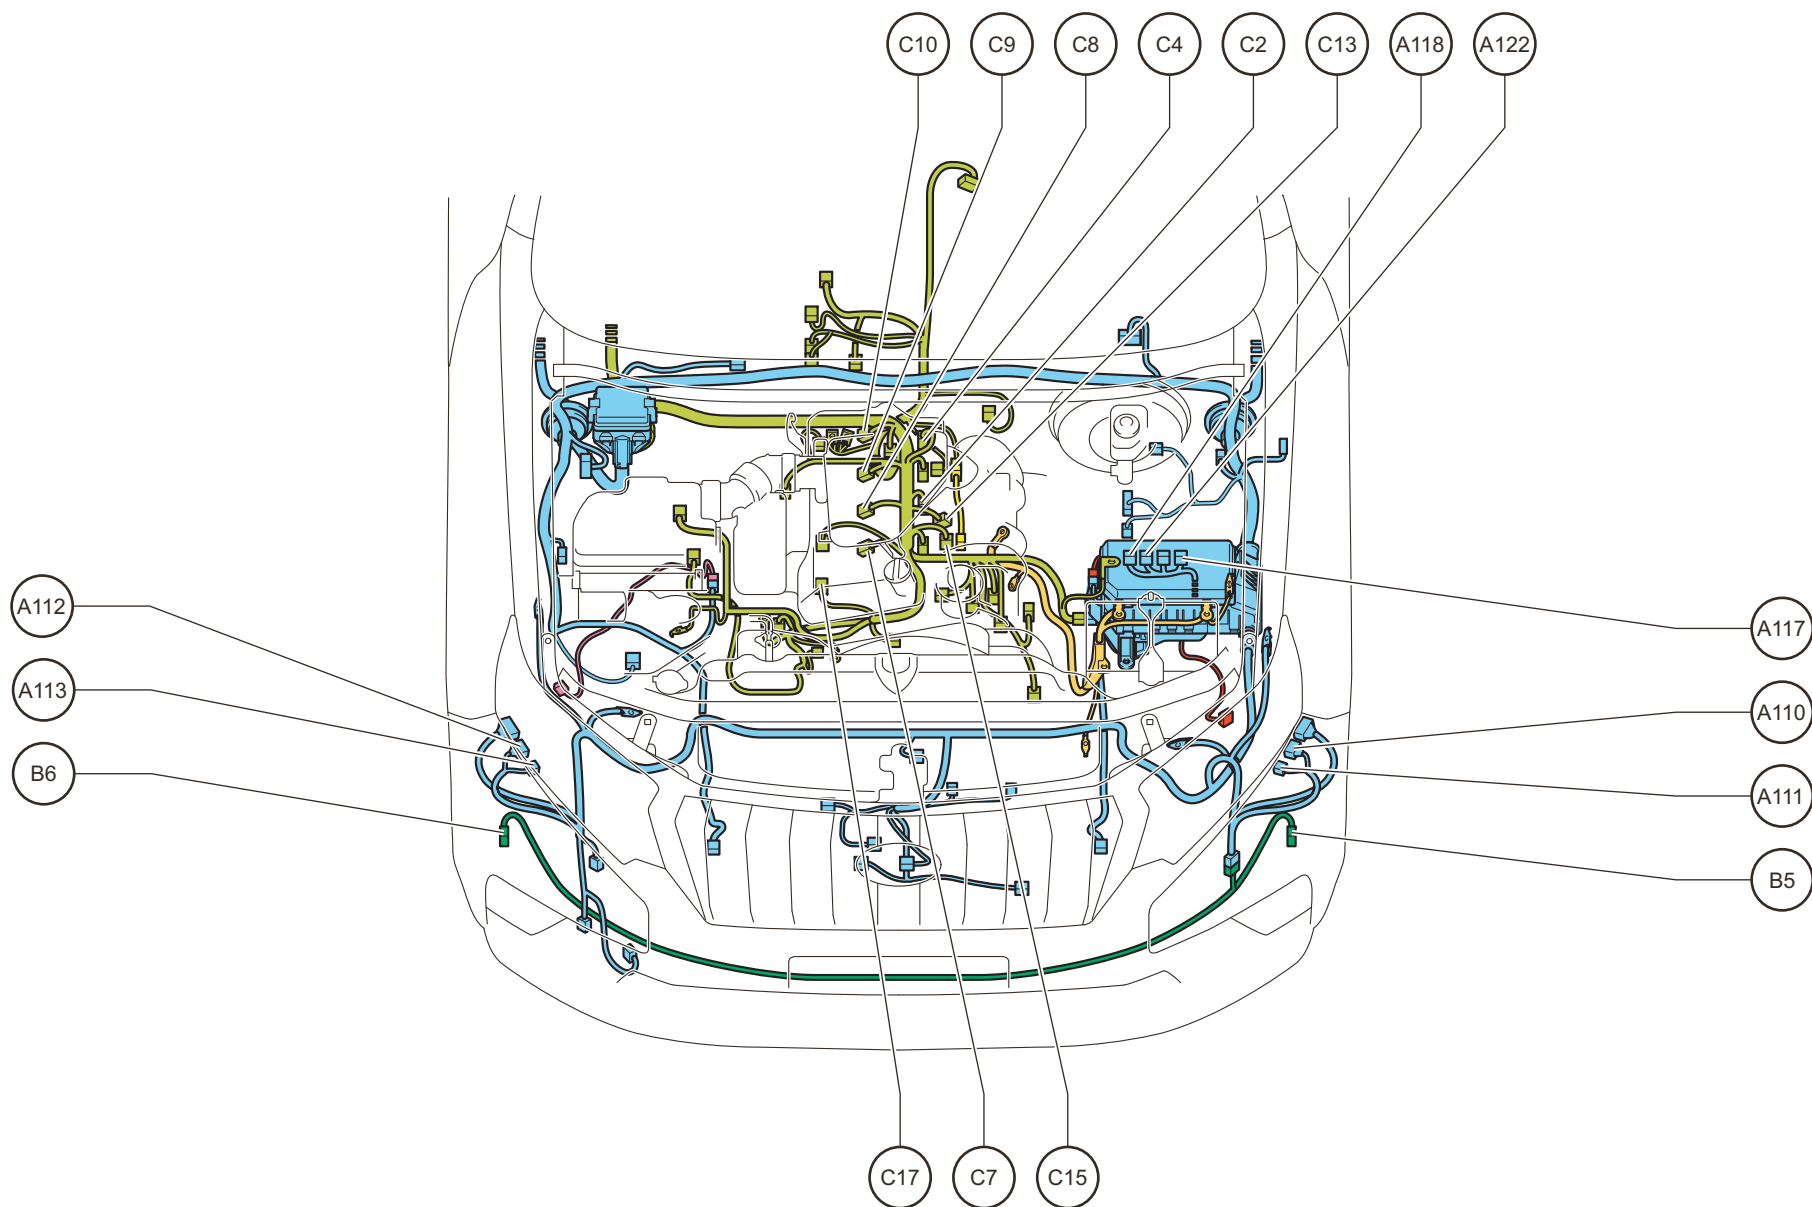

A110 Headlight Assembly LH
A111 Headlight Assembly LH
A112 Headlight Assembly RH
A113 Headlight Assembly RH
A117 Junction Connector
A118 Junction Connector
A122 Junction Connector
B 5 Fog Light Assembly LH
B 6 Fog Light Assembly RH
C 2 Fuel Injector Assembly No. 2
C 4 Fuel Injector Assembly No. 4
C 7 Ignition Coil Assembly No. 1
C 8 Ignition Coil Assembly No. 2
C 9 Ignition Coil Assembly No. 3
C 10 Ignition Coil Assembly No. 4
C 13 Throttle Body Assembly
C 15 Purge VSV
C 17 Cam Timing Oil Control Valve (Bank 1 Exhaust Side)


Position of Parts in Engine Compartment (LHD 2TR-FE) (From Aug. 2017 Production)

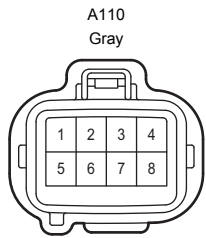

90980-10897




90980-11194

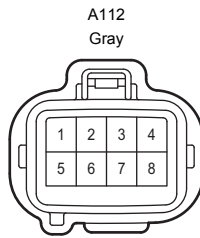


90980-10897




90980-11194

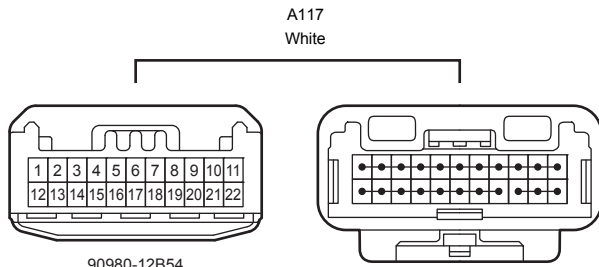


90980-12B54

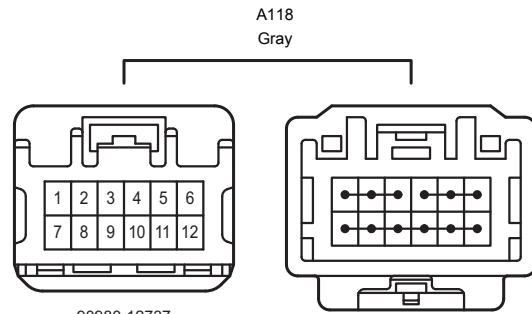


90980-12737

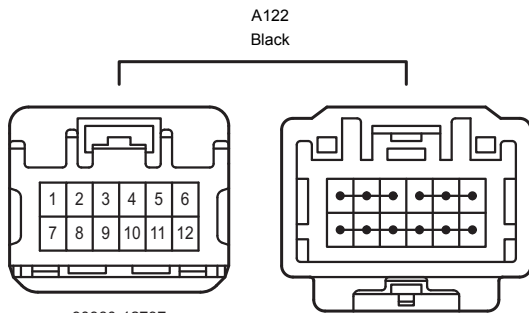


90980-12737

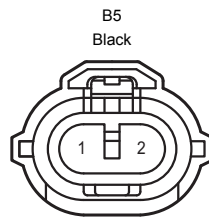


82824-60460

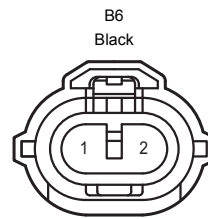

82824-60460

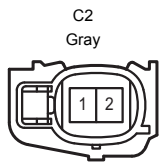


90980-11875

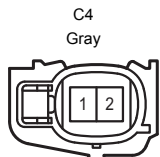


90980-11875



90980-11885

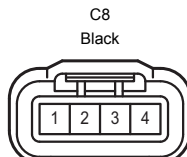


90980-11885

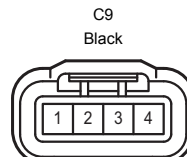


90980-11885



90980-11885

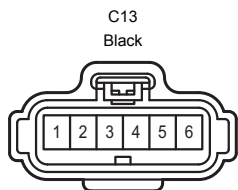

90980-11858

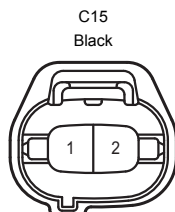

90980-11156



90980-11162