

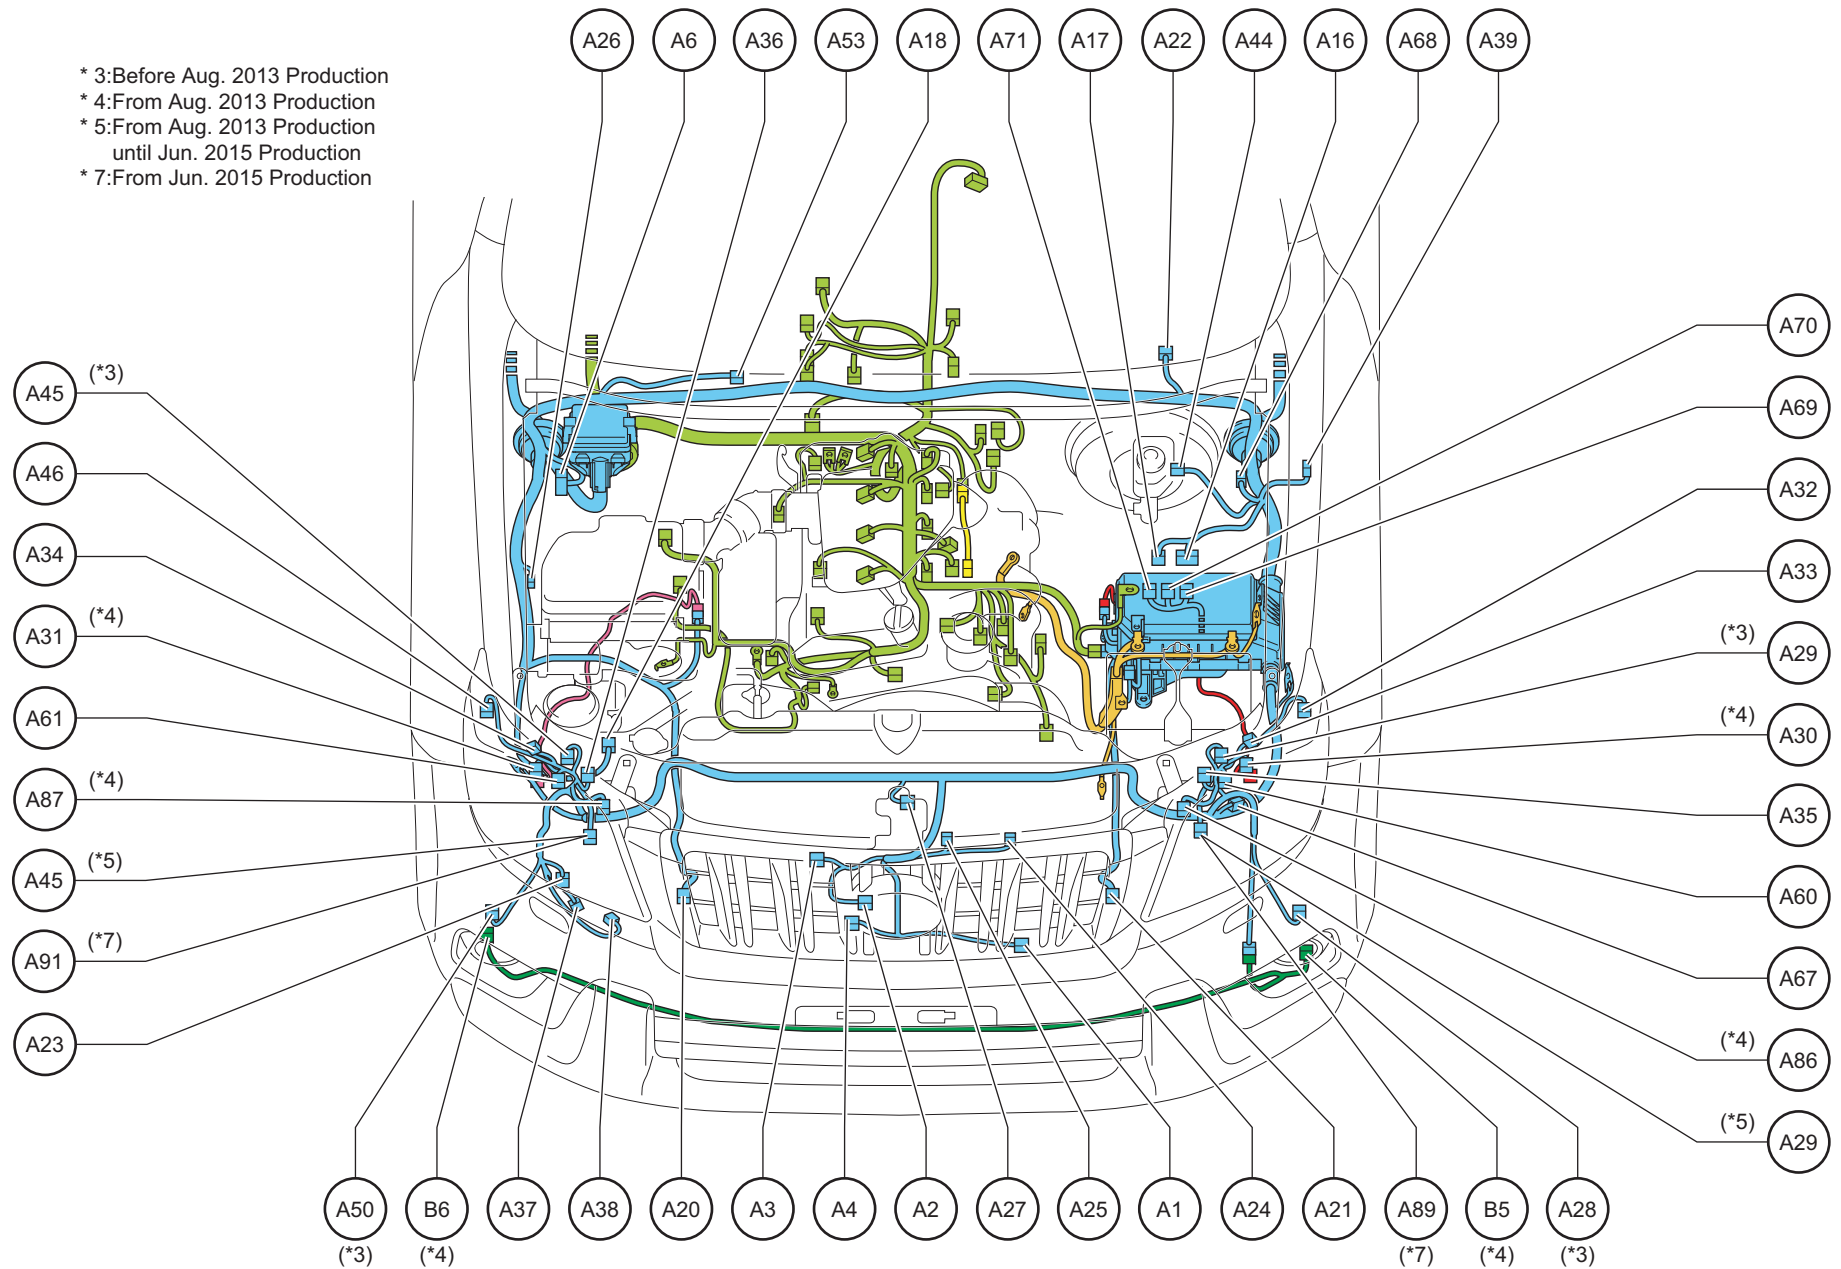
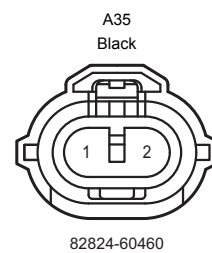
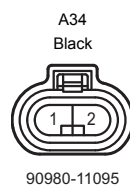
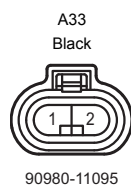
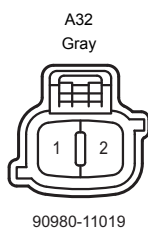
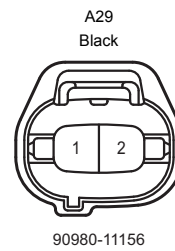
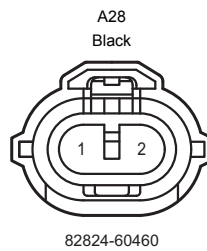
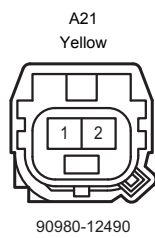
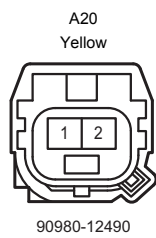
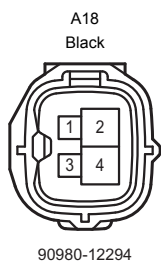
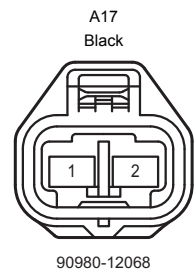
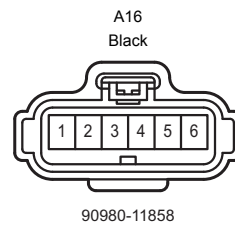
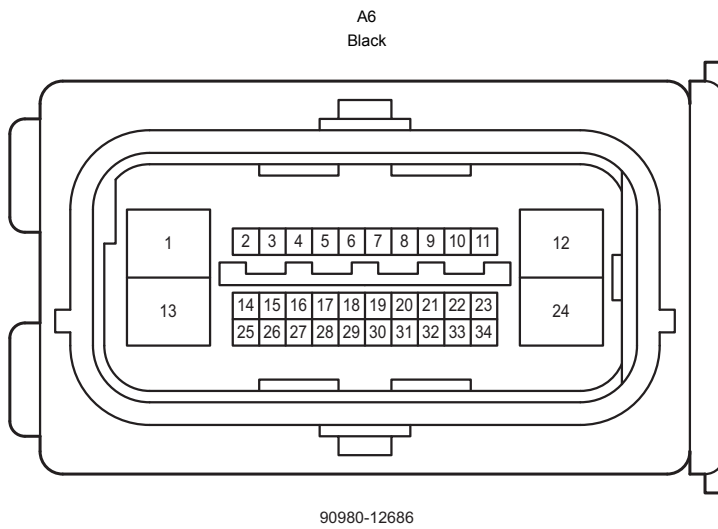


Position of Parts in Engine Compartment (LHD 2TR-FE) (Before Aug. 2017 Production)

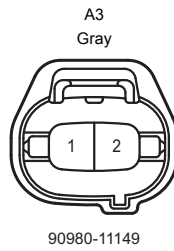

A	1	Ambient Temperature Sensor
A	2	A/C Pressure Sensor
A	3	No. 1 Pressure Switch
A	4	Condenser Fan Motor (With Shroud Blower Assembly)
A	6	Brake Actuator Assembly
A	16	Air Injection Control Driver
A	17	Air Injection Control Driver
A	18	Inlet Air Pump
A	20	Front Airbag Sensor RH
A	21	Front Airbag Sensor LH
A	22	Windshield Wiper Motor Assembly
A	23	Windshield Washer Motor and Pump Assembly
A	24	Low Pitched Horn Assembly
A	25	High Pitched Horn Assembly
A	26	Security Horn Assembly
A	27	Engine Hood Courtesy Switch
A	28	Fog Light Assembly LH
A	29	Headlight Assembly LH
A	30	Headlight Assembly LH
A	31	Headlight Assembly RH
A	32	Headlight Assembly LH
A	33	Headlight Assembly LH
A	34	Headlight Assembly RH
A	35	Headlight Assembly LH
A	36	Headlight Assembly RH
A	37	Headlight Cleaner Motor and Pump Assembly
A	38	Headlight Cleaner Control Relay
A	39	Wireless Door Lock Buzzer
A	44	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A	45	Headlight Assembly RH
A	46	Headlight Assembly RH
A	50	Fog Light Assembly RH
A	53	Front Wiper Deicer (Windshield Glass)
A	60	Headlight Assembly LH
A	61	Headlight Assembly RH
A	67	Junction Connector
A	68	Junction Connector
A	69	Junction Connector
A	70	Junction Connector
A	71	Junction Connector
A	86	Headlight Assembly LH
A	87	Headlight Assembly RH
A	89	Headlight Assembly LH
A	91	Headlight Assembly RH
B	5	Fog Light Assembly LH
B	6	Fog Light Assembly RH

Position of Parts in Engine Compartment (LHD 2TR-FE) (Before Aug. 2017 Production)

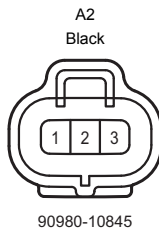

Position of Parts in Engine Compartment (LHD 2TR-FE) (Before Aug. 2017 Production)

