

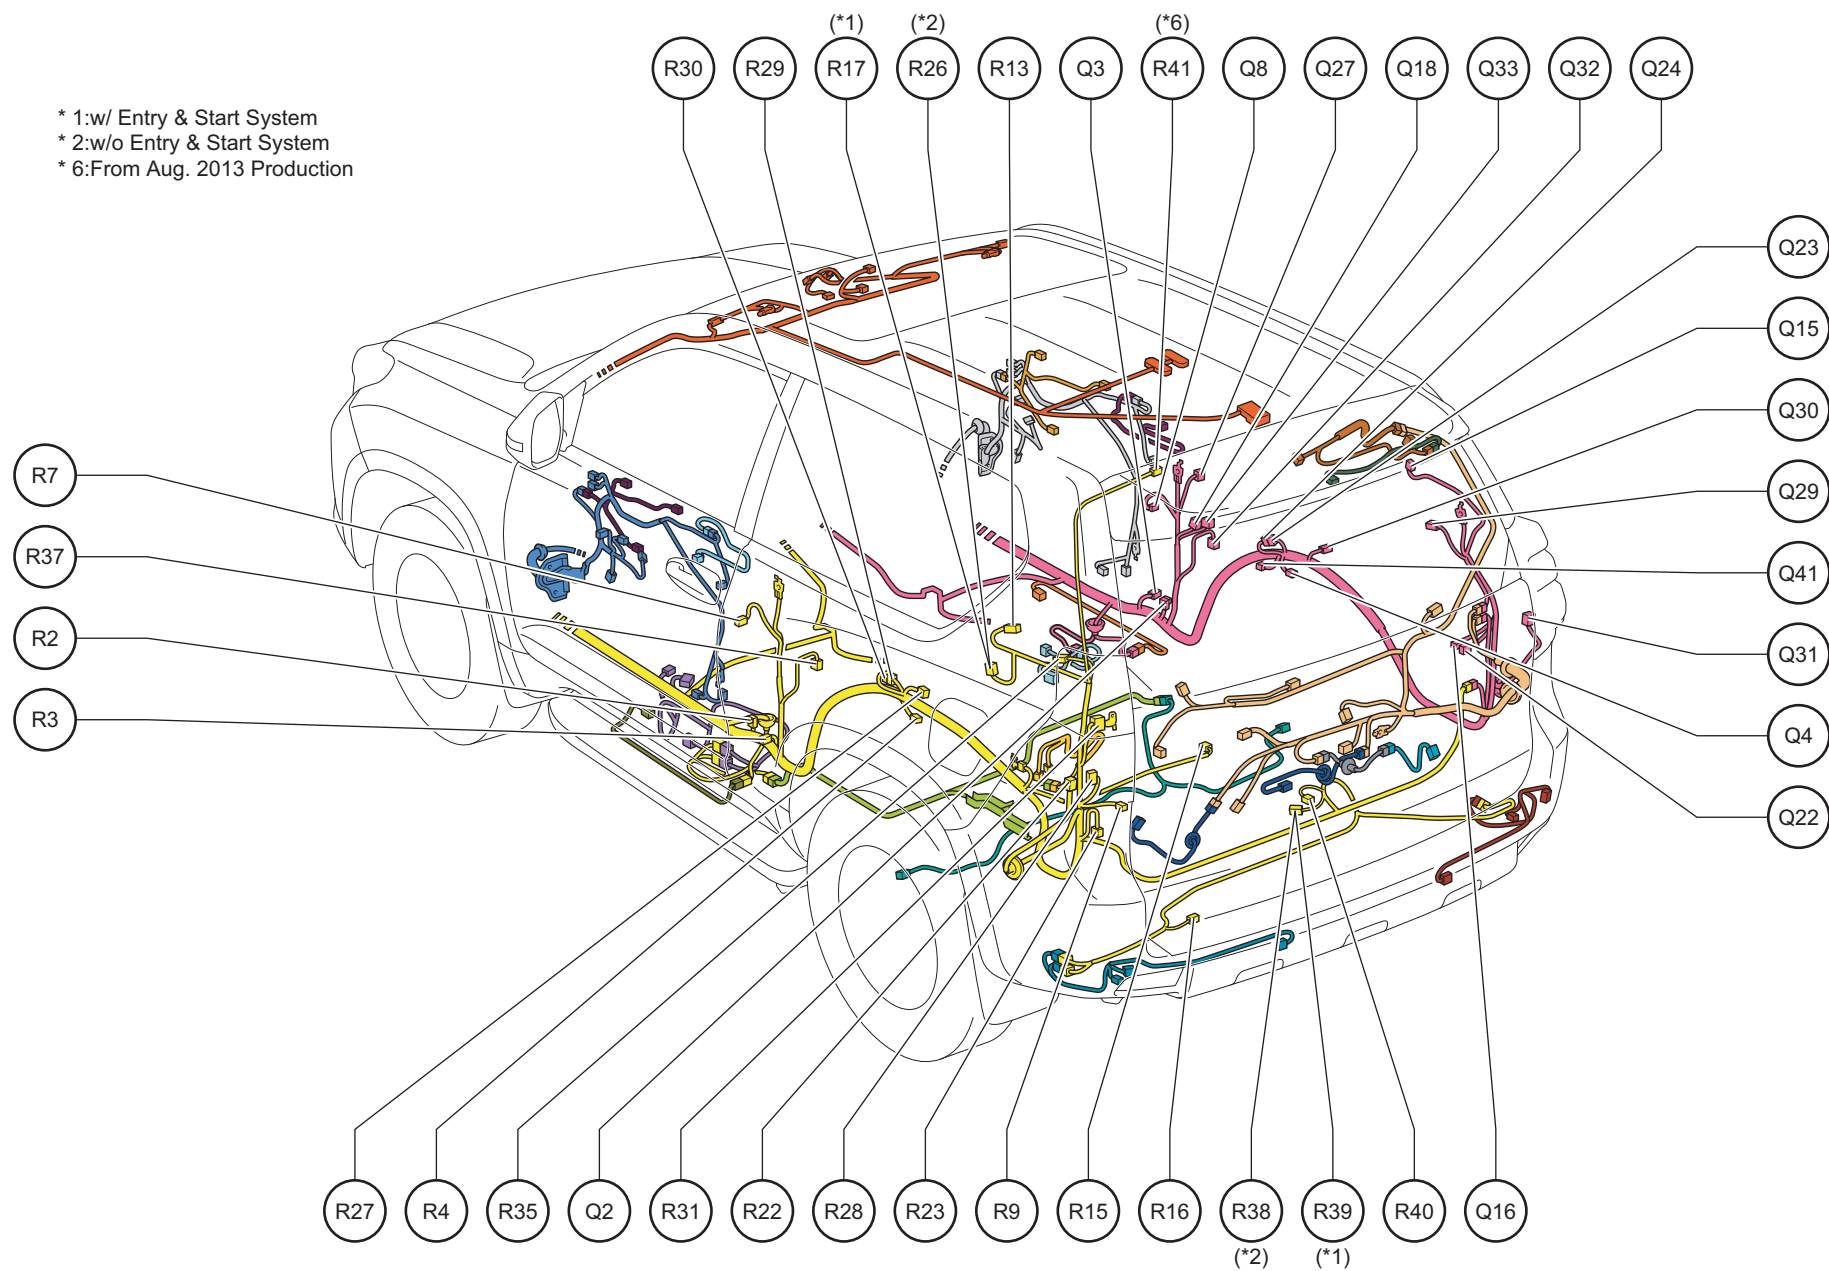
 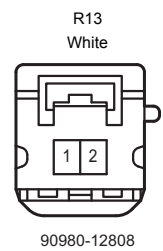
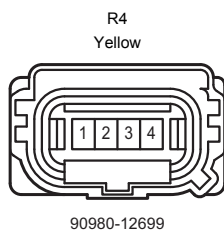
 
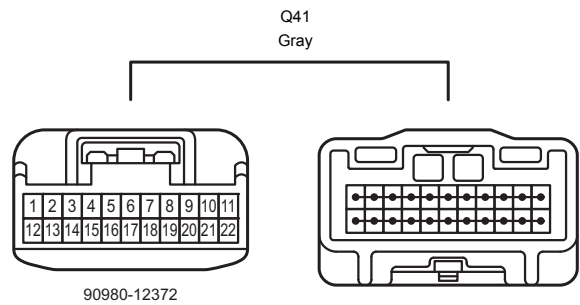

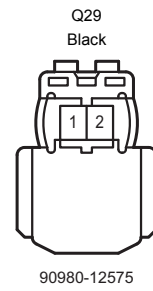
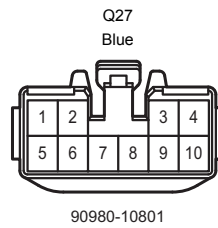
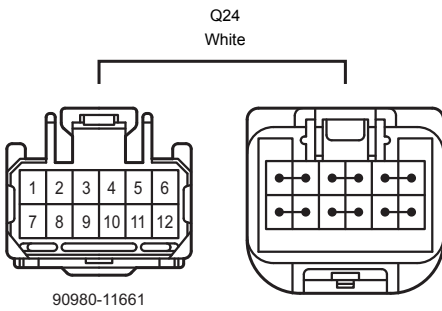
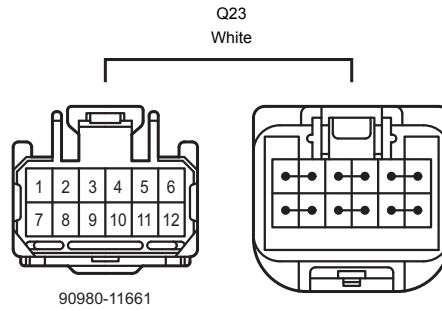
 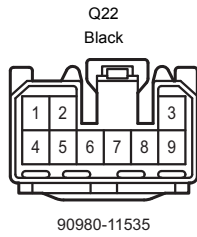
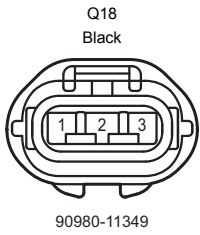

 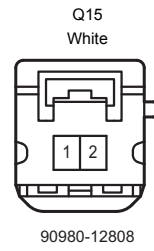


Position of Parts in Body (LHD 3-Door) (Before Aug. 2017 Production)

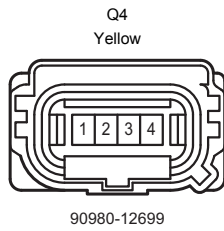


Q	2	Front Seat Outer Belt Assembly RH
Q	3	Front Seat Outer Belt Assembly RH
Q	4	Rear Side Airbag Sensor Assembly RH
Q	8	Front Door Courtesy Light Switch Assembly RH
Q	15	Rear Header Speaker Assembly RH
Q	16	Rear Power Point Socket Assembly
Q	18	Theft Warning Siren Assembly
Q	22	Power Outlet Socket
Q	23	Junction Connector
Q	24	Junction Connector
Q	27	Voltage Inverter Assembly
Q	29	Curtain Shield Airbag Assembly RH
Q	30	No. 1 Speaker with Box Assembly
Q	31	Rear Combination Light Assembly RH
Q	32	Rear Speaker Set RH
Q	33	Theft Warning Siren Assembly
Q	41	Junction Connector
R	2	Front Seat Outer Belt Assembly LH
R	3	Front Seat Outer Belt Assembly LH
R	4	Rear Side Airbag Sensor Assembly LH
R	7	Front Door Courtesy Light Switch Assembly LH
R	9	Back Door Courtesy Light Switch Assembly
R	13	Rear Header Speaker Assembly LH
R	15	No. 3 Indoor Electrical Key Antenna Assembly
R	16	Outside Luggage Electrical Key Antenna
R	17	Door Control Receiver
R	22	Rear Combination Light Assembly LH
R	23	Trailer Socket
R	26	Door Control Receiver
R	27	Junction Connector
R	28	Junction Connector
R	29	Junction Connector
R	30	Junction Connector
R	31	Junction Connector
R	35	Curtain Shield Airbag Assembly LH
R	37	Rear Speaker Set LH
R	38	Fuel Pump
R	39	Fuel Tank Sub-Assembly
R	40	Fuel Sender Gauge Assembly
R	41	Tire Pressure Warning ECU and Receiver

Position of Parts in Body (LHD 3-Door) (Before Aug. 2017 Production)



Position of Parts in Body (LHD 3-Door) (Before Aug. 2017 Production)

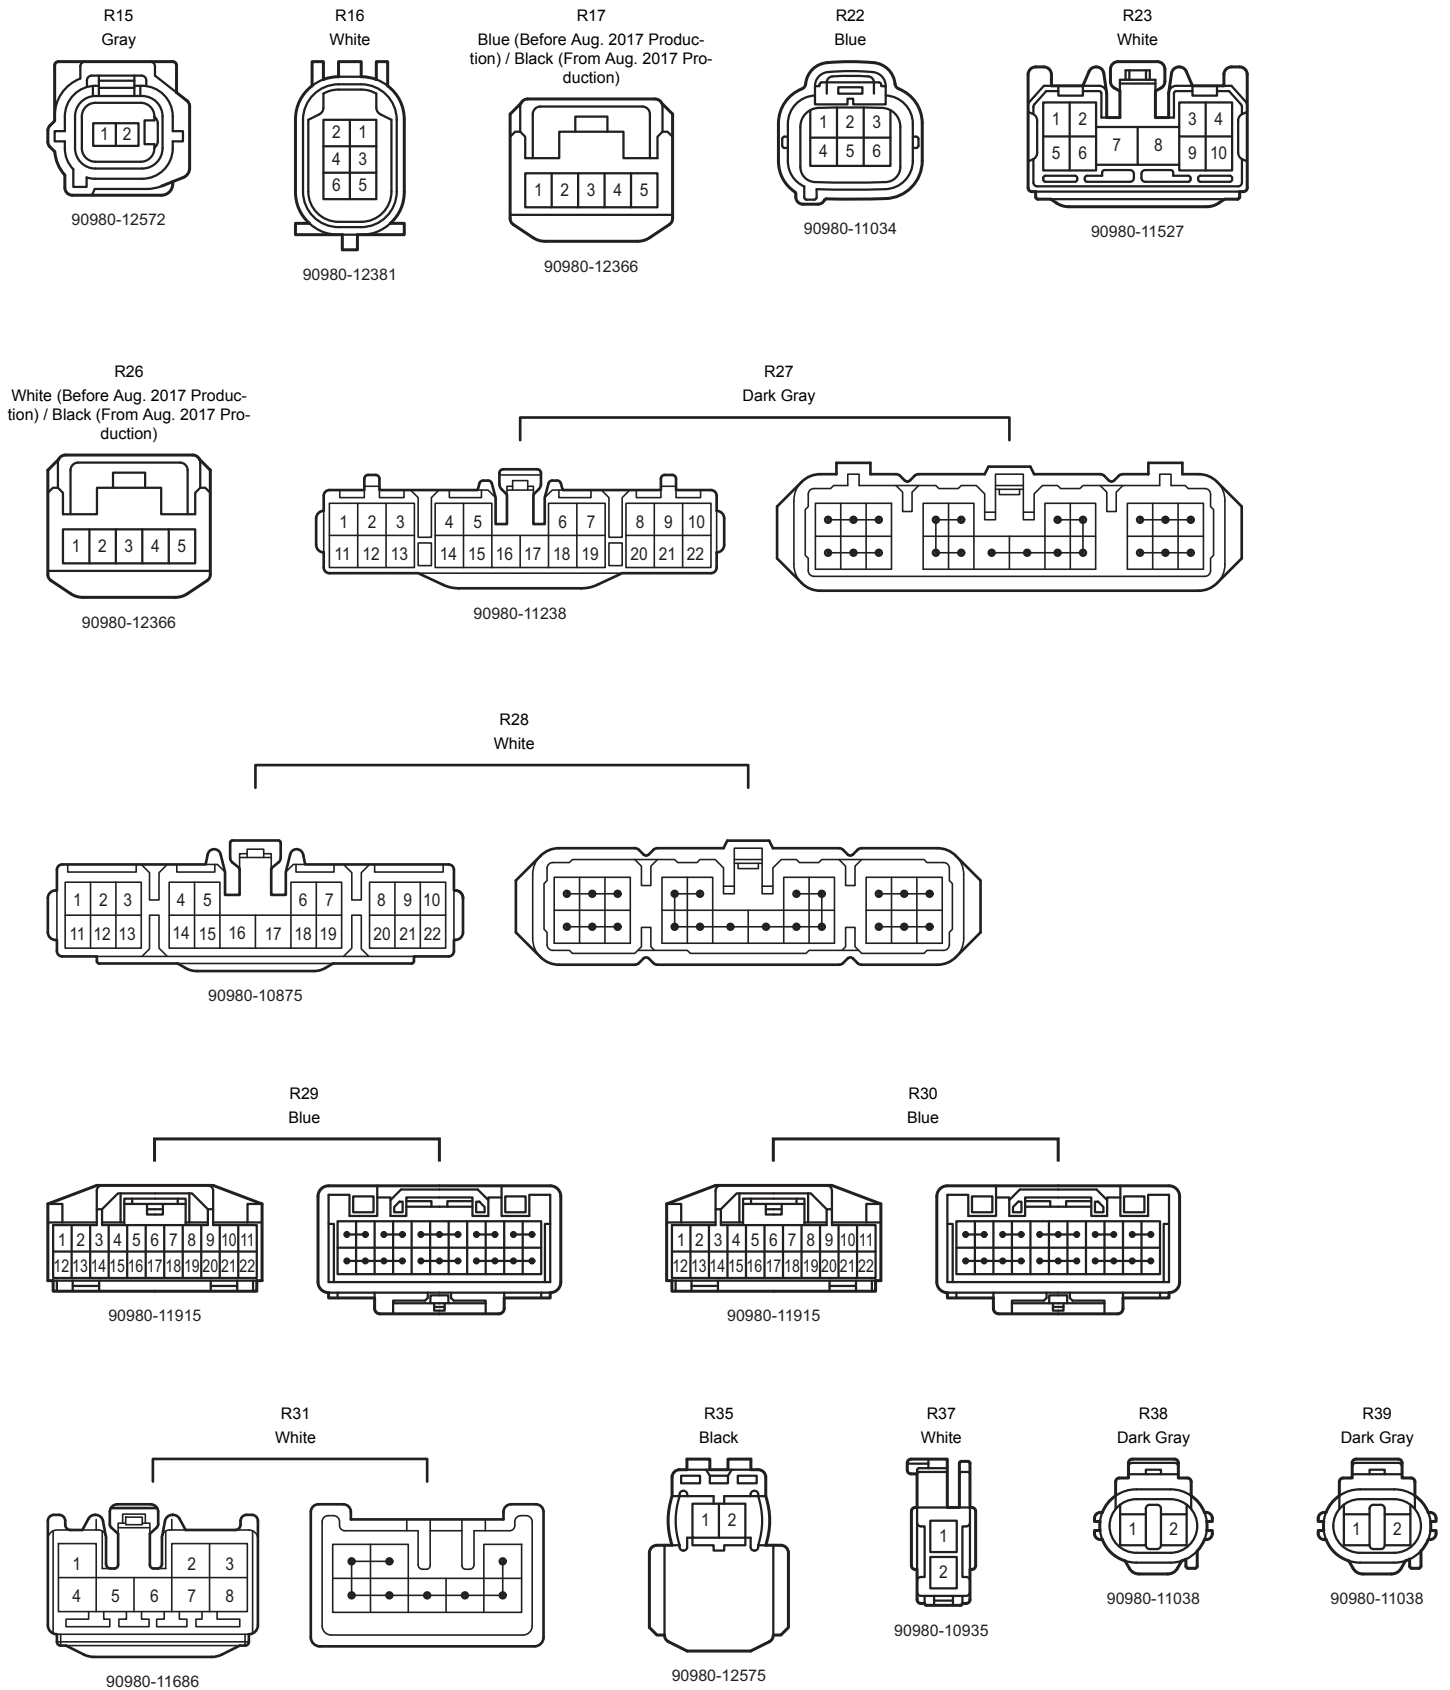

R40
Black



82890-32030

R41
Black (Before Aug. 2017 Production) / White (From Aug. 2017 Production)



90980-12552