



Position of Parts in Body (LHD 5-Door) (Before Aug. 2017 Production)

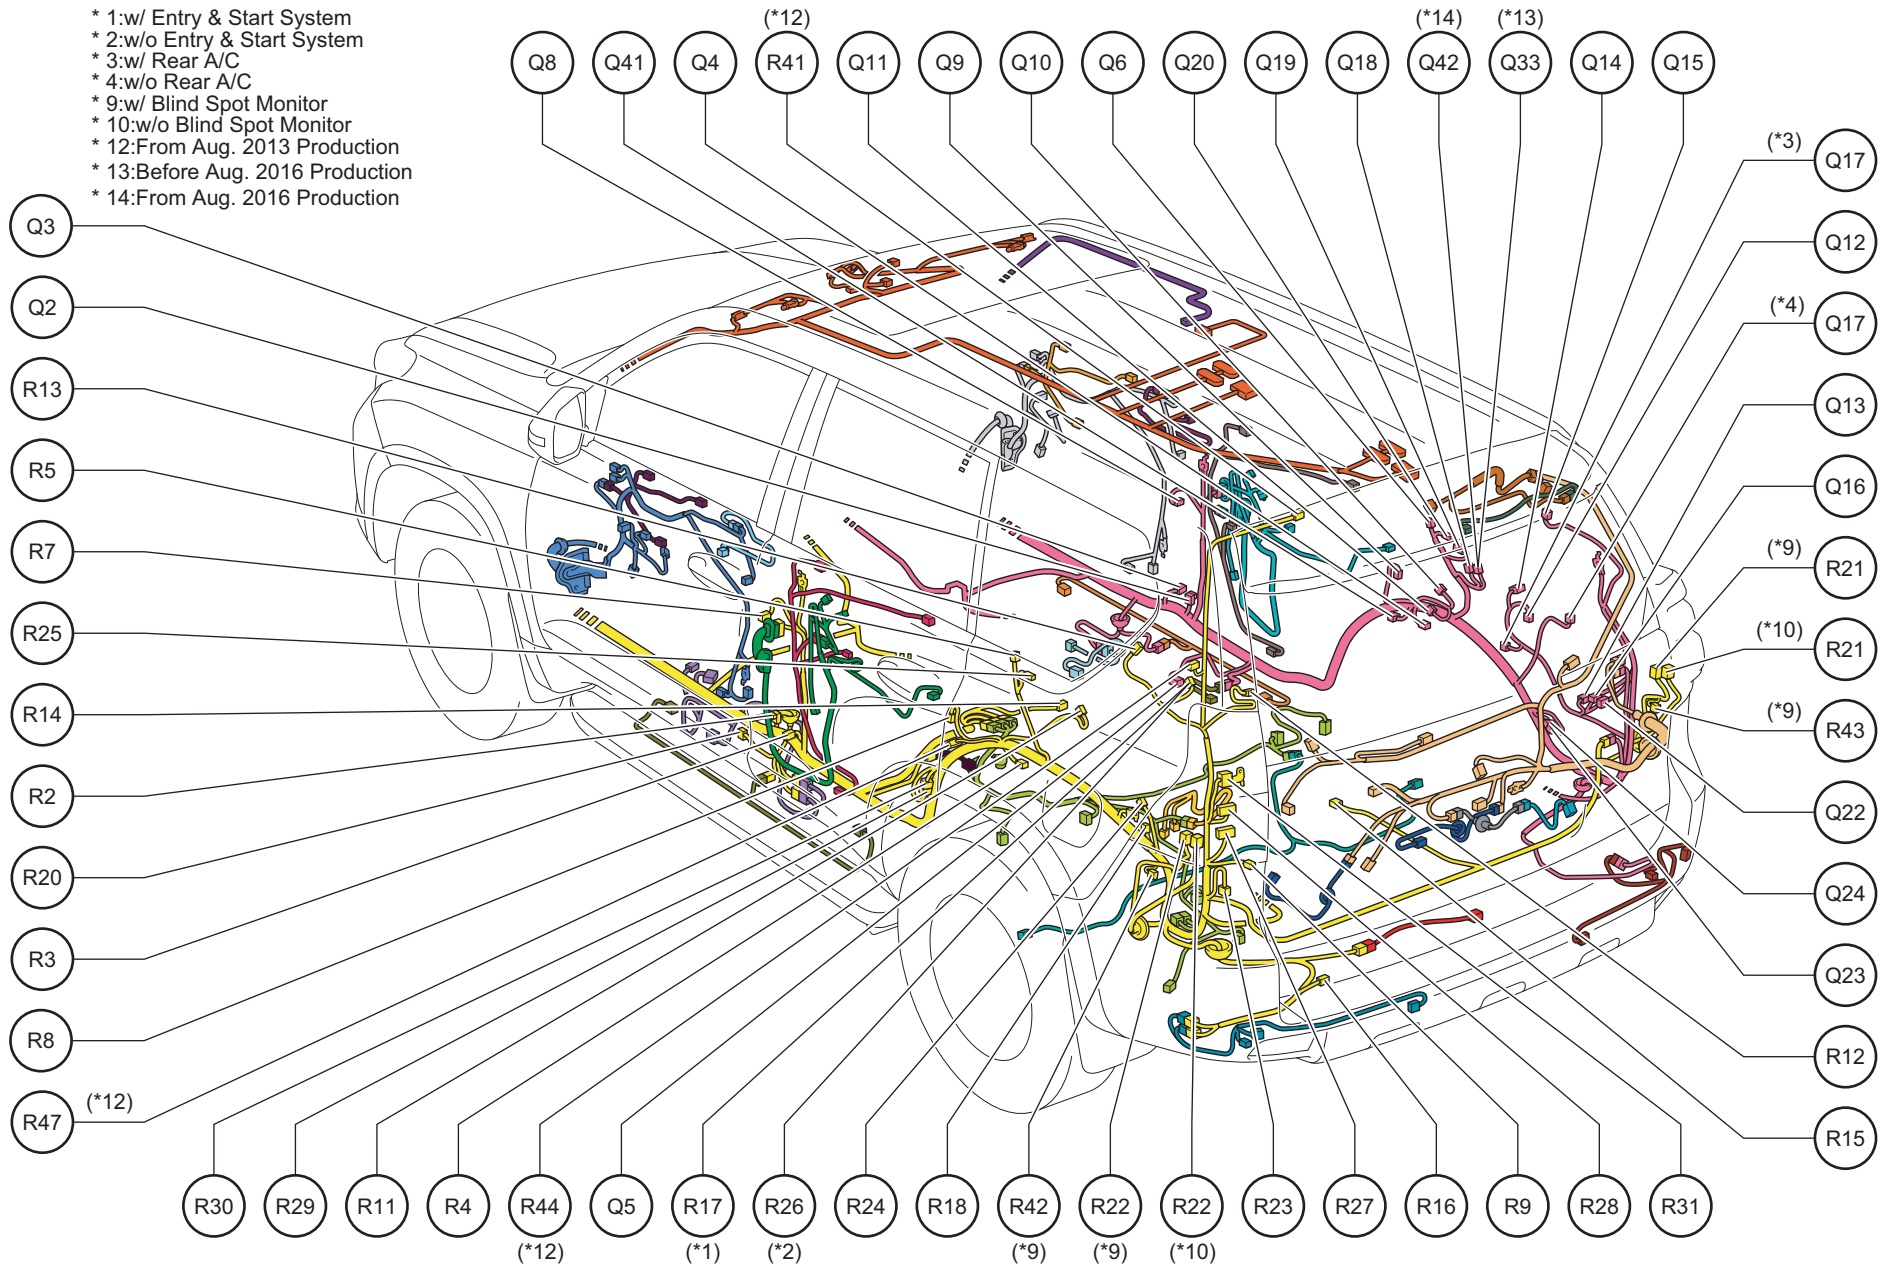

Q	2	Front Seat Outer Belt Assembly RH
Q	3	Front Seat Outer Belt Assembly RH
Q	4	Rear Side Airbag Sensor Assembly RH
Q	5	Rear Floor Side Airbag Sensor
Q	6	Curtain Shield Airbag Assembly RH
Q	8	Front Door Courtesy Light Switch Assembly RH
Q	9	Rear Door Courtesy Light Switch Assembly RH
Q	10	Rear Power Seat Switch RH
Q	11	No. 1 Fold Seat Switch Assembly
Q	12	Rear Blower with Fan Motor Sub-Assembly
Q	13	Rear A/C Blower Assembly
Q	14	Rear Blower with Fan Motor Sub-Assembly
Q	15	Rear Header Speaker Assembly RH
Q	16	Rear Power Point Socket Assembly
Q	17	Voltage Inverter Assembly
Q	18	Theft Warning Siren Assembly
Q	19	Rear No. 1 Cooler Thermistor
Q	20	Glass Breakage Sensor RH (Quarter Glass RH)
Q	22	Power Outlet Socket
Q	23	Junction Connector
Q	24	Junction Connector
Q	33	Theft Warning Siren Assembly
Q	41	Junction Connector
Q	42	Theft Warning Siren Assembly
R	2	Front Seat Outer Belt Assembly LH
R	3	Front Seat Outer Belt Assembly LH
R	4	Rear Side Airbag Sensor Assembly LH
R	5	Curtain Shield Airbag Assembly LH
R	7	Front Door Courtesy Light Switch Assembly LH
R	8	Rear Door Courtesy Light Switch Assembly LH
R	9	Back Door Courtesy Light Switch Assembly
R	11	Rear Power Seat Switch LH
R	12	No. 2 Fold Seat Switch Assembly
R	13	Rear Header Speaker Assembly LH
R	14	No. 2 Indoor Electrical Key Antenna Assembly
R	15	No. 3 Indoor Electrical Key Antenna Assembly
R	16	Outside Luggage Electrical Key Antenna
R	17	Door Control Receiver
R	18	Rear Acceleration Sensor Assembly
R	20	Stabilizer Control with Accumulator Housing Assembly
R	21	Rear Combination Light Assembly RH
R	22	Rear Combination Light Assembly LH
R	23	Trailer Socket
R	24	No. 1 Speaker with Box Assembly
R	25	Glass Breakage Sensor LH (Quarter Glass LH)
R	26	Door Control Receiver
R	27	Junction Connector
R	28	Junction Connector
R	29	Junction Connector
R	30	Junction Connector
R	31	Junction Connector
R	41	Tire Pressure Warning ECU and Receiver

- R 42 Blind Spot Monitor Sensor LH
- R 43 Blind Spot Monitor Sensor RH
- R 44 Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
- R 47 Junction Connector

 
Position of Parts in Body (LHD 5-Door) (Before Aug. 2017 Production)




90980-12452



90980-10860

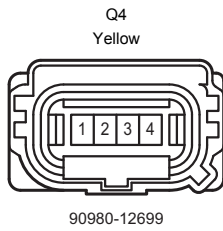

90980-12699

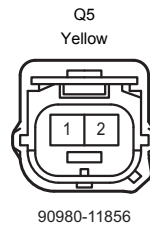

90980-11856




90980-11864




90980-10871




90980-10871

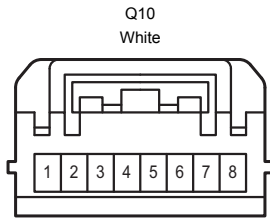

90980-12550

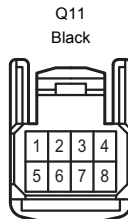


90980-12551

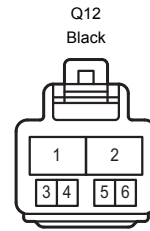


90980-10910



90980-12551

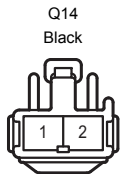


90980-10916

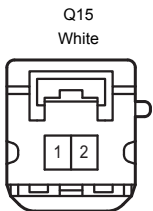


90980-12808




90980-12498

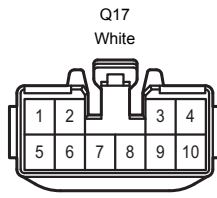


90980-10801

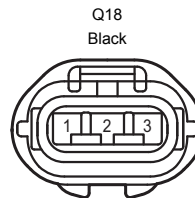


90980-11349

 


90980-11918

 


90980-10825

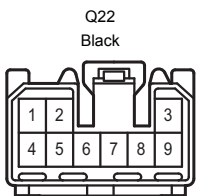

90980-11535

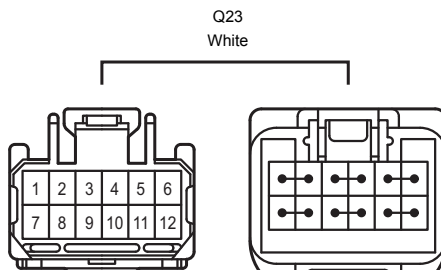


90980-11661

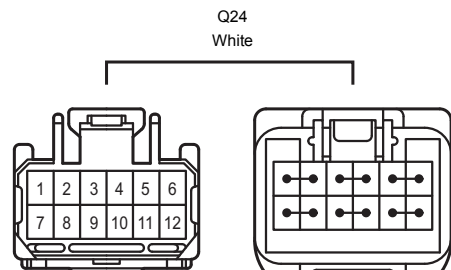


90980-11661




82824-53030

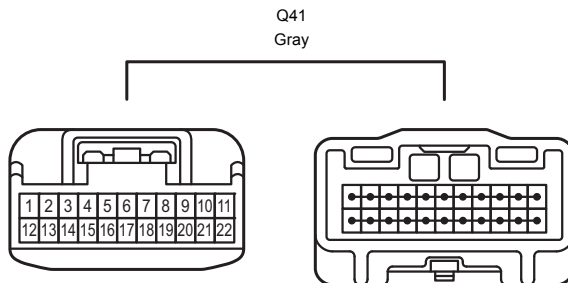

90980-12372

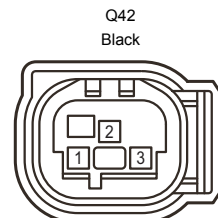

90080-98237

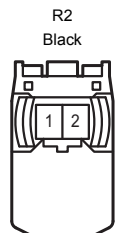


90980-12452

Position of Parts in Body (LHD 5-Door) (Before Aug. 2017 Production)



90980-10860

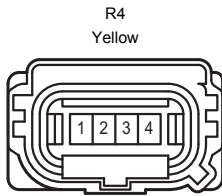

90980-12699



90980-11864




90980-10871



90980-10871




90980-10871

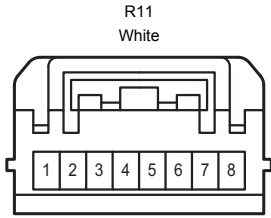

90980-12550




90980-12551

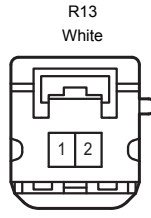

90980-12808




90980-12572

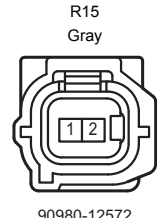


90980-12572




90980-12381

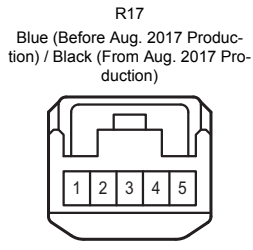


90980-12366

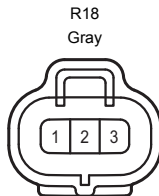


90980-10845

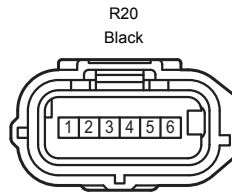


90980-12303

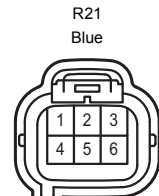


90980-11034

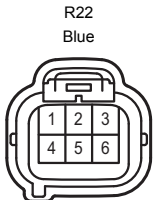


90980-11034

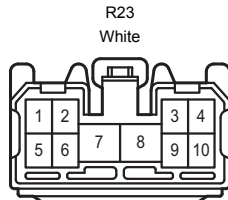


90980-11527

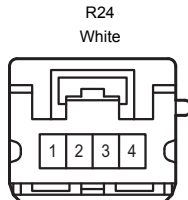

90980-12733

 


90980-10825

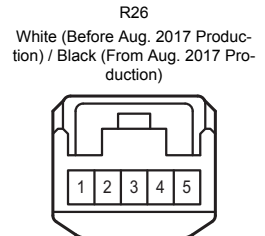


90980-12366

 R27
Dark Gray




90980-11238

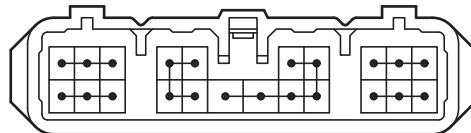


Position of Parts in Body (LHD 5-Door) (Before Aug. 2017 Production)


R28
White

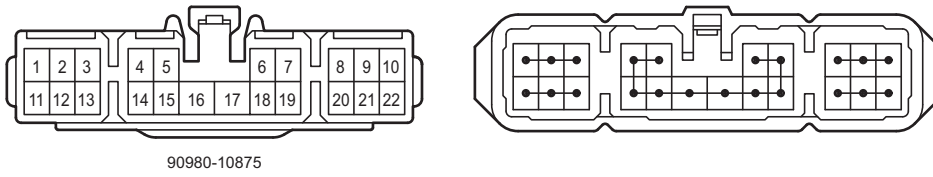


R29
Blue

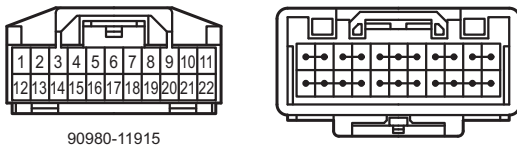


R30
Blue

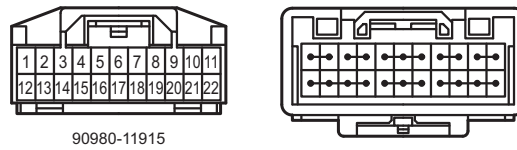


R31
White

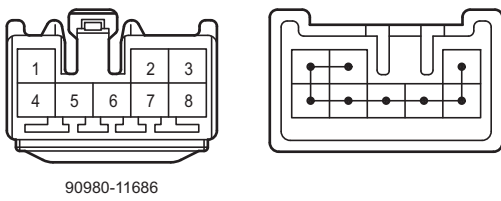


R41
Black (Before Aug. 2017 Production) / White (From Aug. 2017 Production)

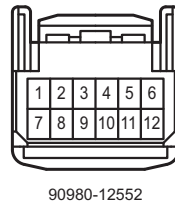

R42
Black

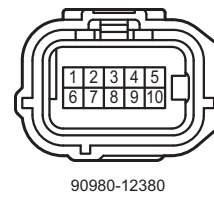

R43
Black

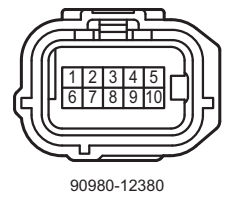

R44
Black



R47
Gray

