

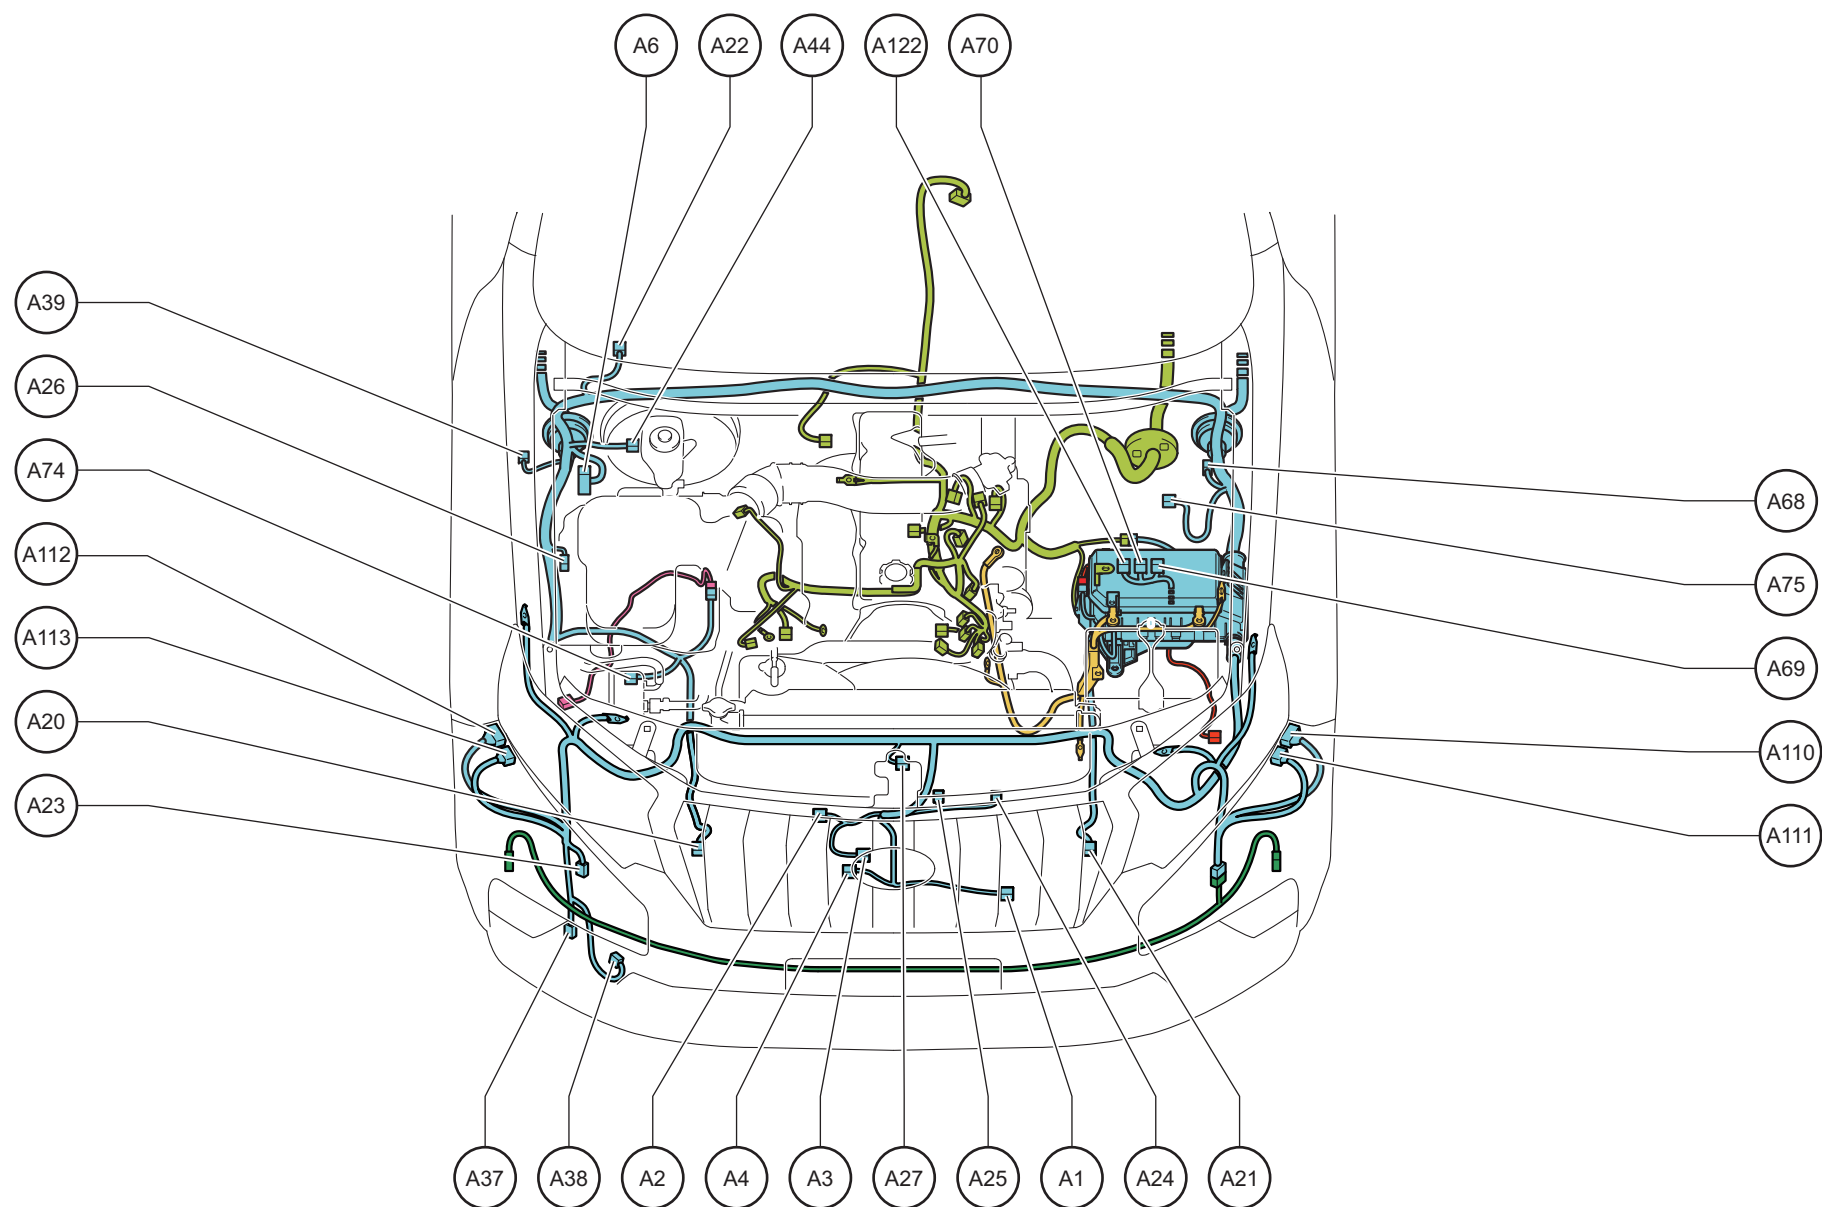
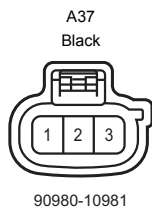
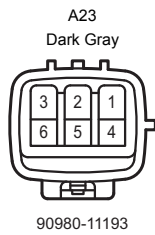
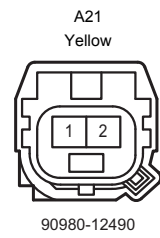
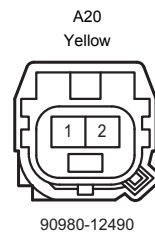
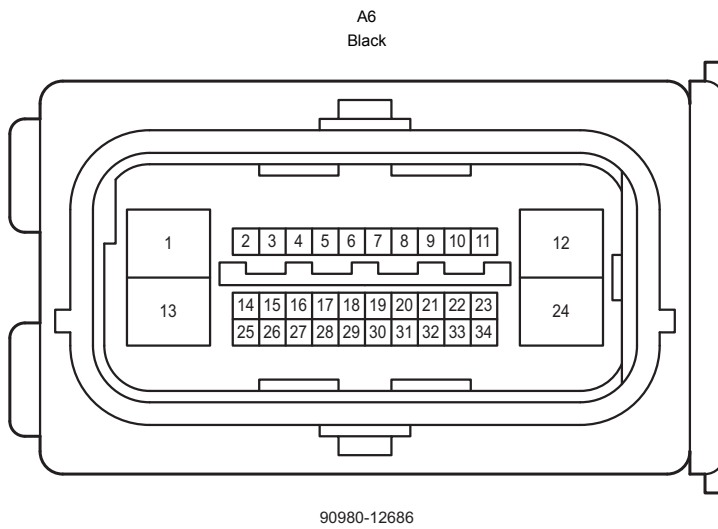


Position of Parts in Engine Compartment (RHD 5L-E) (From Aug. 2017 Production)

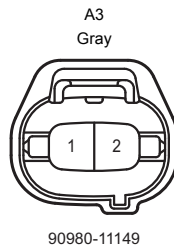

- A 1 Ambient Temperature Sensor
- A 2 A/C Pressure Sensor
- A 3 No. 1 Pressure Switch
- A 4 Condenser Fan Motor (With Shroud Blower Assembly)
- A 6 Brake Actuator Assembly
- A 20 Front Airbag Sensor RH
- A 21 Front Airbag Sensor LH
- A 22 Windshield Wiper Motor Assembly
- A 23 Windshield Washer Motor and Pump Assembly
- A 24 Low Pitched Horn Assembly
- A 25 High Pitched Horn Assembly
- A 26 Security Horn Assembly
- A 27 Engine Hood Courtesy Switch
- A 37 Headlight Cleaner Motor and Pump Assembly
- A 38 Headlight Cleaner Control Relay
- A 39 Wireless Door Lock Buzzer
- A 44 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 68 Junction Connector
- A 69 Junction Connector
- A 70 Junction Connector
- A 74 Vacuum Warning Switch Assembly
- A 75 Level Warning Switch (Fuel Filter Assembly)
- A110 Headlight Assembly LH
- A111 Headlight Assembly LH
- A112 Headlight Assembly RH
- A113 Headlight Assembly RH
- A122 Junction Connector

Position of Parts in Engine Compartment (RHD 5L-E) (From Aug. 2017 Production)

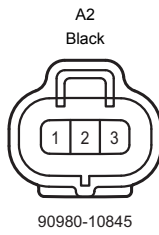

Position of Parts in Engine Compartment (RHD 5L-E) (From Aug. 2017 Production)

