


Position of Parts in Engine Compartment (RHD 5L-E) (Before Aug. 2017 Production)

* 4: Before Jun. 2015 Production

* 5: From Jun. 2015 Production

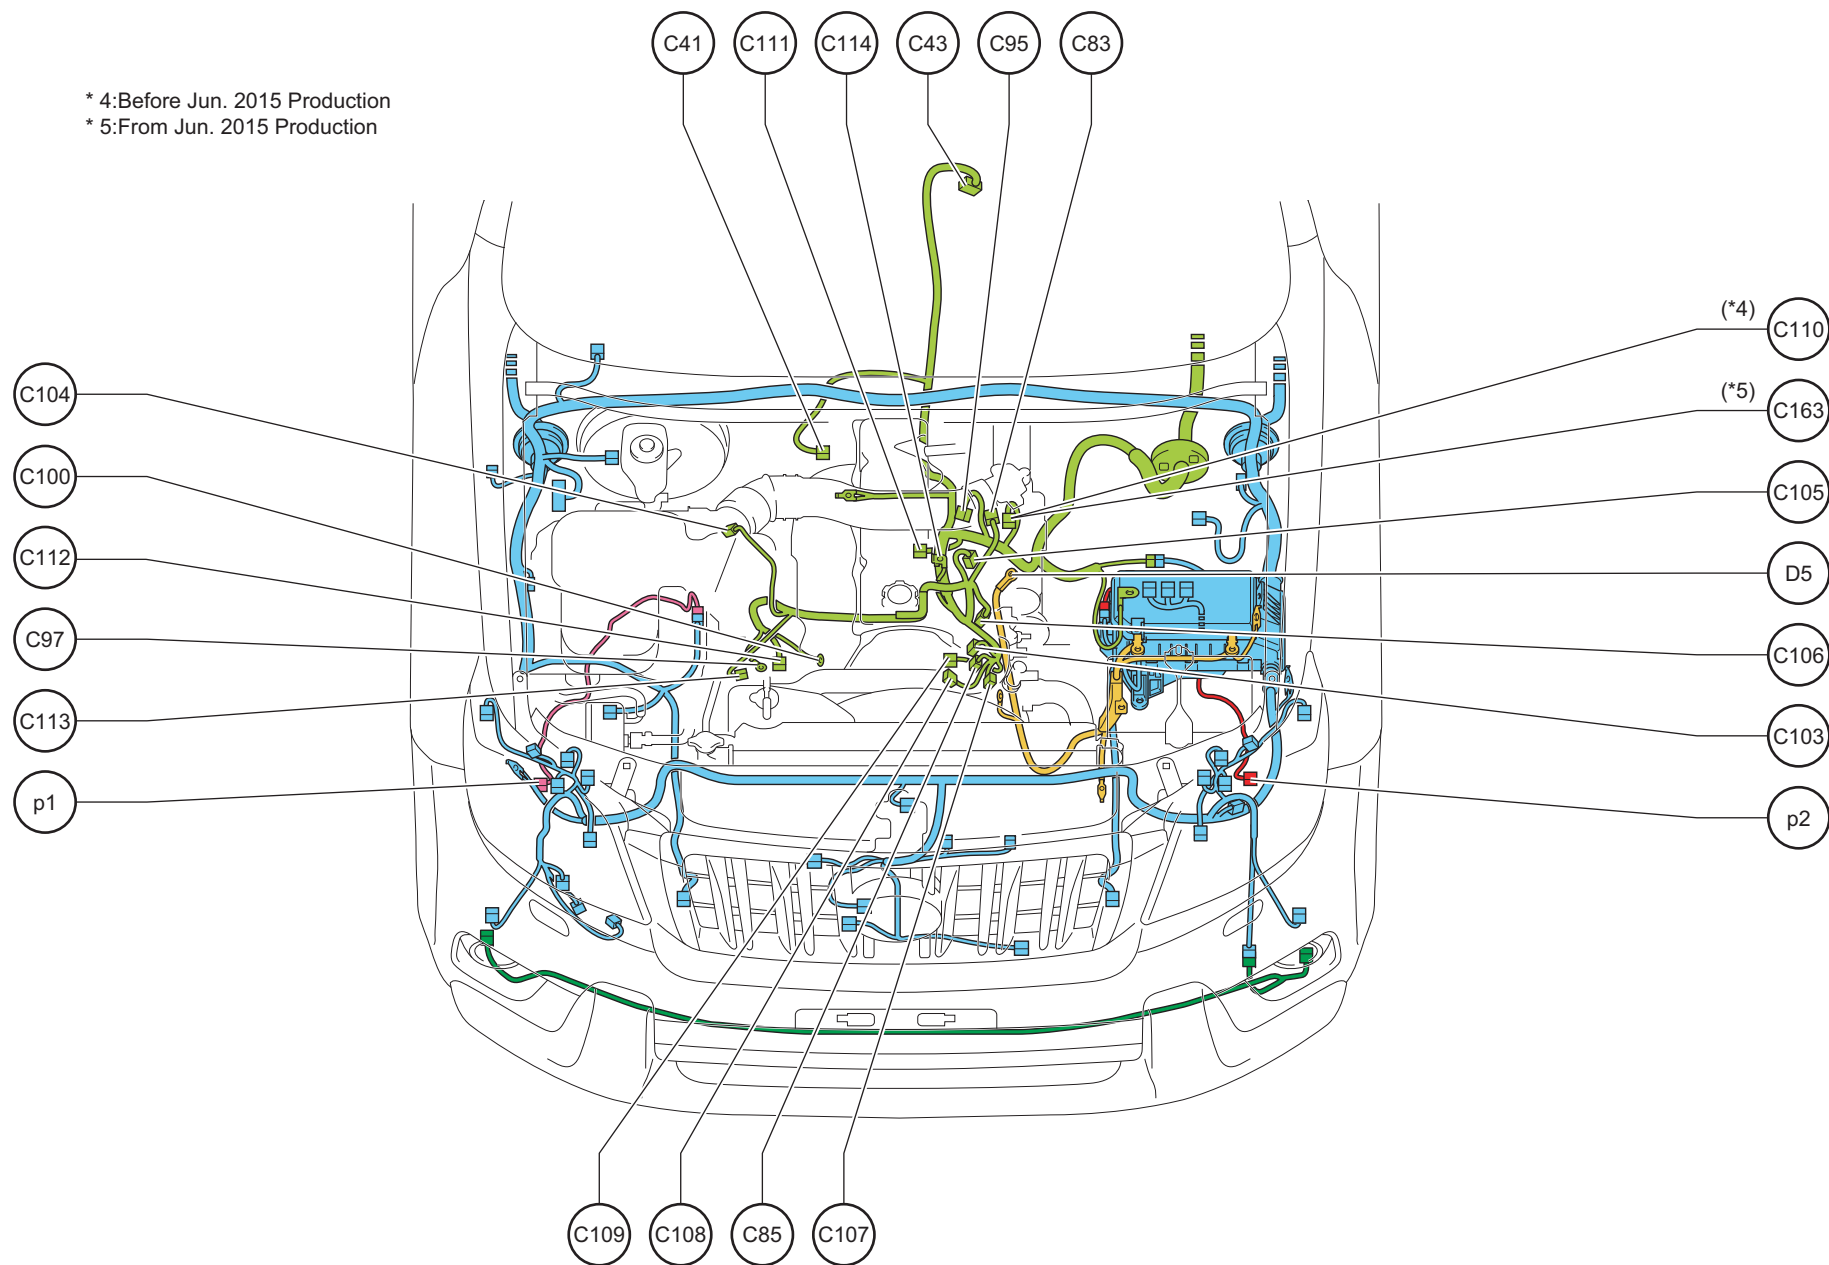

- C 41 Back-Up Light Switch Assembly
- C 43 Transfer Shift Actuator Assembly
- C 83 Vacuum Sensor (Diesel Turbo Pressure Sensor)
- C 85 Fuel Temperature Sensor
- C 95 Starter Assembly
- C 97 Generator Assembly
- C100 Engine Oil Pressure Switch Assembly
- C103 Cam Position Sensor
- C104 Intake Air Temperature Sensor
- C105 Throttle Control Motor
- C106 Spill Control Valve
- C107 Injection Pump
- C108 Timing Control Valve
- C109 Crank Position Sensor
- C110 Throttle Open Switch
- C111 Diesel Engine Coolant Temperature Sensor
- C112 Generator Assembly
- C113 Cooler Compressor Assembly
- C114 Glow Plug Assembly
- C163 Throttle Open Switch
- D 5 Starter Assembly
- p 1 Front Speed Sensor RH
- p 2 Front Speed Sensor LH

Position of Parts in Engine Compartment (RHD 5L-E) (Before Aug. 2017 Production)

