



Position of Parts in Instrument Panel (LHD Front Separate Seat) (Before Aug. 2017 Production)

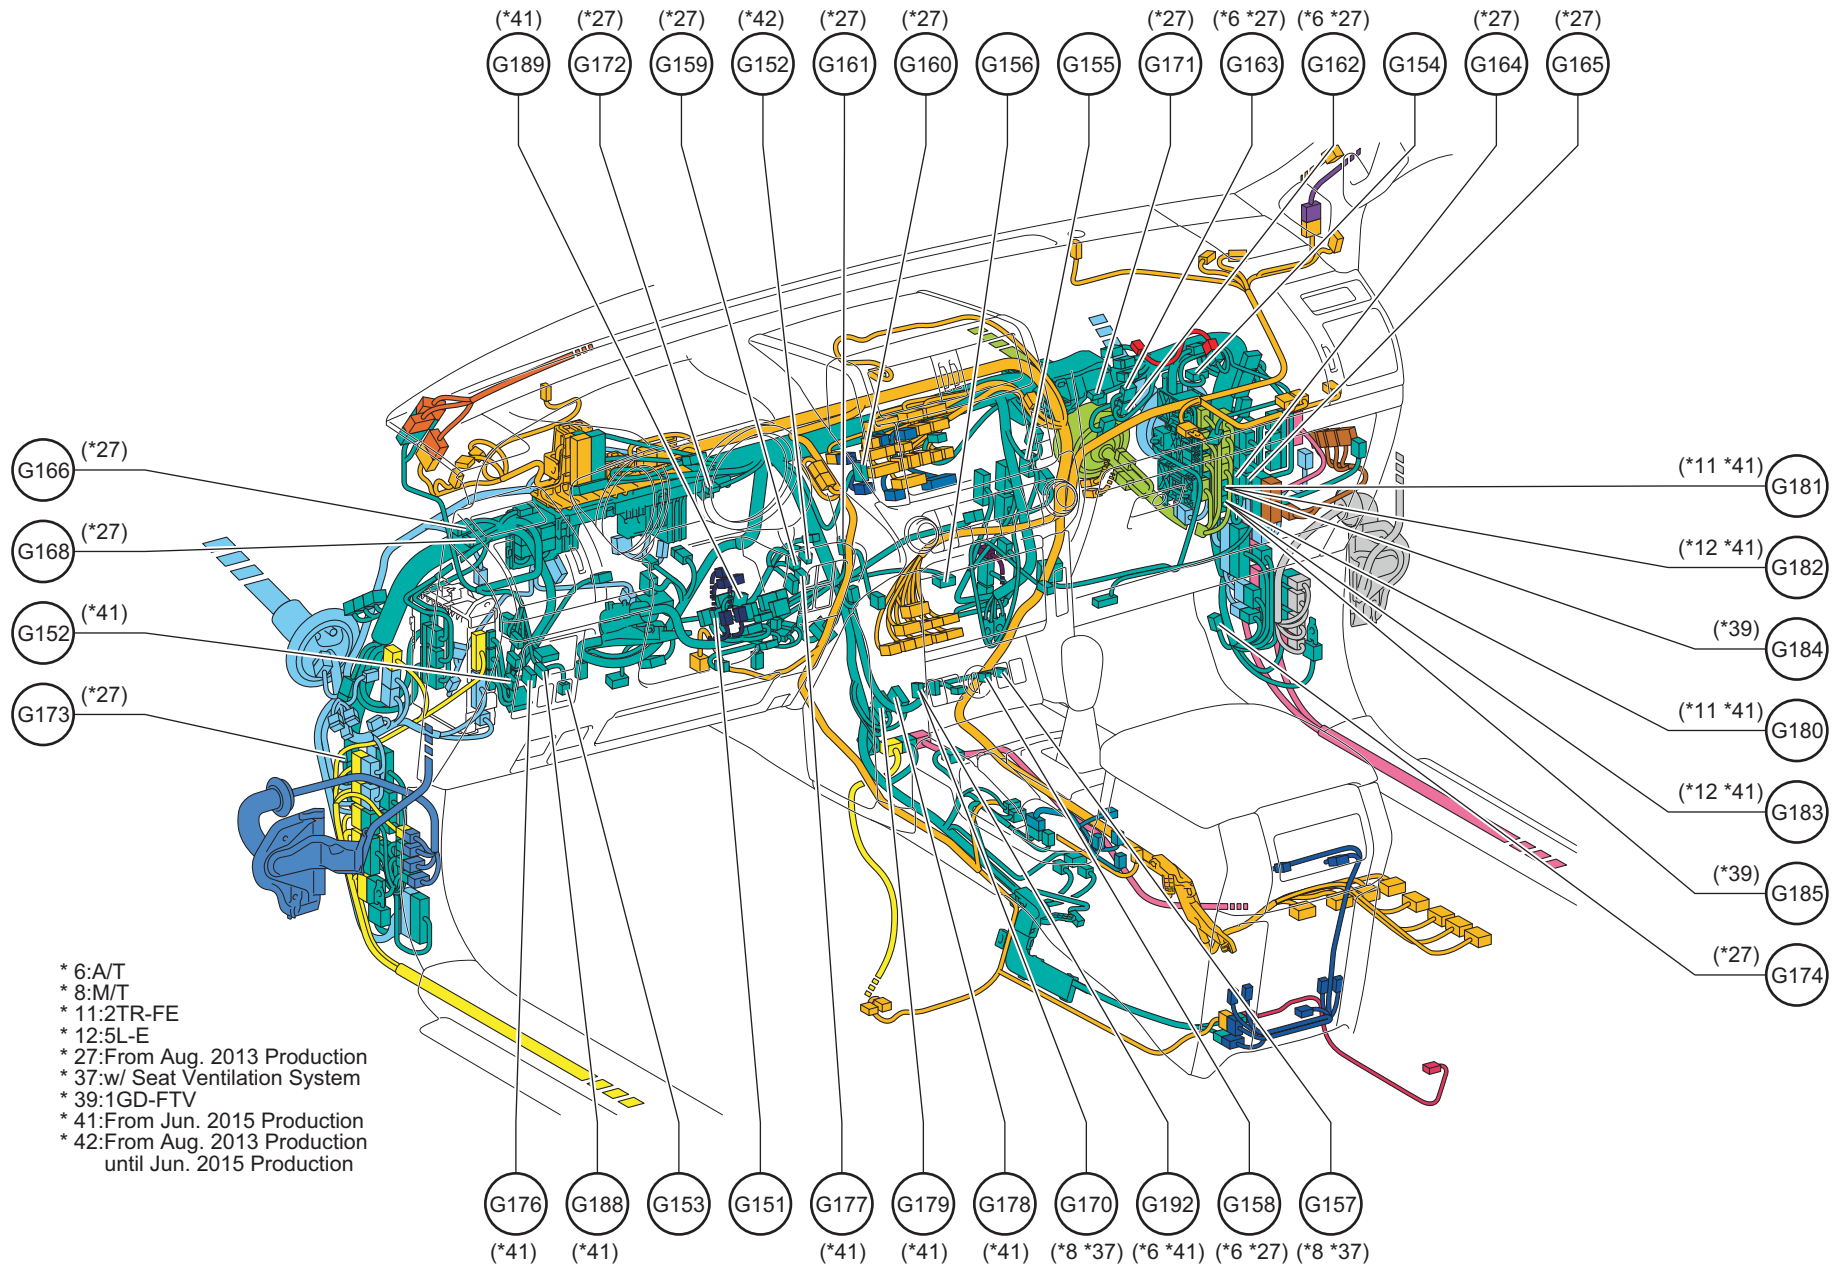

G151	Spiral Cable Sub-Assembly
G152	Steering Heater Switch
G153	Tire Pressure Warning Reset Switch
G154	Clearance Warning ECU Assembly
G155	Network Gateway ECU
G156	Combination Switch Assembly
G157	Refreshing Seat Switch LH
G158	Downhill Assist Control Switch
G159	Pattern Select Switch Assembly
G160	Clearance Warning Indicator Assembly
G161	No. 1 Clearance Warning Buzzer
G162	Driving Support Switch Control ECU
G163	Driving Support Switch Control ECU
G164	Junction Connector
G165	Junction Connector
G166	Junction Connector
G168	Junction Connector
G170	Refreshing Seat Switch RH
G171	Diode (Shift Position No. 1)
G172	Diode (Shift Position No. 2)
G173	Diode (Oil Pressure)
G174	Diode (Viscous Relay)
G176	Idle Up Switch
G177	Heater Switch Assembly
G178	Quick Heater Assembly
G179	Quick Heater Assembly
G180	ECM
G181	ECM
G182	ECM
G183	ECM
G184	ECM
G185	ECM
G188	Room Light Switch Assembly
G189	Transponder Key Coil
G192	Differential Lock Switch

Position of Parts in Instrument Panel (LHD Front Separate Seat) (Before Aug. 2017 Production)

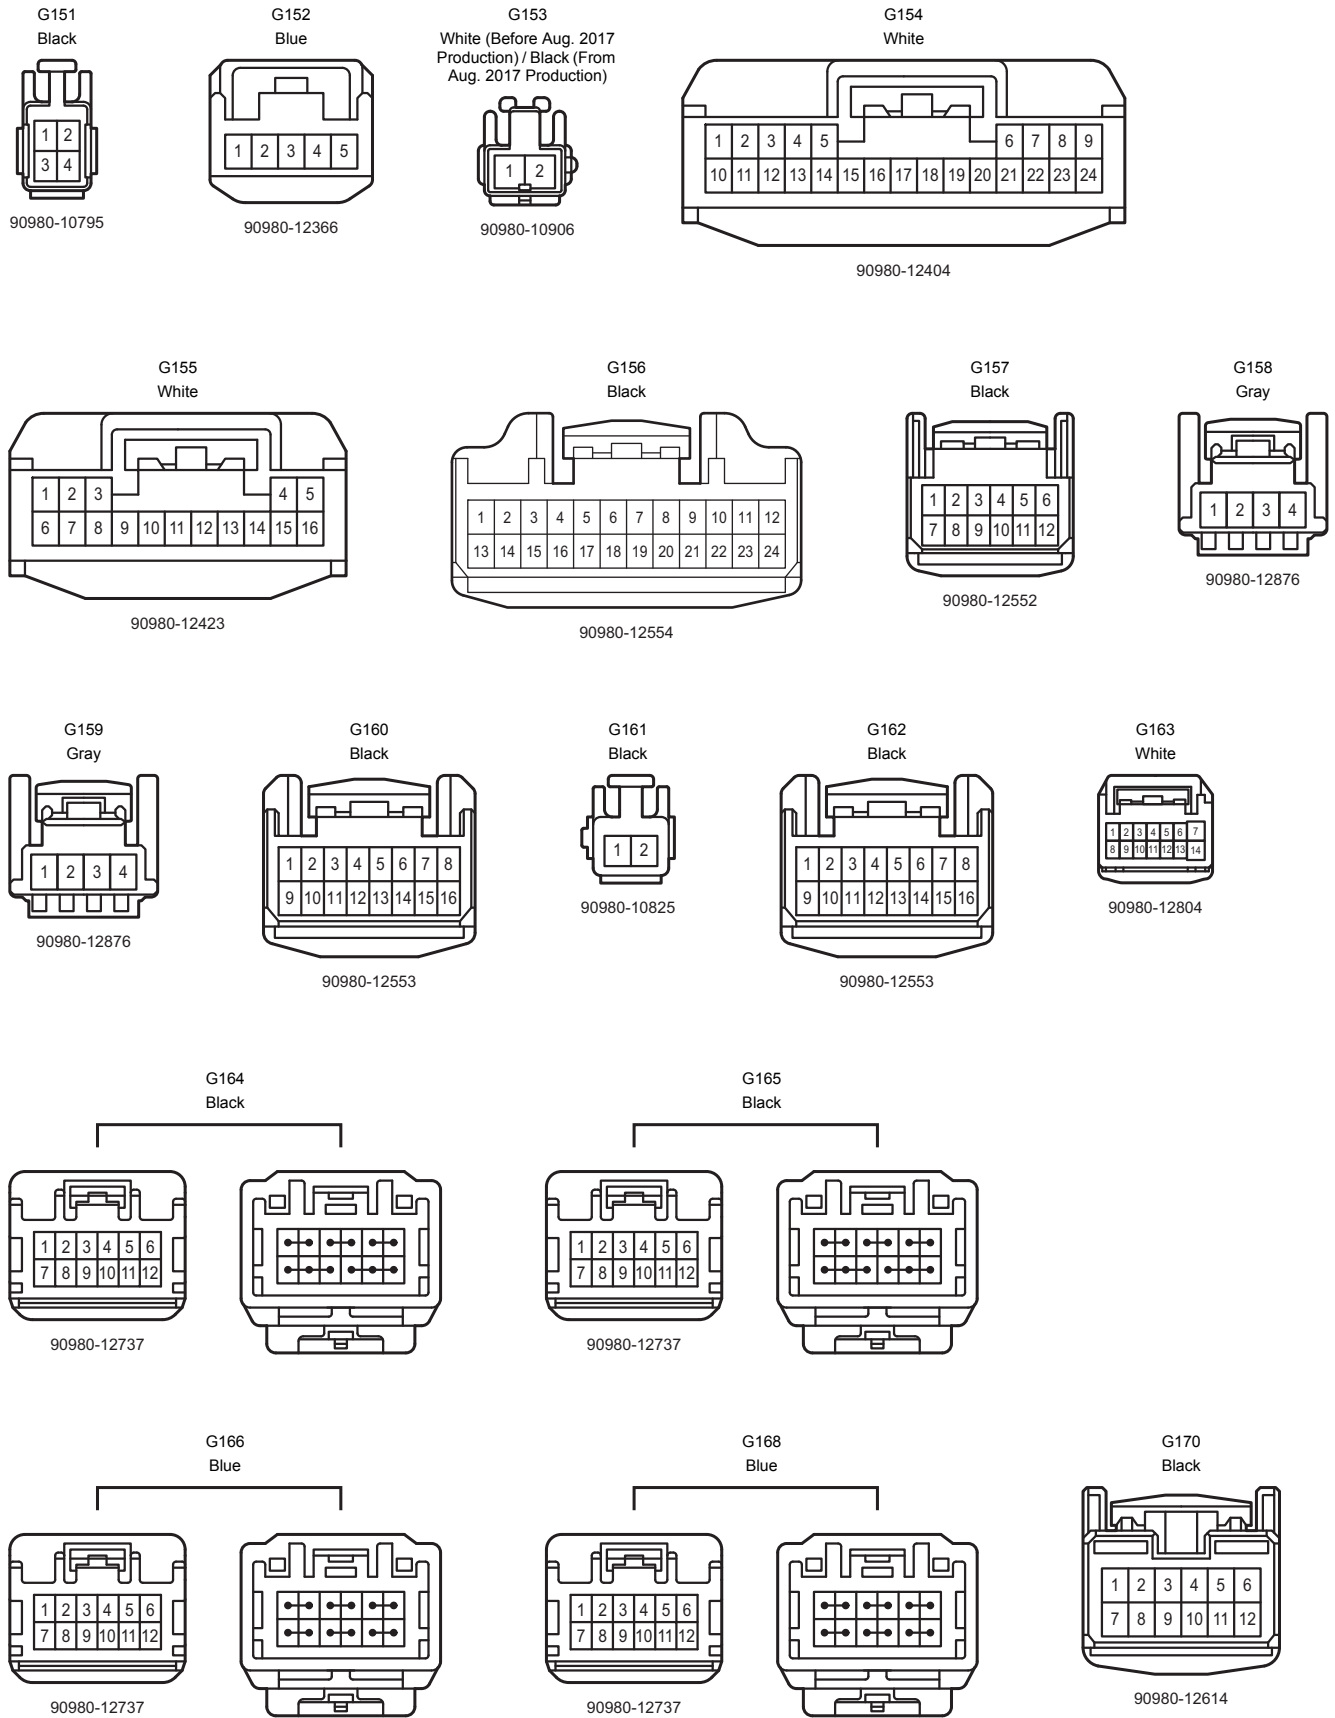

Position of Parts in Instrument Panel (LHD Front Separate Seat) (Before Aug. 2017 Production)

G171
Gray



90980-11608

G172
Gray



90980-11608

G173
Gray




90980-11608

G174
Gray




90980-11608

G176
Black

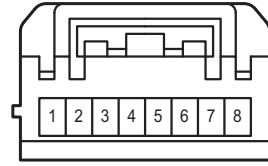

90980-12550

G177
Blue

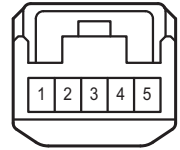

90980-12366

G178
Gray




90980-10995

G179
White




90980-10995

G180
White

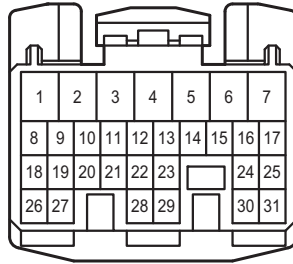


90980-12525

G181
White

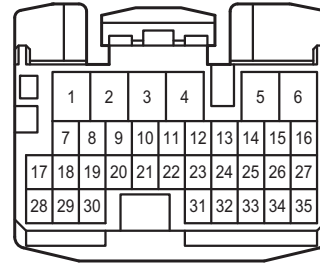


90980-12529

G182
White

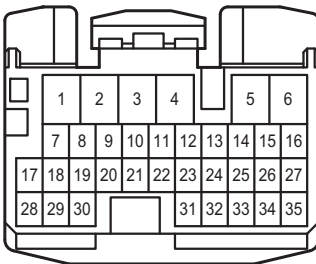


90980-12529

G183
White

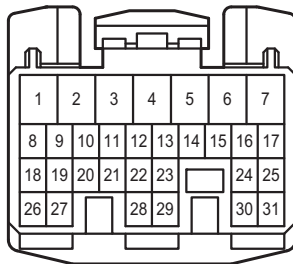


90980-12525

G184
White

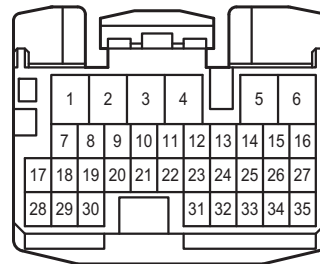

90980-12529

G185
White

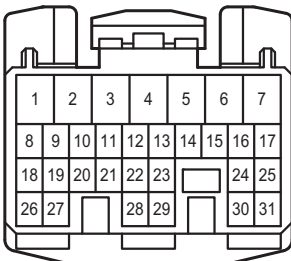


90980-12525

G188
White




90980-11909

G189
Black

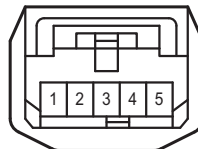

90980-12954

G192
Black

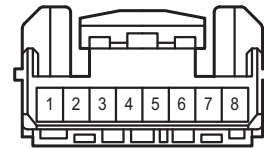

90980-12558