


Position of Parts in Engine Compartment <LHD 1GR-FE Before Aug. 2015 Production>

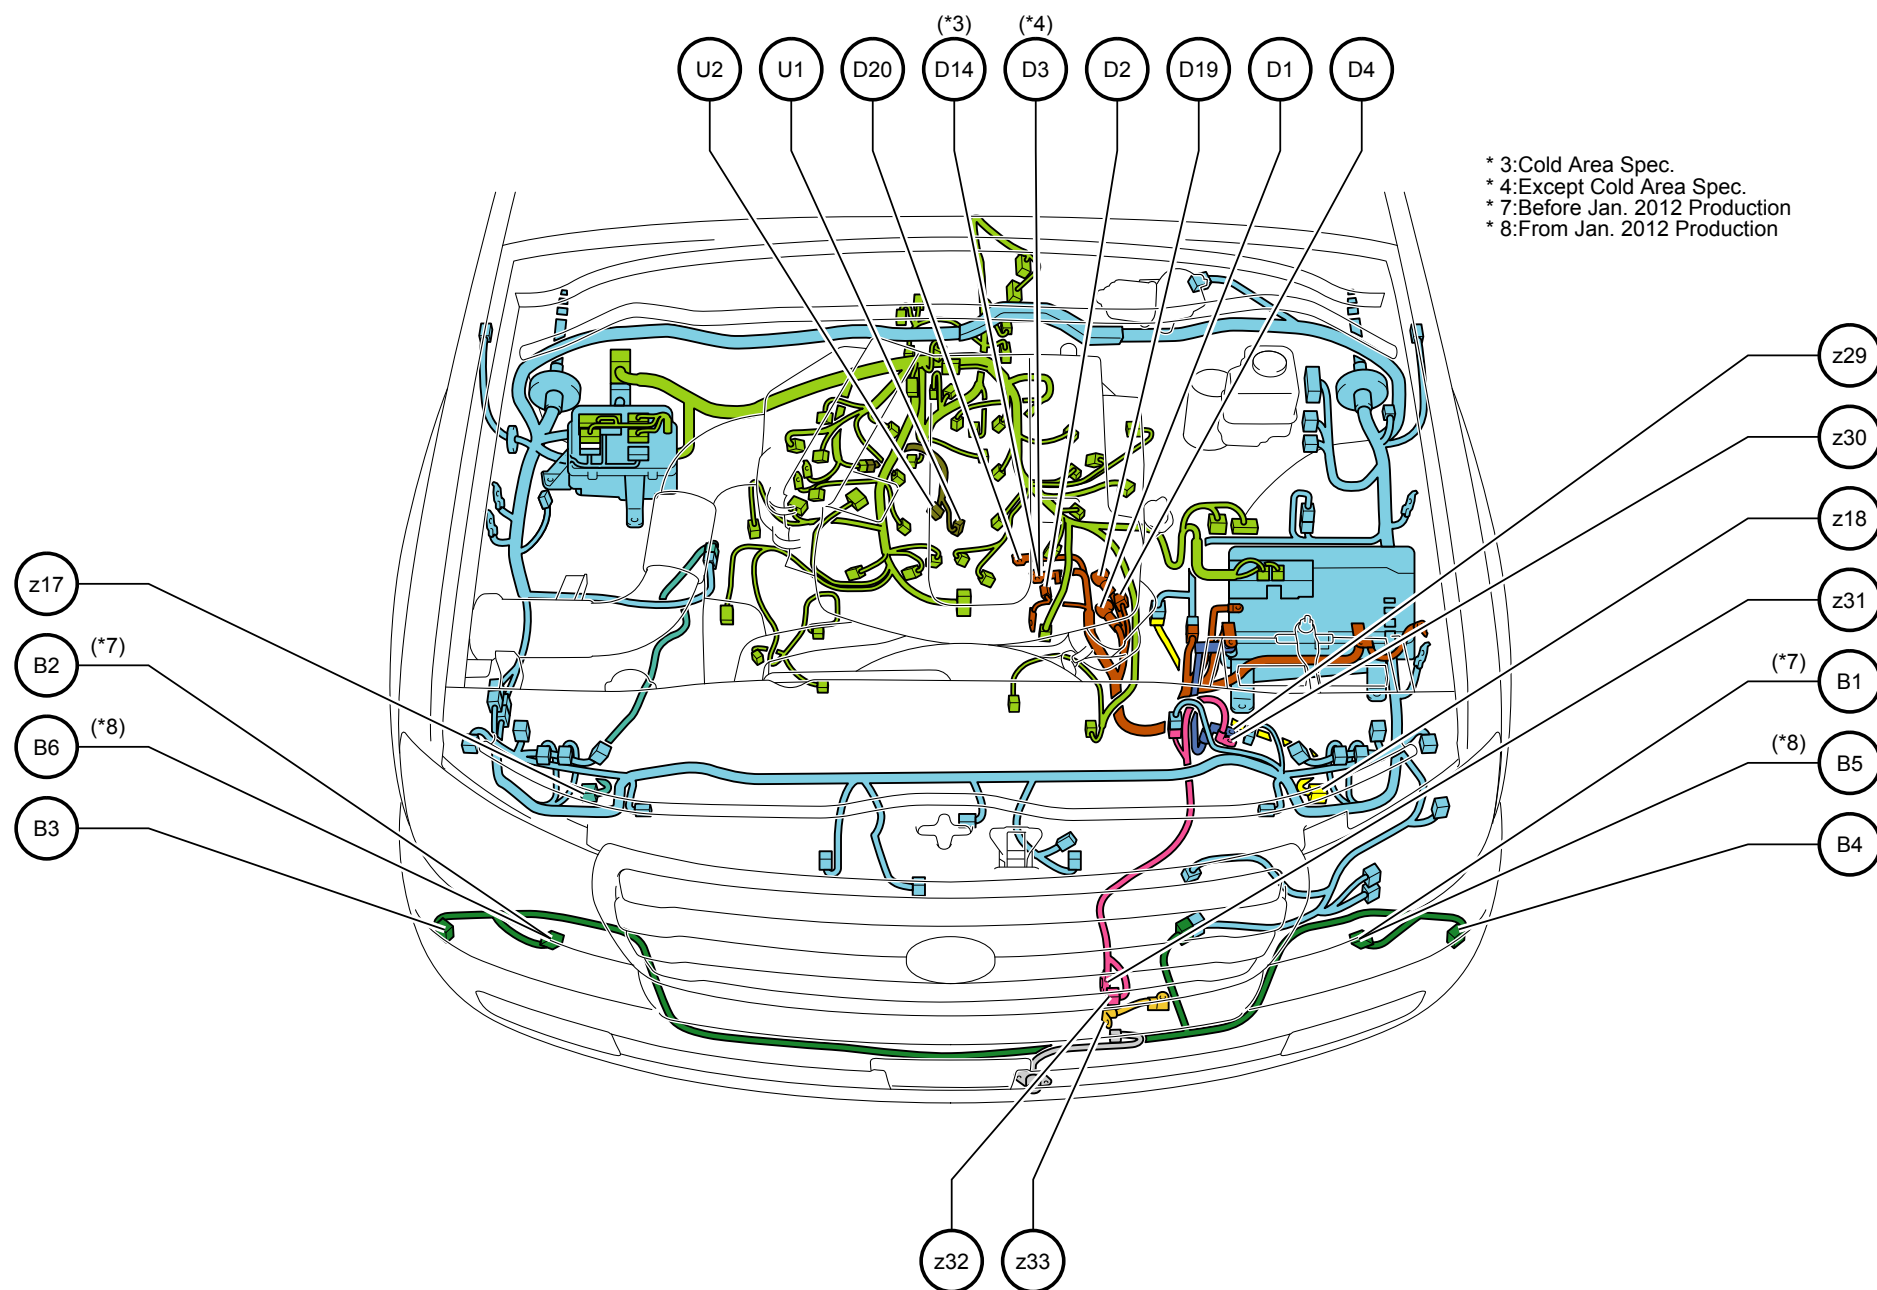

- B 1 Fog Light Assembly LH
- B 2 Fog Light Assembly RH
- B 3 No.1 Ultrasonic Sensor RH
- B 4 No.1 Ultrasonic Sensor LH
- B 5 Fog Light Assembly LH
- B 6 Fog Light Assembly RH

- D 1 Generator Assembly
- D 2 Starter Assembly
- D 3 Starter Assembly
- D 4 Generator Assembly
- D 14 Starter Assembly
- D 19 Generator Assembly
- D 20 Starter Assembly

- U 1 Knock Control Sensor (Bank 2)
- U 2 Knock Control Sensor (Bank 1)

- z 17 Front Speed Sensor RH
- z 18 Front Speed Sensor LH
- z 29 Winch Main Relay (No.1 Magnet Switch Assembly)
- z 30 Winch Main Relay (No.1 Magnet Switch Assembly)
- z 31 With Magnet Switch Winch Motor Assembly
- z 32 With Magnet Switch Winch Motor Assembly
- z 33 With Magnet Switch Winch Motor Assembly

Position of Parts in Engine Compartment <LHD 1GR-FE Before Aug. 2015 Production>

