


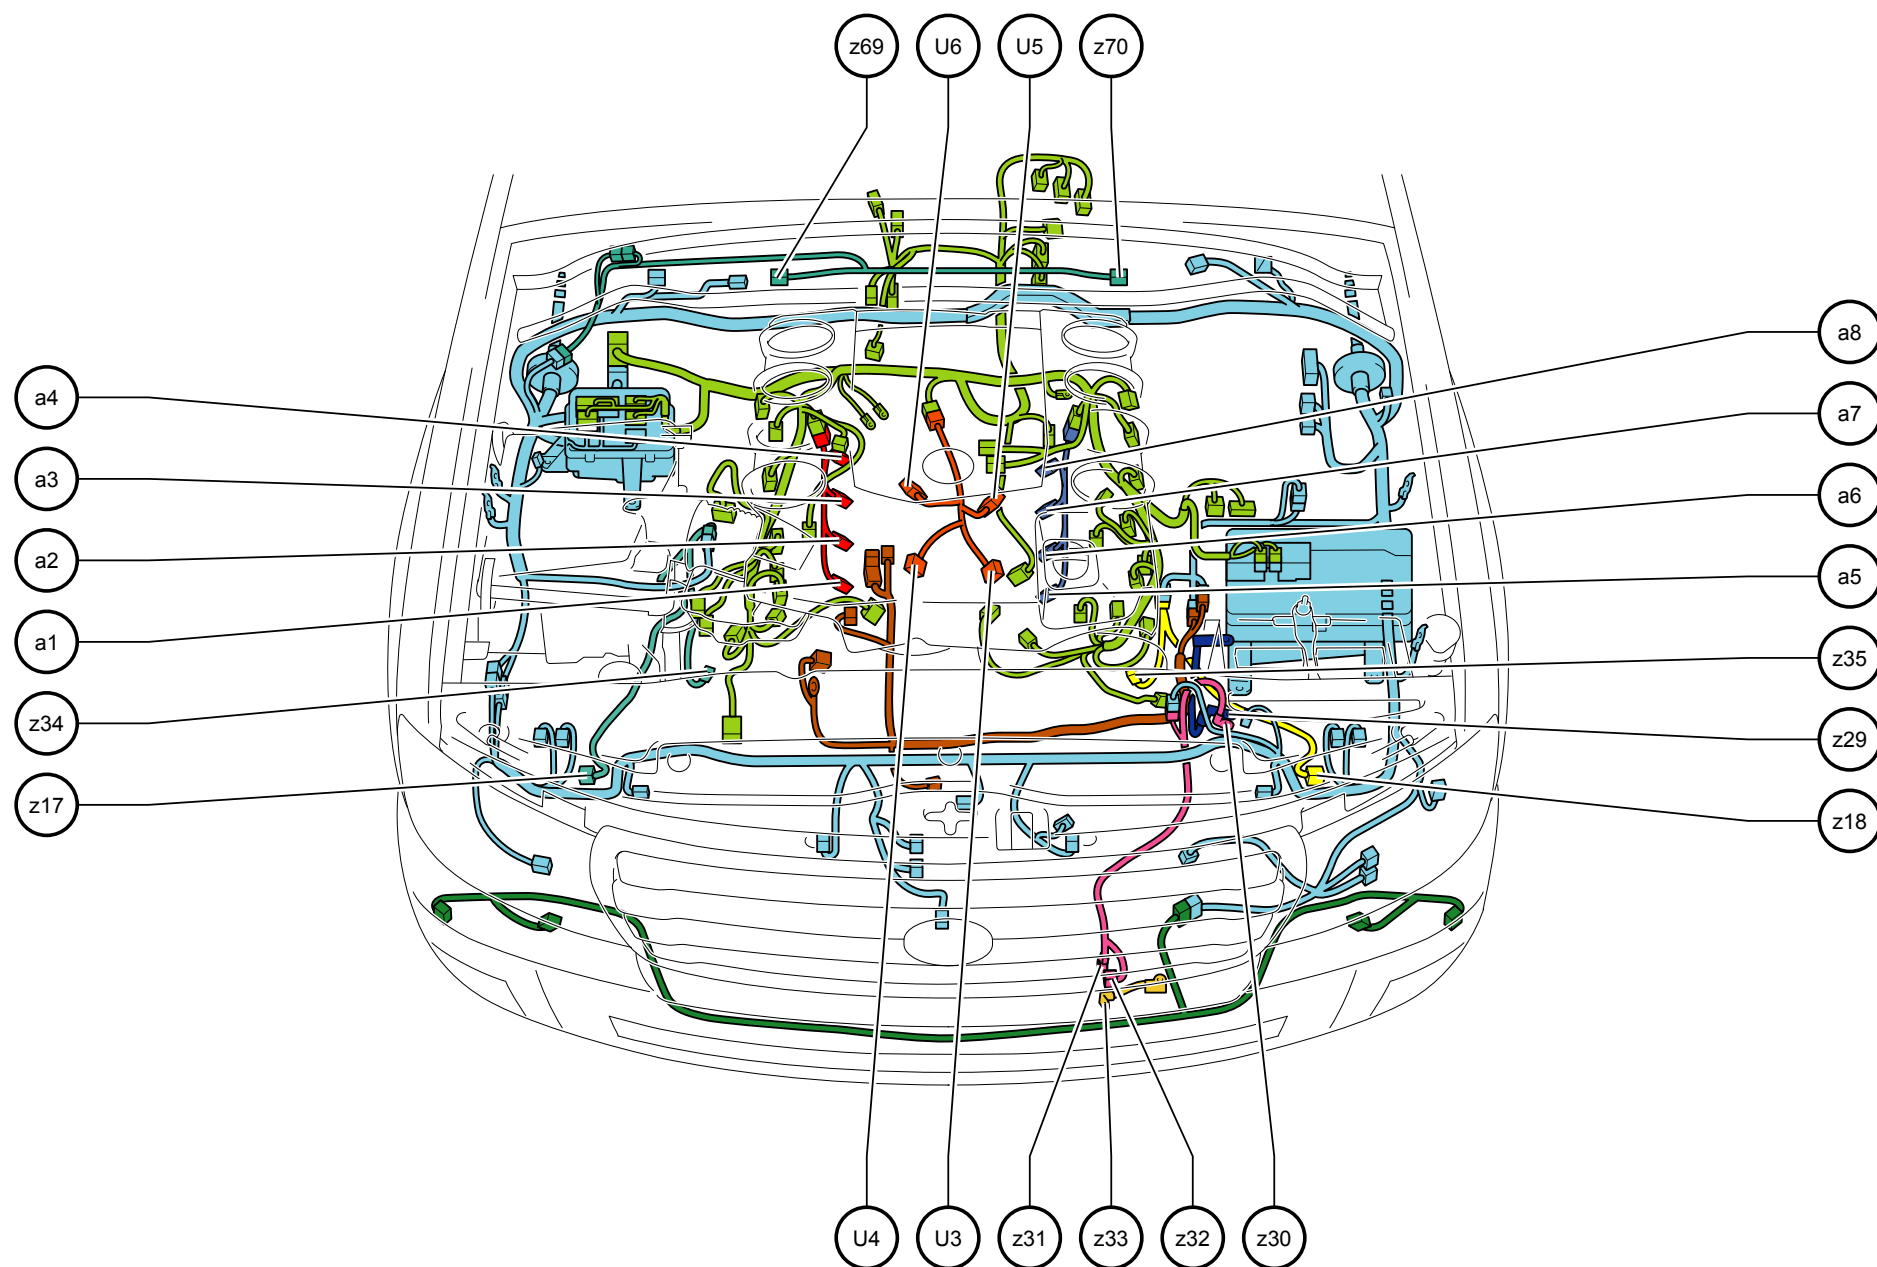

- U 3 Knock Control Sensor (Bank 1 Sensor 1)
- U 4 Knock Control Sensor (Bank 2 Sensor 1)
- U 5 Knock Control Sensor (Bank 1 Sensor 2)
- U 6 Knock Control Sensor (Bank 2 Sensor 2)

- a 1 Fuel Injector Assembly No.2
- a 2 Fuel Injector Assembly No.4
- a 3 Fuel Injector Assembly No.6
- a 4 Fuel Injector Assembly No.8
- a 5 Fuel Injector Assembly No.1
- a 6 Fuel Injector Assembly No.3
- a 7 Fuel Injector Assembly No.5
- a 8 Fuel Injector Assembly No.7

- z 17 Front Speed Sensor RH
- z 18 Front Speed Sensor LH
- z 29 Winch Main Relay (No.1 Magnet Switch Assembly)
- z 30 Winch Main Relay (No.1 Magnet Switch Assembly)
- z 31 With Magnet Switch Winch Motor Assembly
- z 32 With Magnet Switch Winch Motor Assembly
- z 33 With Magnet Switch Winch Motor Assembly
- z 34 Front Height Control Sensor Sub-Assembly RH
- z 35 Front Height Control Sensor Sub-Assembly LH
- z 69 Washer Nozzle Sub-Assembly RH
- z 70 Washer Nozzle Sub-Assembly LH

Position of Parts in Engine Compartment <LHD 1UR-FE Before Aug. 2015 Production>

