


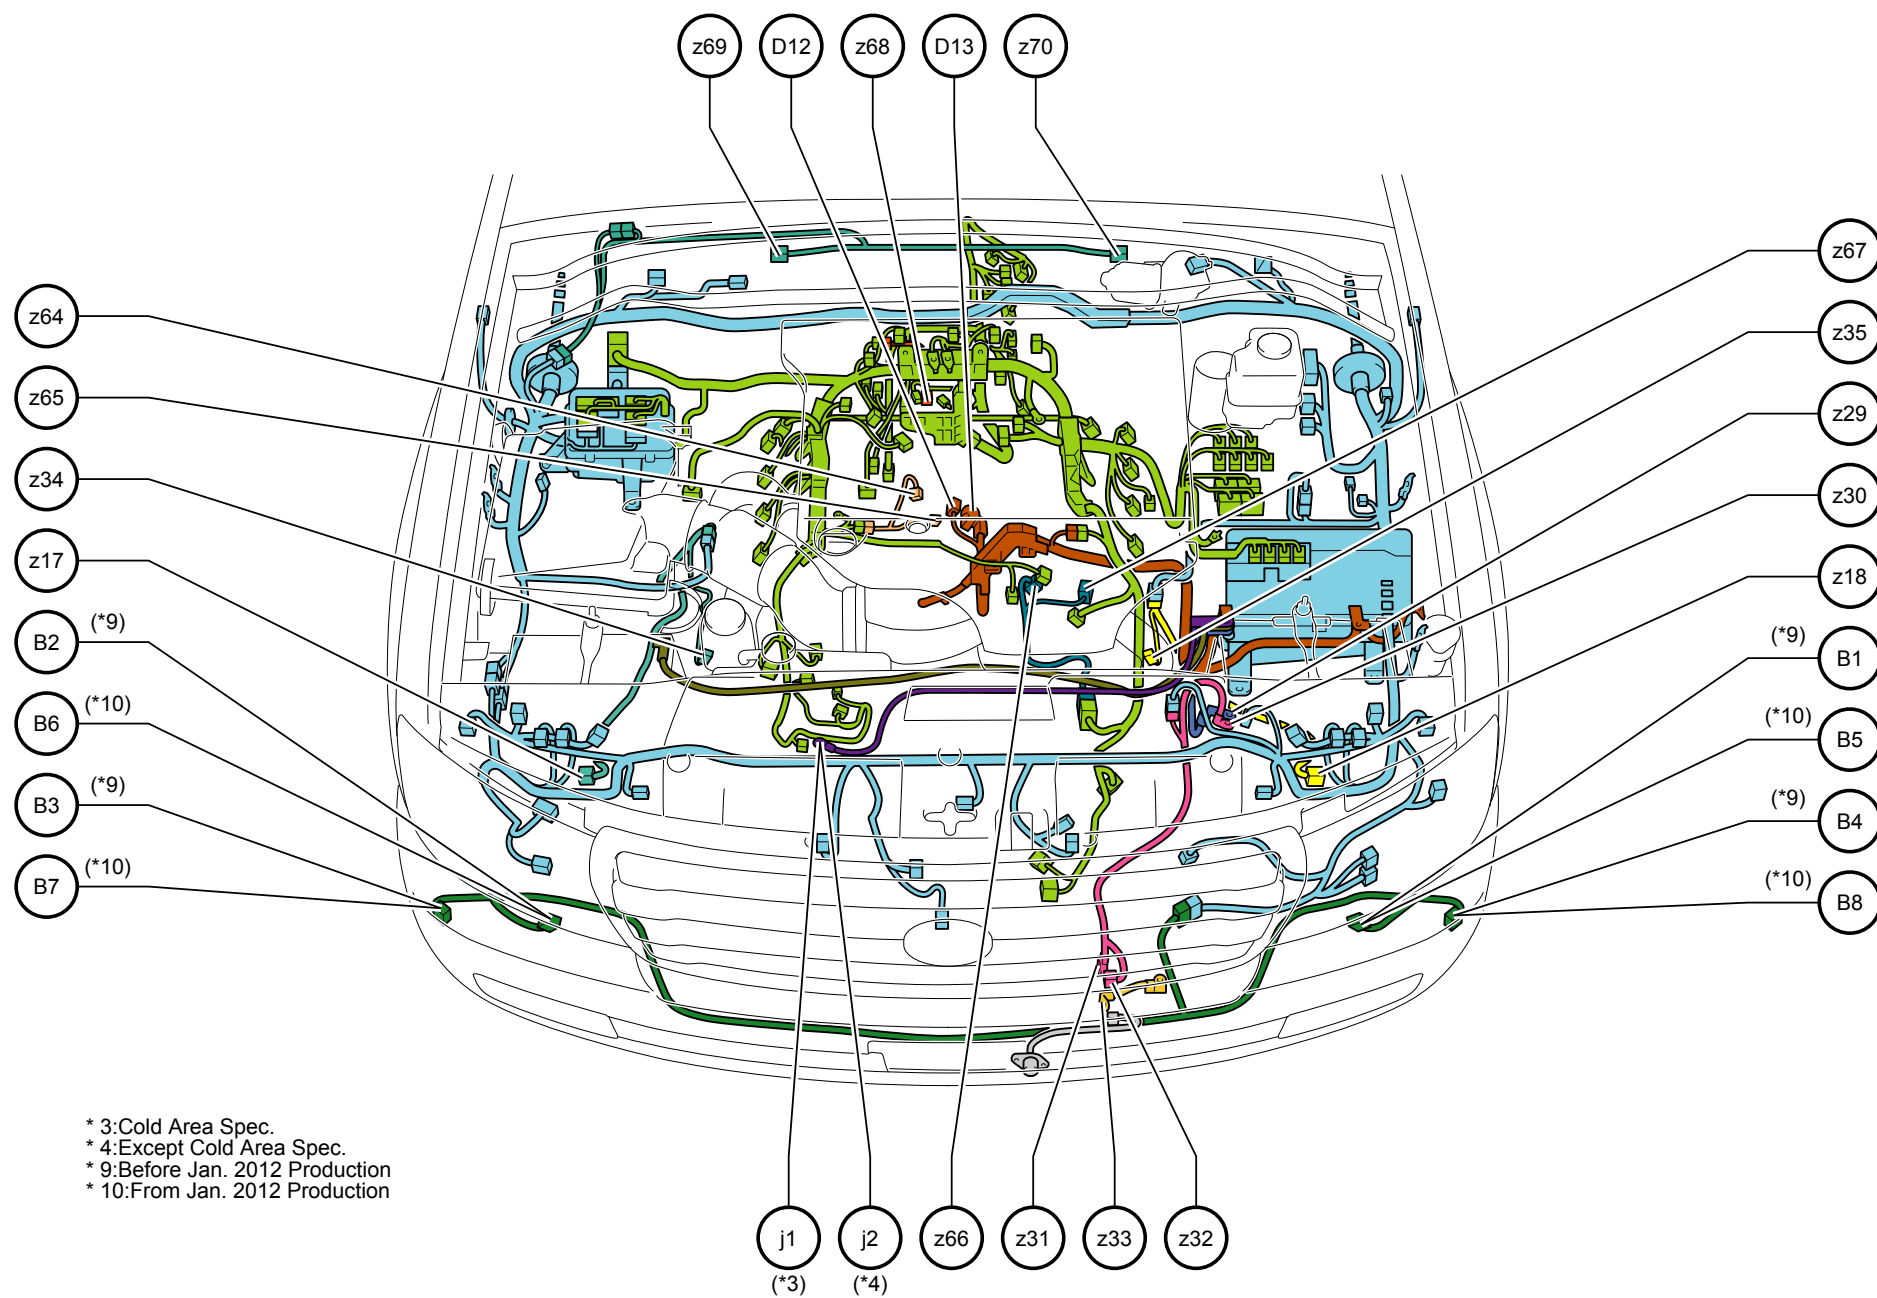

- B 1 Fog Light Assembly LH
- B 2 Fog Light Assembly RH
- B 3 No.1 Ultrasonic Sensor RH
- B 4 No.1 Ultrasonic Sensor LH
- B 5 Fog Light Assembly LH
- B 6 Fog Light Assembly RH
- B 7 No.1 Ultrasonic Sensor RH
- B 8 No.1 Ultrasonic Sensor LH

- D 12 Starter Assembly
- D 13 Starter Assembly

- j 1 Generator Assembly
- j 2 Generator Assembly

- z 17 Front Speed Sensor RH
- z 18 Front Speed Sensor LH
- z 29 Winch Main Relay (No.1 Magnet Switch Assembly)
- z 30 Winch Main Relay (No.1 Magnet Switch Assembly)
- z 31 With Magnet Switch Winch Motor Assembly
- z 32 With Magnet Switch Winch Motor Assembly
- z 33 With Magnet Switch Winch Motor Assembly
- z 34 Front Height Control Sensor Sub-Assembly RH
- z 35 Front Height Control Sensor Sub-Assembly LH
- z 64 Suction Control Valve (Injection or Supply Pump Assembly)
- z 65 Fuel Temperature Sensor (Injection or Supply Pump Assembly)
- z 66 DC Motor and Nozzle Vane Position Sensor LH
- z 67 DC Motor and Nozzle Vane Position Sensor LH
- z 68 Pressure Discharge Valve
- z 69 Washer Nozzle Sub-Assembly RH
- z 70 Washer Nozzle Sub-Assembly LH

Position of Parts in Engine Compartment <LHD 1VD-FTV Before Aug. 2015 Production>

