

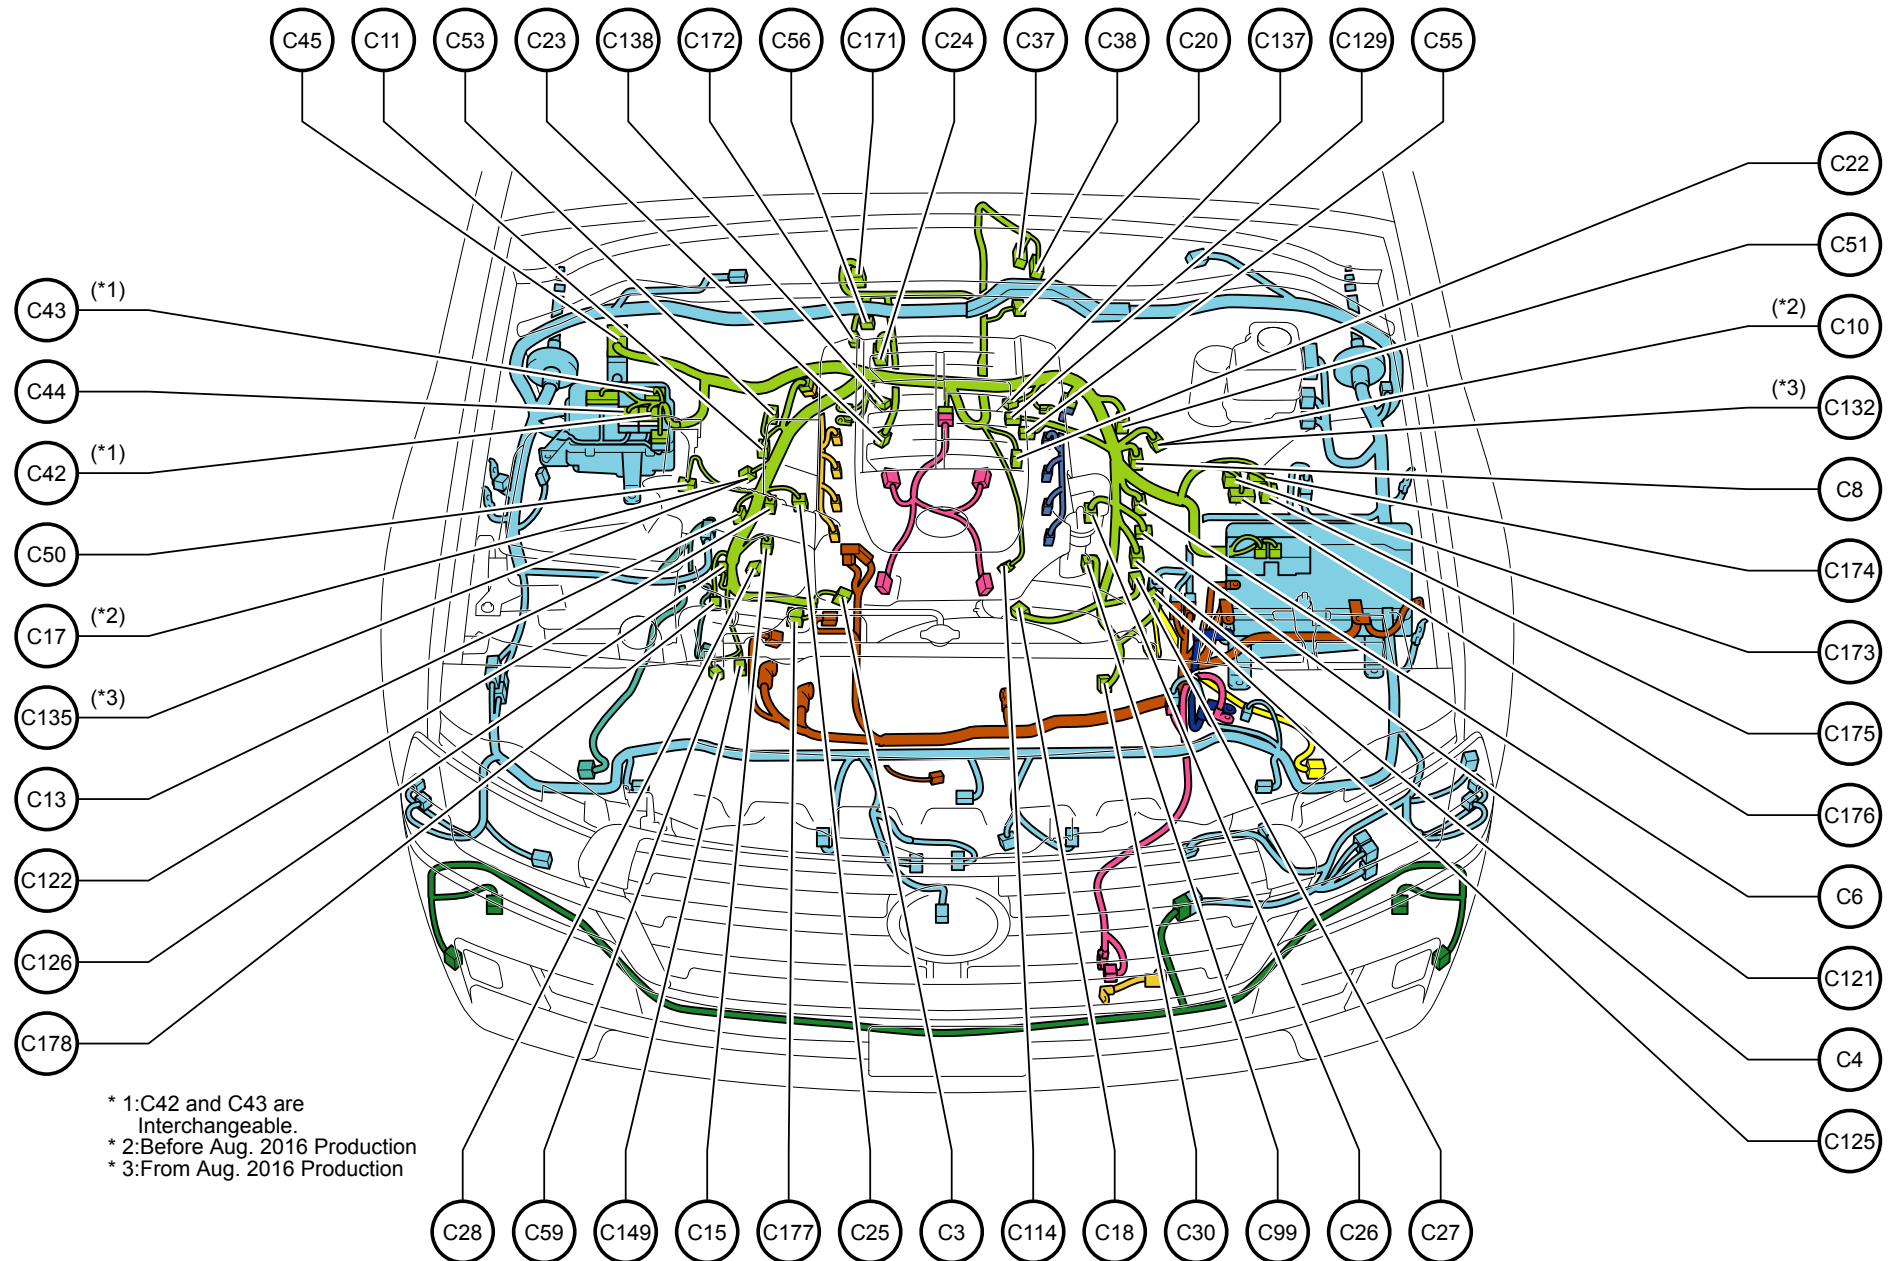
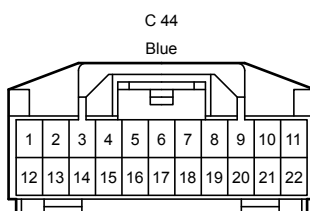
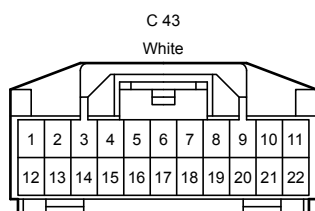
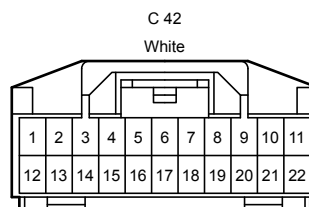
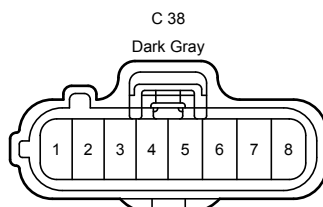
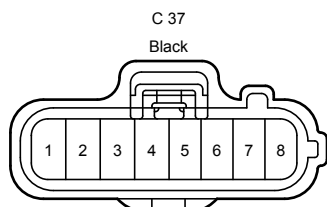
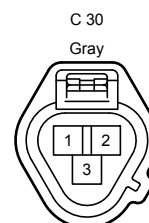
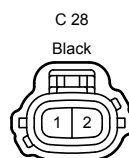
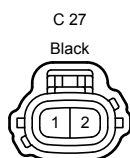
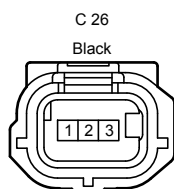
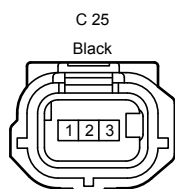
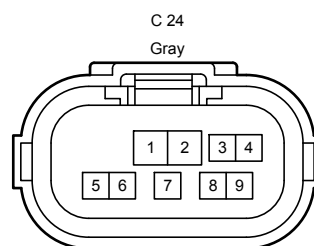
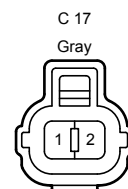
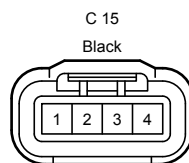
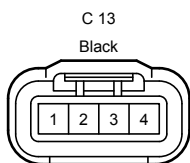
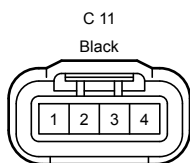
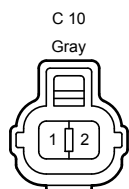
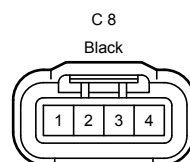
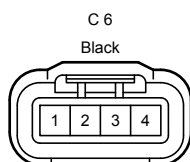


Position of Parts in Engine Compartment <LHD 3UR-FE From Aug. 2015 Production>

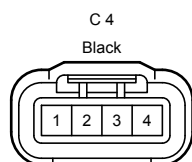


- C 3 Throttle Body Assembly
- C 4 Ignition Coil Assembly No.1
- C 6 Ignition Coil Assembly No.3
- C 8 Ignition Coil Assembly No.5
- C 10 Noise Filter (Ignition Bank 1)
- C 11 Ignition Coil Assembly No.6
- C 13 Ignition Coil Assembly No.4
- C 15 Ignition Coil Assembly No.2
- C 17 Noise Filter (Ignition Bank 2)
- C 18 E.F.I. Engine Coolant Temperature Sensor
- C 20 Oxygen Sensor (Bank 1 Sensor 2)
- C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- C 24 Park/Neutral Position Switch
- C 25 VVT Sensor (Bank 2 Intake Side)
- C 26 VVT Sensor (Bank 1 Intake Side)
- C 27 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
- C 28 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
- C 30 Cooler Compressor Assembly
- C 37 Transfer Shift Actuator Assembly
- C 38 Transfer Shift Actuator Assembly
- C 42 Junction Connector
- C 43 Junction Connector
- C 44 Junction Connector
- C 45 ECM
- C 50 Mass Air Flow Meter
- C 51 Ignition Coil Assembly No.7
- C 53 Ignition Coil Assembly No.8
- C 55 Purge VSV
- C 56 Oxygen Sensor (Bank 2 Sensor 2)
- C 59 Power Steering Oil Pressure Sensor
- C 99 Camshaft Position Sensor
- C 114 Crankshaft Position Sensor
- C 121 VVT Sensor (Bank 1 Exhaust Side)
- C 122 VVT Sensor (Bank 2 Exhaust Side)
- C 125 Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
- C 126 Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)
- C 129 VSV (ACIS)
- C 132 Noise Filter (Ignition Bank 1)
- C 135 Noise Filter (Ignition Bank 2)
- C 137 Air Switching Valve (Bank 1)
- C 138 Air Switching Valve (Bank 2)
- C 149 Vane Pump Assembly
- C 171 Electronically Controlled Transmission Solenoid
- C 172 A/T Fluid Temperature Sensor (Temperature Sensor)
- C 173 Air Injection Control Driver (Bank 1)
- C 174 Air Injection Control Driver (Bank 1)
- C 175 Air Injection Control Driver (Bank 2)
- C 176 Air Injection Control Driver (Bank 2)
- C 177 Air Pump Assembly LH
- C 178 Air Pump Assembly RH

Position of Parts in Engine Compartment <LHD 3UR-FE From Aug. 2015 Production>

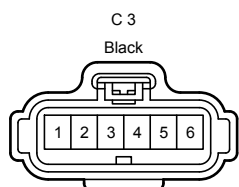


Position of Parts in Engine Compartment <LHD 3UR-FE From Aug. 2015 Production>


C 45
Black

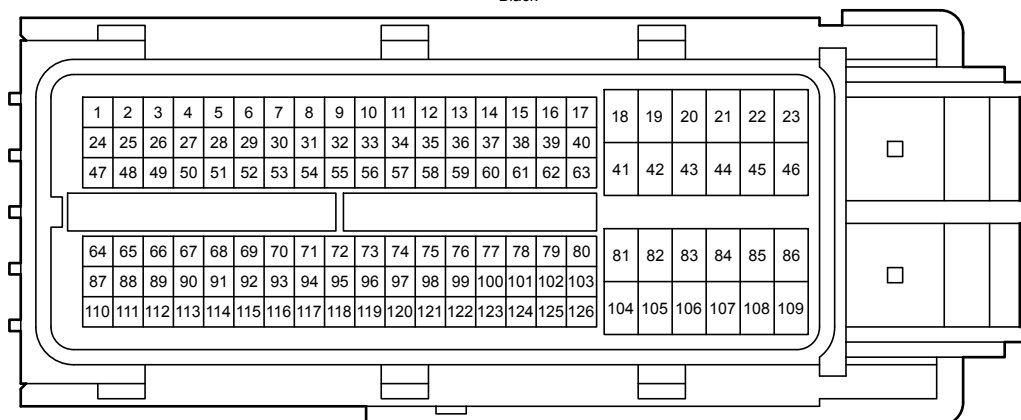


C 50
Black

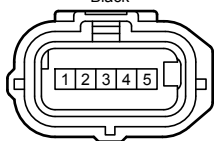


C 51
Black

 

C 53
Black

 


C 55
Black

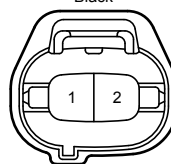


C 56
Dark Gray




C 59
Gray

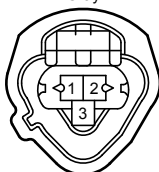


C 99
Black

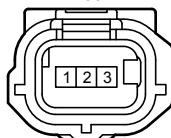


C114
Black

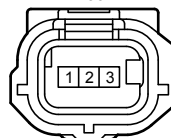

C121
Black

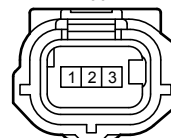

C122
Black

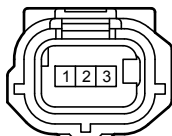


C125
Black




C126
Black




C129
Black

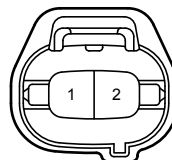


C132
Gray

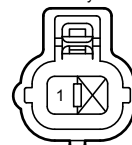


C135
Gray

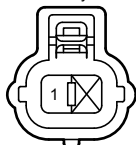

C137
Black

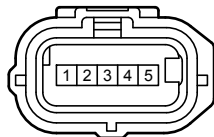

C138
Black

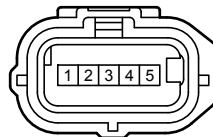

C149
Black

