


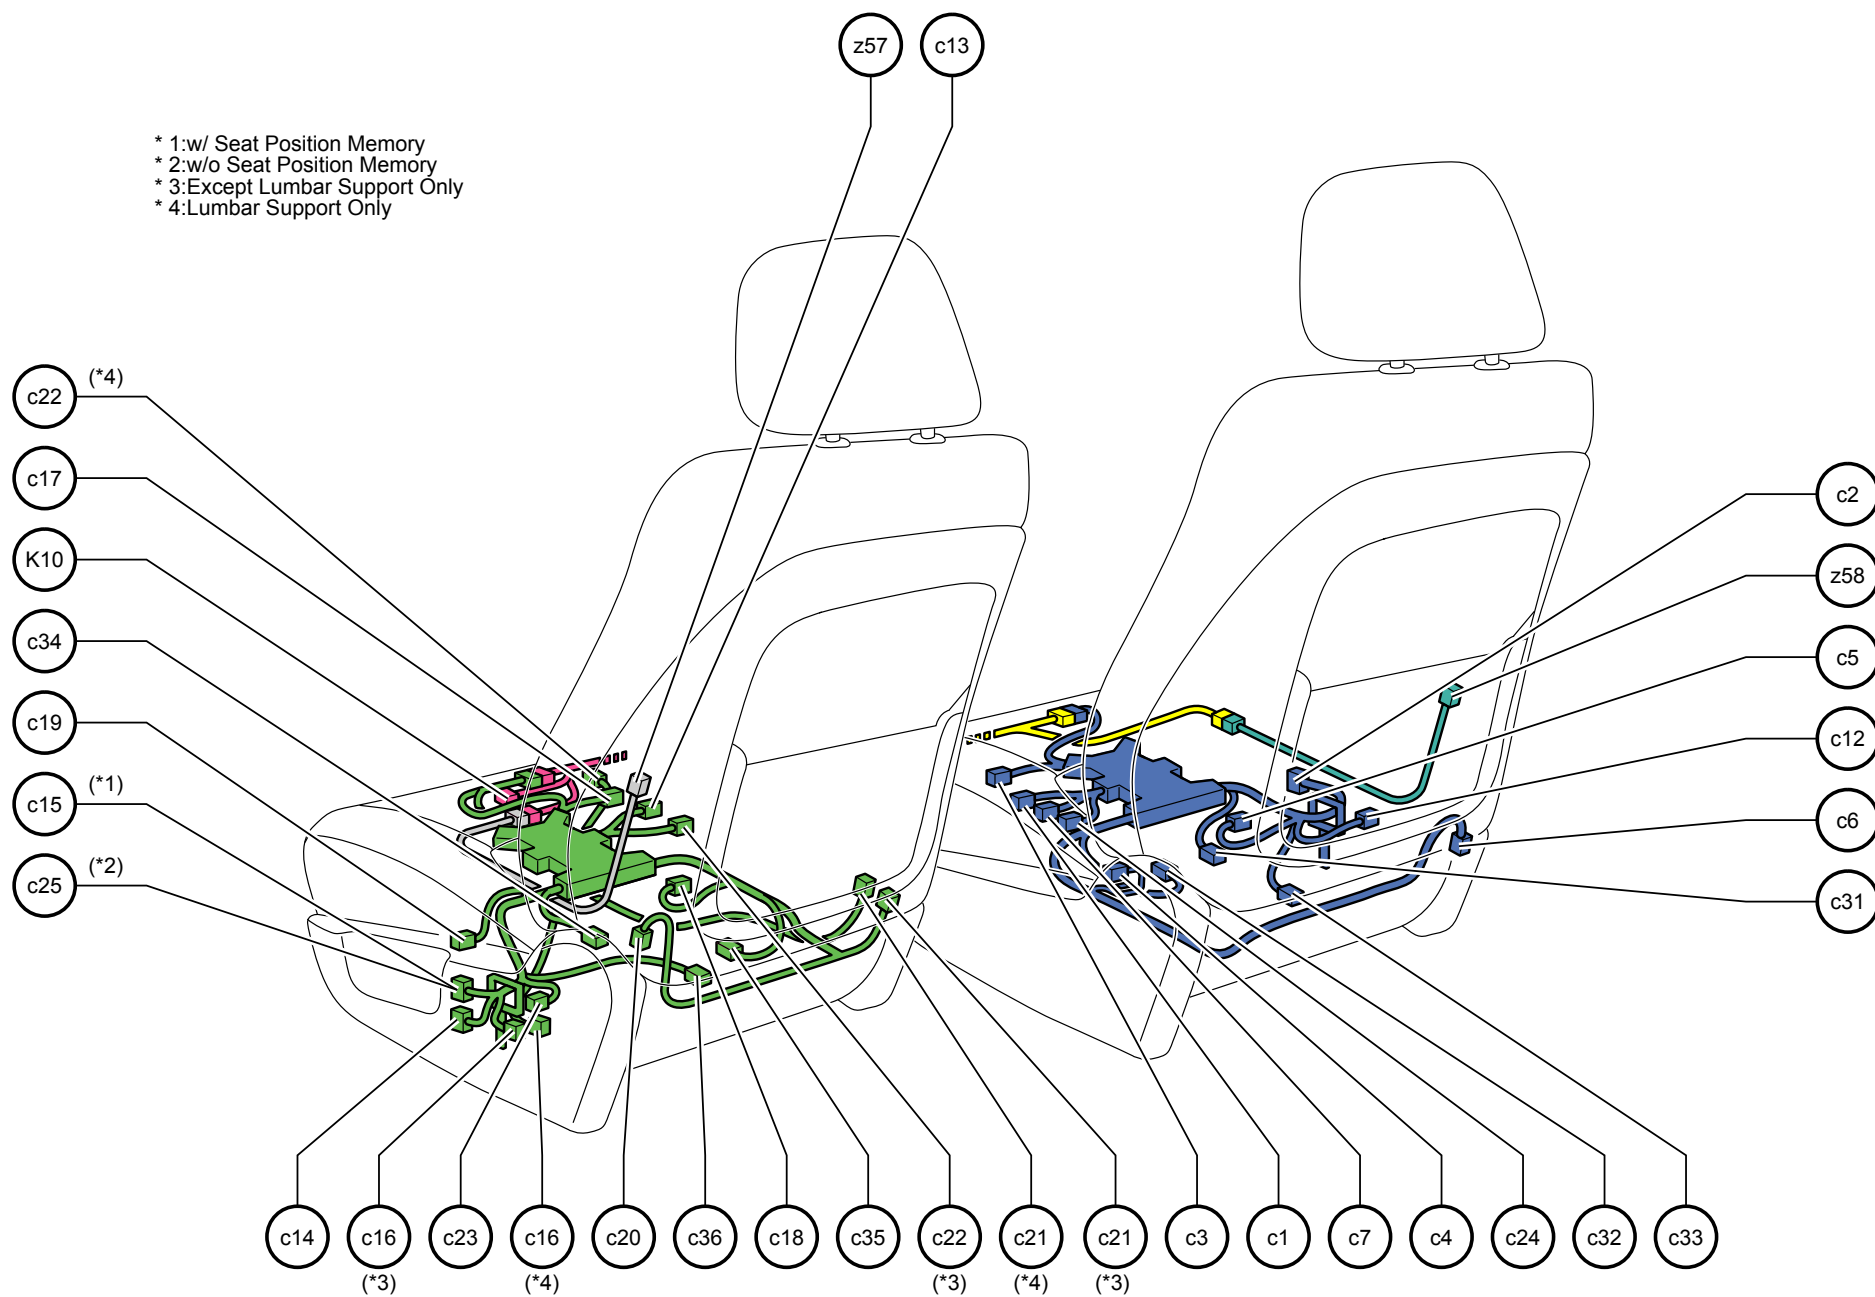

- K 10 Front Seat Inner Belt Assembly LH
 - c 1 Front Seat Heater Assembly RH
 - c 2 Front Power Seat Switch Assembly RH
 - c 3 Front Power Seat Slide Position Motor Assembly RH
 - c 4 Front Power Seat Lift Position Motor Assembly RH
 - c 5 Front Power Seat Vertical Position Motor Assembly RH
 - c 6 Front Power Seat Reclining Position Motor Assembly RH
 - c 7 Front Seat Inner Belt Assembly RH
 - c 12 Junction Connector
 - c 13 Front Seat Heater Assembly LH
 - c 14 Front Position Control ECU and Switch Assembly LH
 - c 15 Front Position Control ECU and Switch Assembly LH
 - c 16 Front Power Seat Switch Assembly LH
 - c 17 Front Power Seat Slide Position Motor Assembly LH
 - c 18 Front Power Seat Lift Position Motor Assembly LH
 - c 19 Front Power Seat Vertical Position Motor Assembly LH
 - c 20 Front Power Seat Reclining Position Motor Assembly LH
 - c 21 Front Lumbar Support Forward and Back Motor Assembly LH
 - c 22 Front Seat Inner Belt Assembly LH
 - c 23 Junction Connector
 - c 24 Front Seat Inner Belt Assembly RH
 - c 25 Front Power Seat Switch Assembly LH
 - c 31 Seat Climate Control Blower RH
 - c 32 Seat Climate Control ECU RH
 - c 33 Front Seat Cushion Heater Assembly RH
 - c 34 Seat Climate Control Blower LH
 - c 35 Seat Climate Control ECU LH
 - c 36 Front Seat Cushion Heater Assembly LH
- z 57 Front Side Airbag Squib Circuit LH
- z 58 Front Side Airbag Squib Circuit RH

Position of Parts in Seat <LHD Front Separate Seat Type Before Aug. 2015 Production>

