

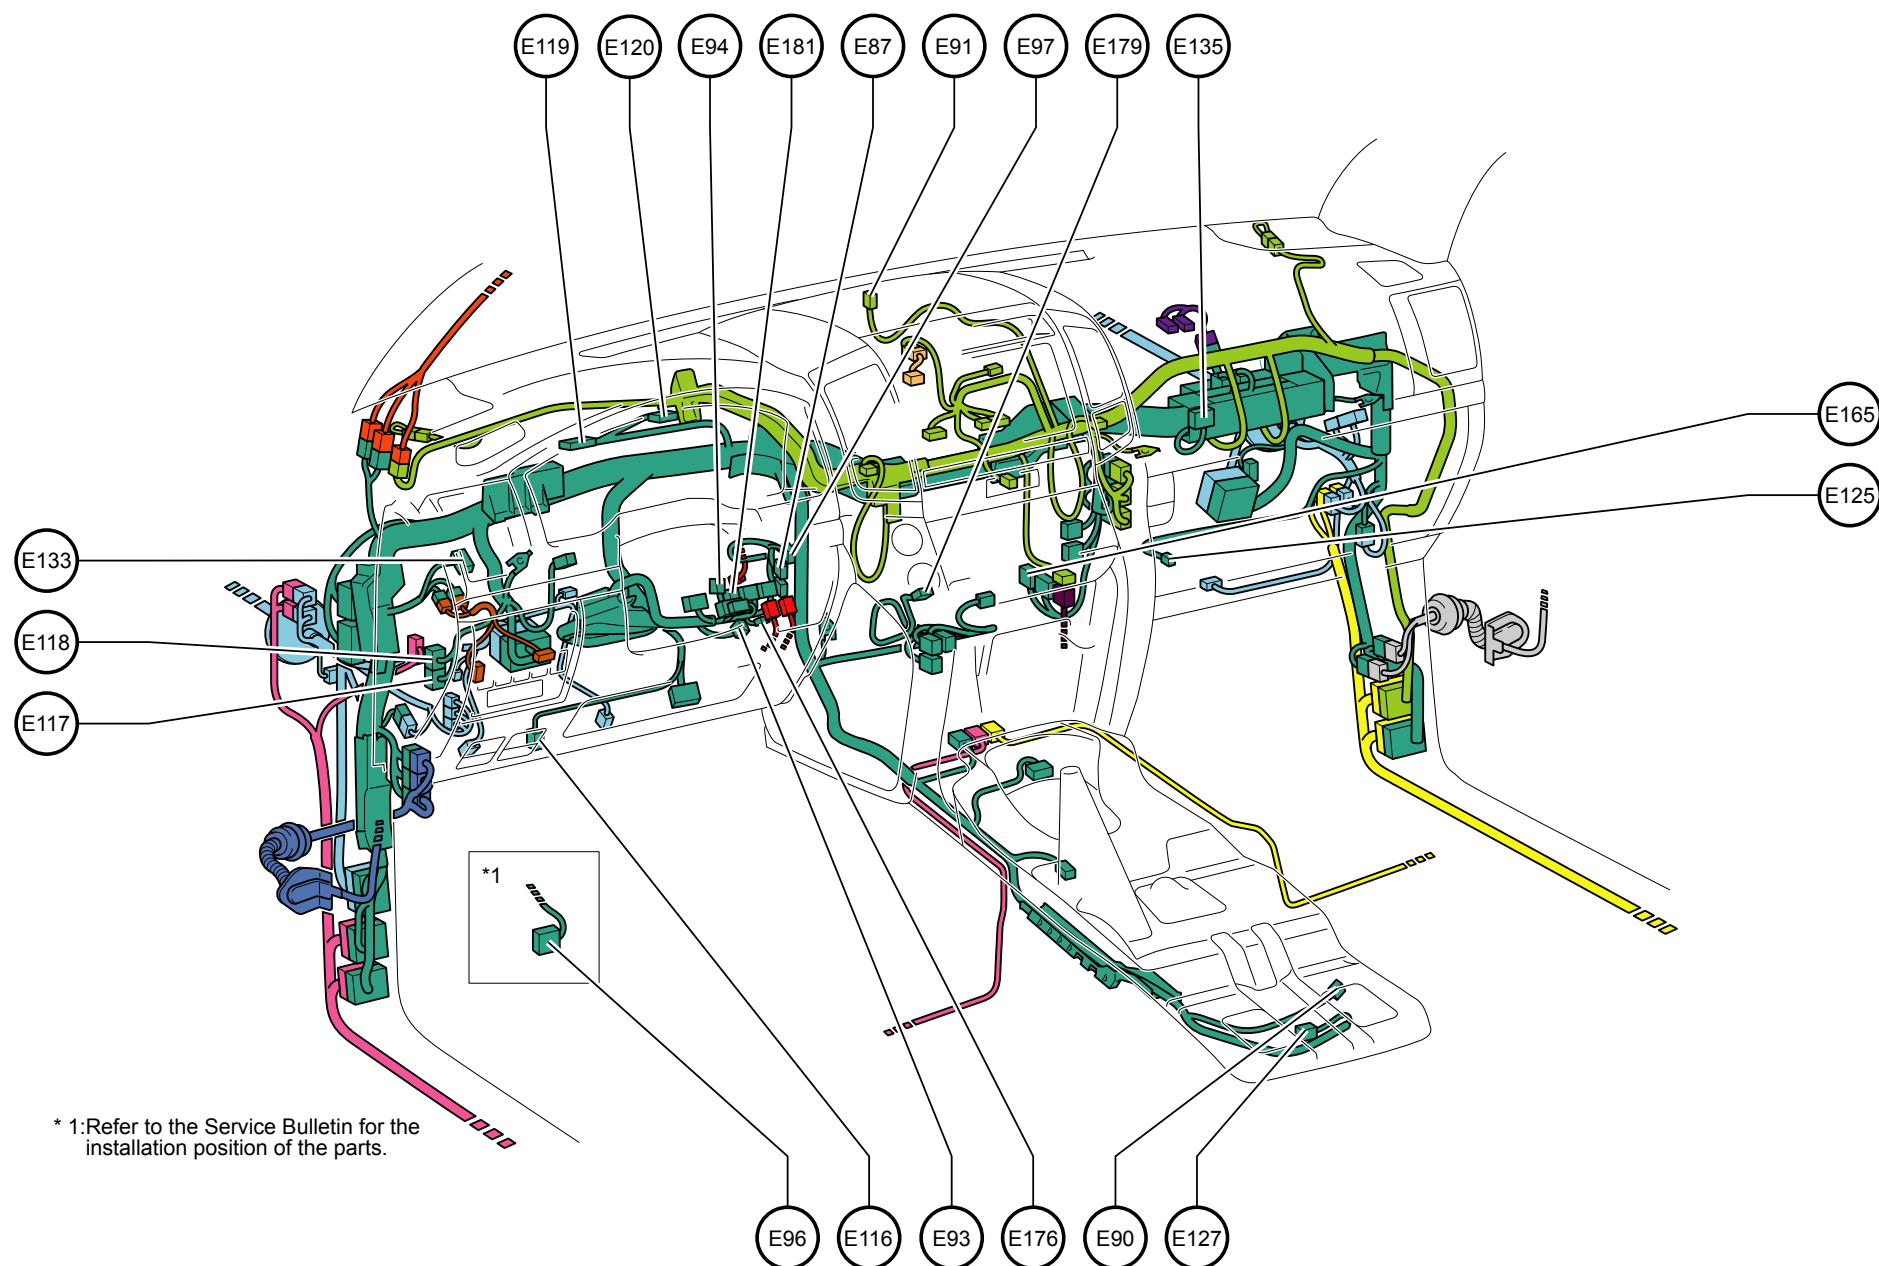
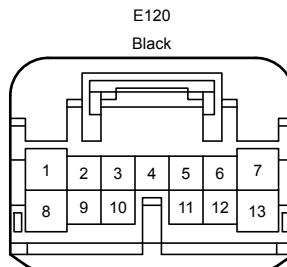
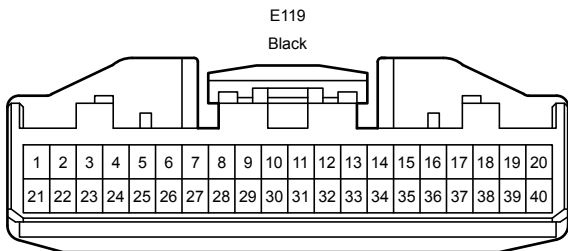
 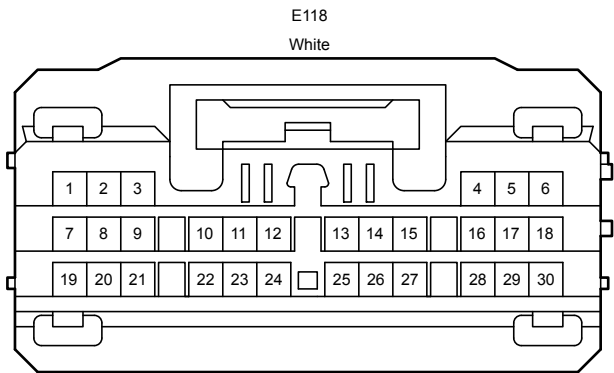
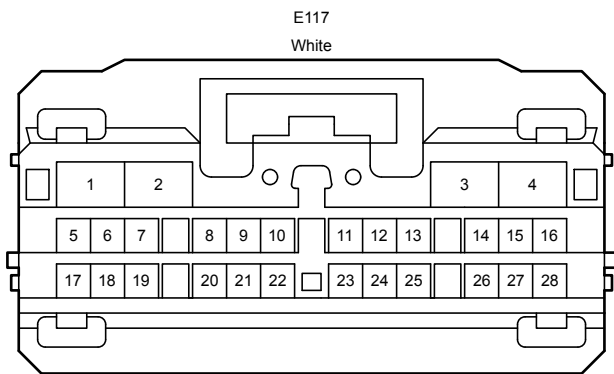

 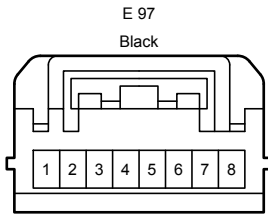
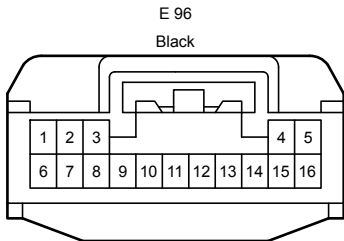

 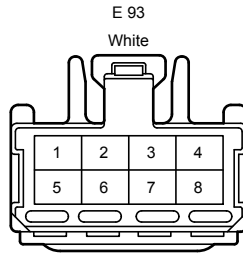
 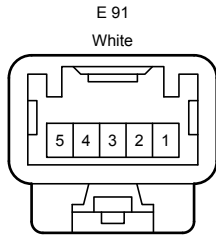




E 87	Differential Lock Switch
E 90	Cooling Box Assembly
E 91	Option Connector (Parking Assist-Sensor)
E 93	Ignition or Starter Switch Assembly
E 94	Un-Lock Warning Switch Assembly
E 96	Transponder Key ECU Assembly
E 97	Idle Up Switch
E 116	Tire Pressure Warning Reset Switch
E 117	Main Body ECU
E 118	Main Body ECU
E 119	Combination Meter Assembly
E 120	Combination Meter Assembly
E 125	Glove Box Light Assembly
E 127	Rear Power Outlet Socket Assembly
E 133	Junction Connector
E 135	Junction Connector
E 165	A/C Amplifier Assembly
E 176	Transponder Key Coil
E 179	Transfer Position Switch
E 181	Steering Sensor

Position of Parts in Instrument Panel <LHD Front Bench Seat Type From Aug. 2015 Production>



Position of Parts in Instrument Panel <LHD Front Bench Seat Type From Aug. 2015 Production>

