 
 
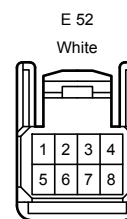 
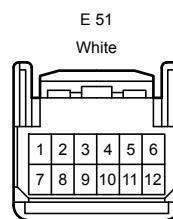 
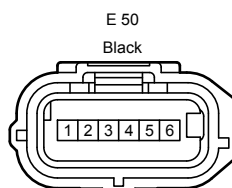 
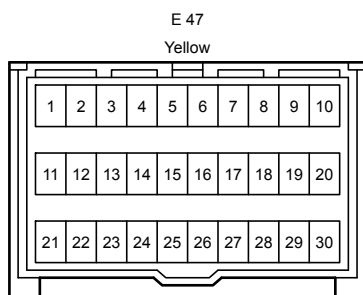 
 
 
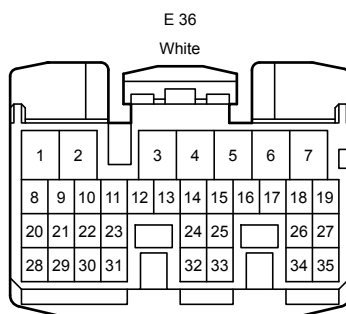 
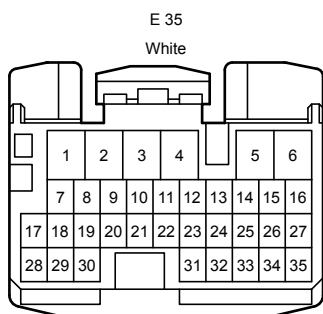 
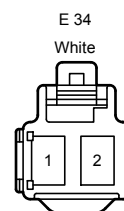 
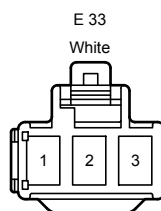 
 
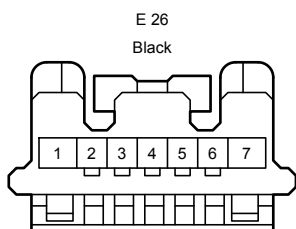 
 
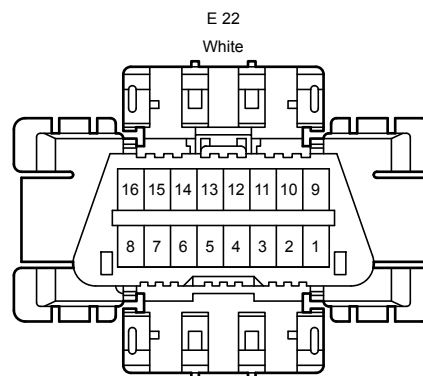 
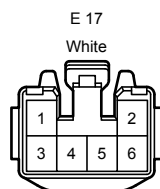 
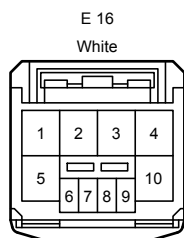 
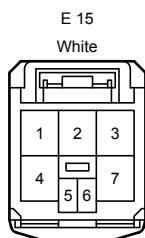 
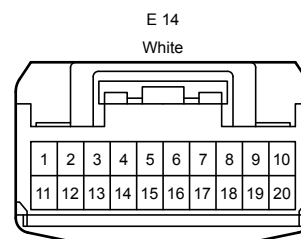 
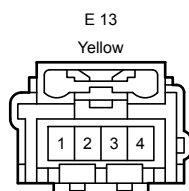 
 
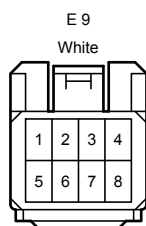 
 
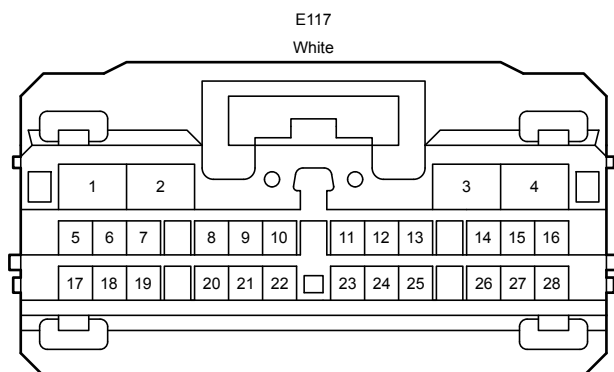 
 
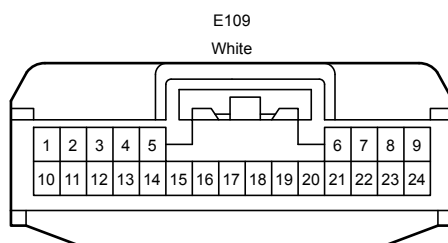 
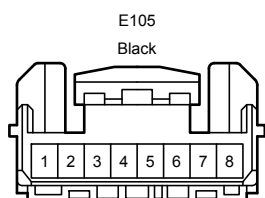 
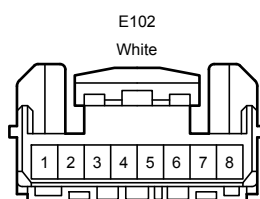 
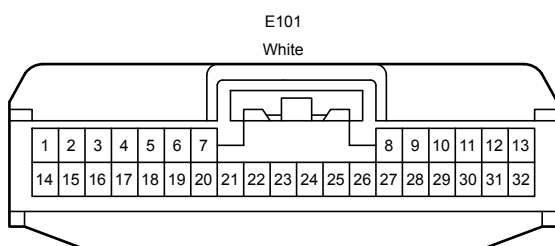 
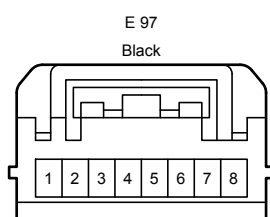 
 
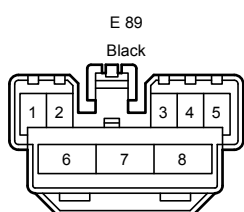 
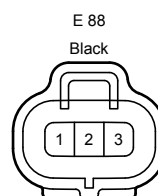 
 
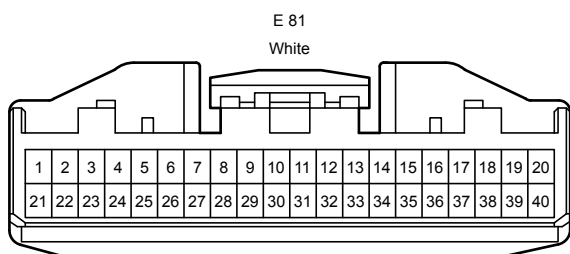 


E 5	Skid Control Buzzer Assembly
E 9	Light Control Rheostat
E 10	No.1 Clearance Warning Buzzer
E 13	Spiral Cable Sub-Assembly
E 14	Headlight Dimmer Switch Assembly
E 15	Windshield Wiper Switch Assembly
E 16	Windshield Wiper Switch Assembly
E 17	Power Tilt Motor
E 22	DLC3
E 24	Lower No.1 Instrument Panel Airbag Assembly
E 26	Steering Lock Actuator Assembly
E 32	Room Temperature Sensor
E 33	Quick Heater Assembly
E 34	Quick Heater Assembly
E 35	A/C Amplifier Assembly
E 36	A/C Amplifier Assembly
E 40	Lower No.2 Instrument Panel Airbag Assembly
E 46	Front Power Outlet Socket Assembly
E 47	Center Airbag Sensor Assembly
E 50	Yaw Rate Sensor Assembly
E 51	Shift Lock Control ECU Sub-Assembly
E 52	Transmission Control Switch
E 53	Parking Brake Switch Assembly
E 55	No.2 A/C Control Assembly
E 80	Steering Actuator Assembly
E 81	A/C Amplifier Assembly
E 87	Differential Lock Switch
E 88	Deceleration Sensor
E 89	Heater Blower Switch
E 90	Cooling Box Assembly
E 97	Idle Up Switch
E 101	Headlight Leveling ECU Assembly
E 102	Power Steering ECU Assembly
E 105	Power Back Door Main Switch
E 109	Headlight Leveling ECU Assembly
E 116	Tire Pressure Warning Reset Switch
E 117	Main Body ECU
E 118	Main Body ECU
E 119	Combination Meter Assembly
E 120	Combination Meter Assembly
E 121	Steering Sensor
E 122	Spiral Cable Sub-Assembly
E 123	Engine Switch
E 124	ID Code Box
E 126	No.1 Indoor Electrical Key Antenna Assembly
E 127	Rear Power Outlet Socket Assembly
E 128	Certification ECU Assembly
E 129	Certification ECU Assembly
E 130	Certification ECU Assembly
E 143	Front Foot Illumination LH (No.1 Interior Illumination Light Assembly LH)
E 146	Front Foot Illumination RH (No.1 Interior Illumination Light Assembly RH)
E 180	Option Connector (Daytime Running Light)

 
Position of Parts in Instrument Panel <RHD Front Separate Seat Type From Aug. 2015 Production>

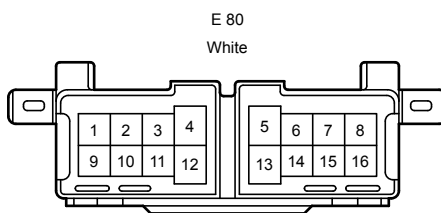


Position of Parts in Instrument Panel <RHD Front Separate Seat Type From Aug. 2015 Production>

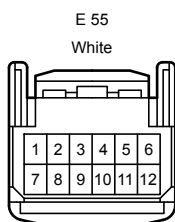


E118
White

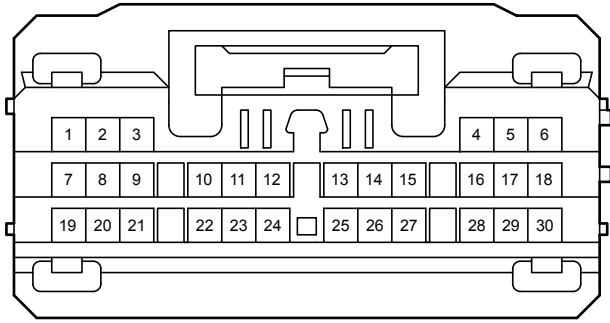


E119
Black

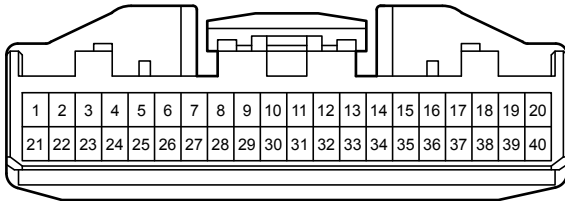 


E120
Black

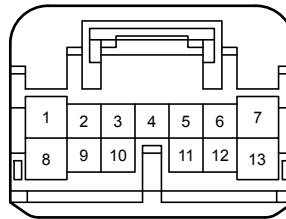 


E121
White

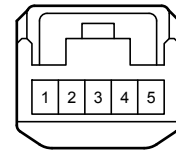 


E122
Black

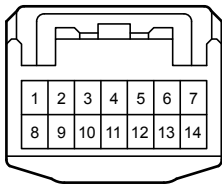 


E123
Black

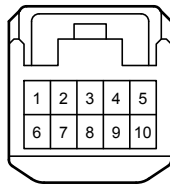 


E124
White

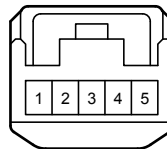 


E126
White

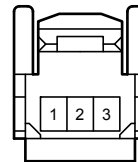 


E127
White

 

E128
White

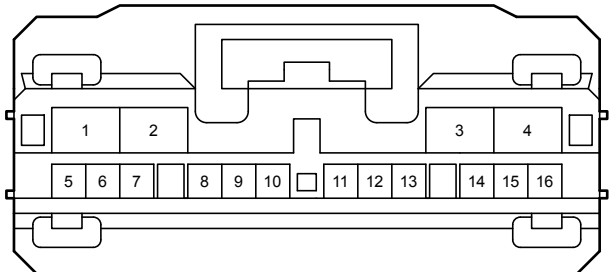 

E129
Black

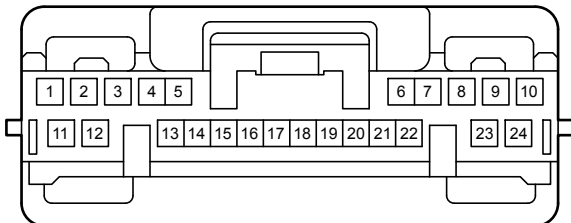 

E130
Black

