

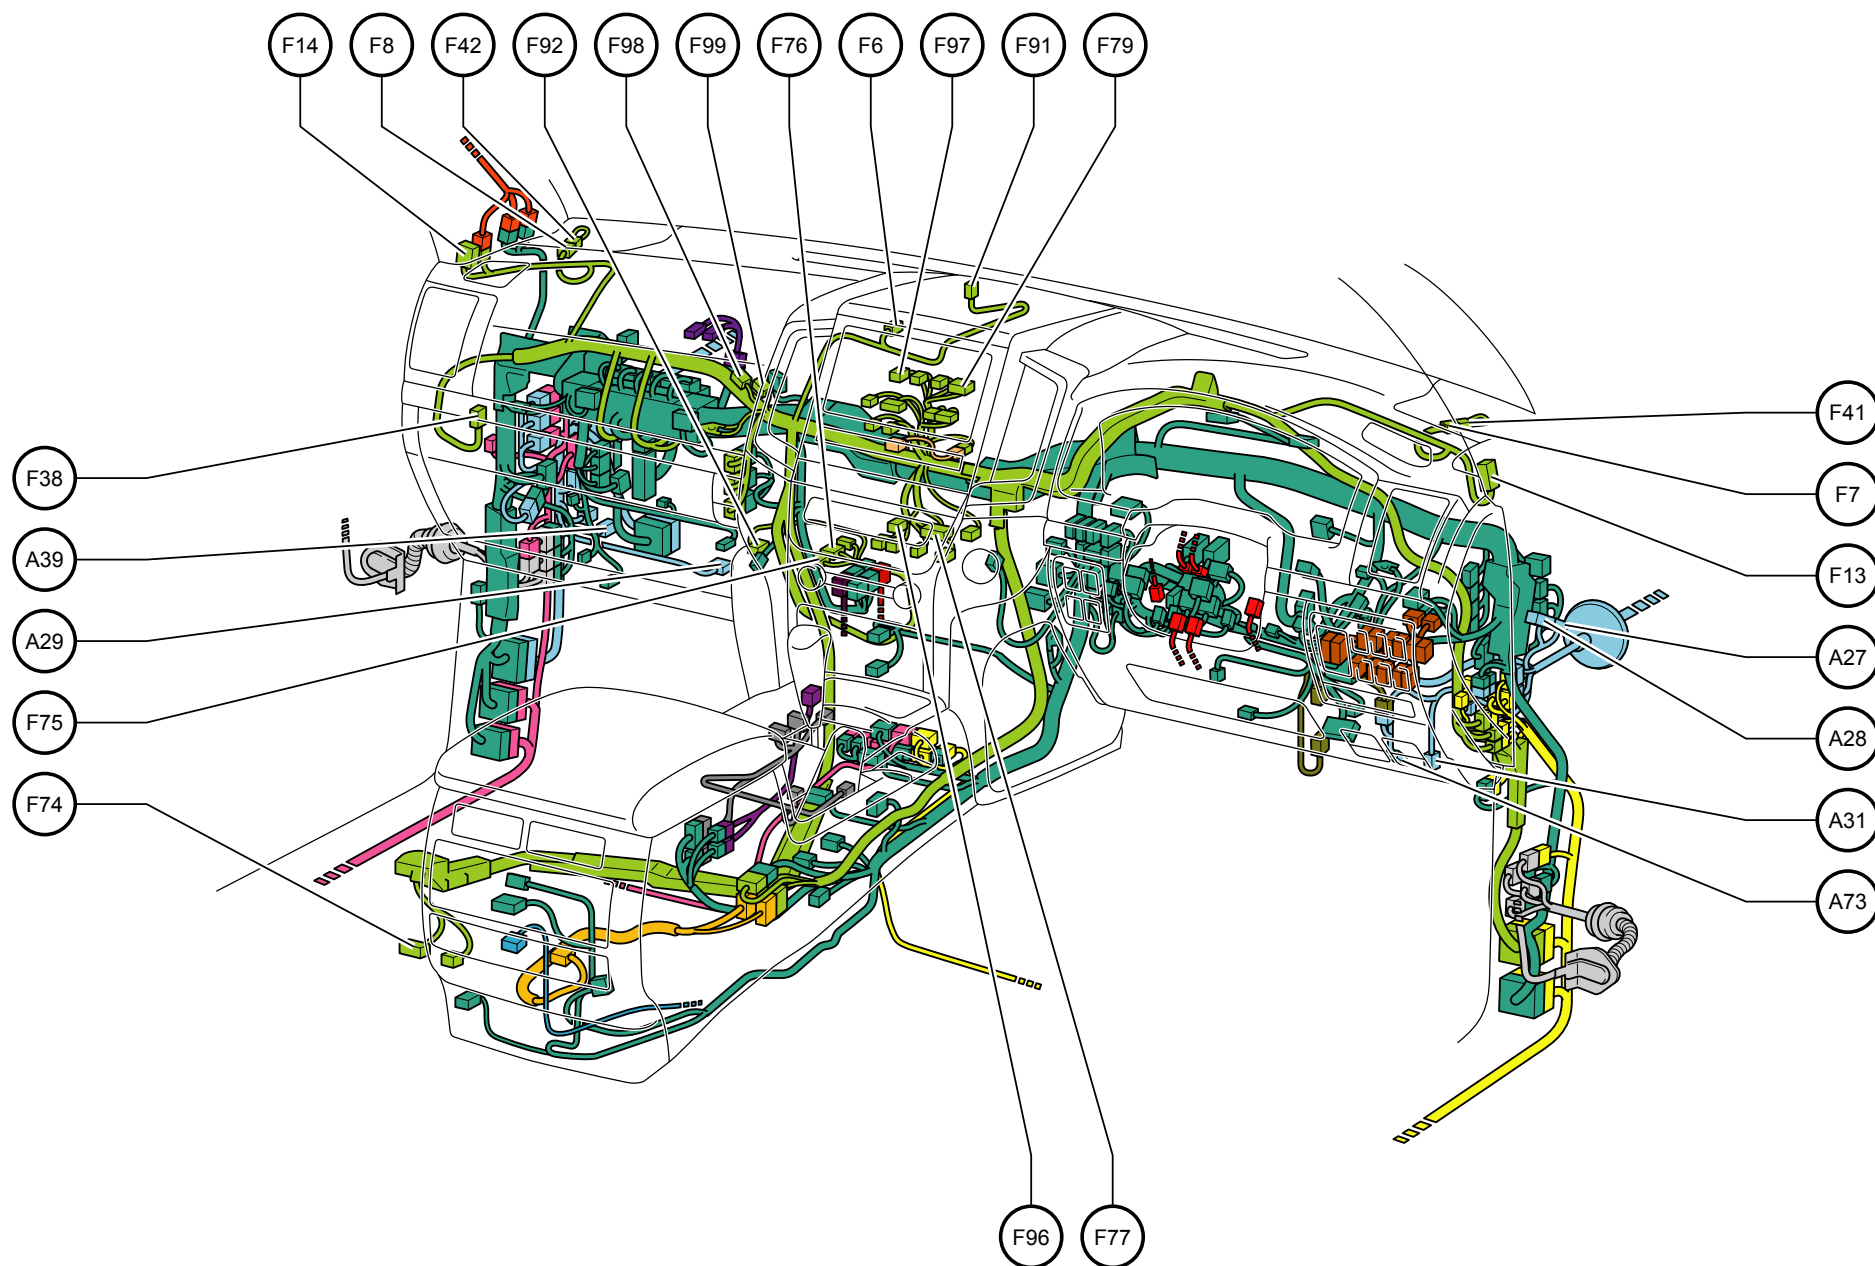
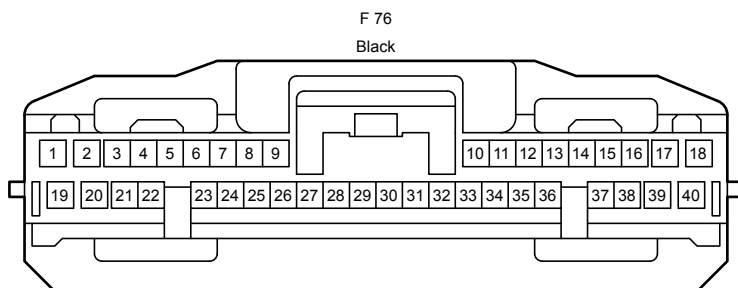
 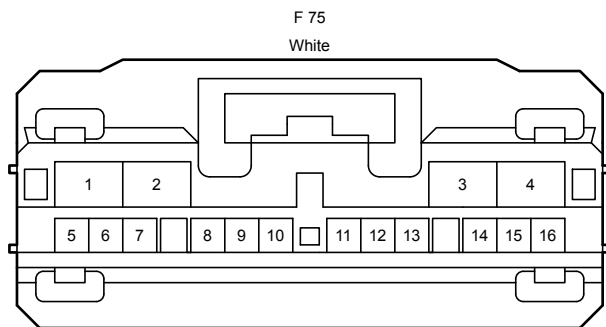
 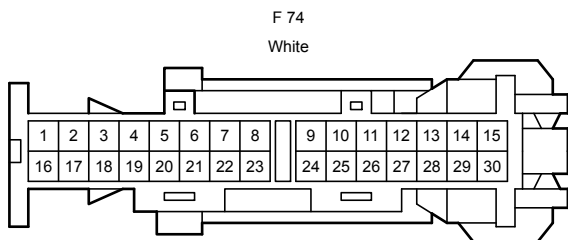
 
 
 
 
 
 


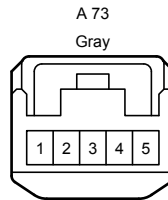
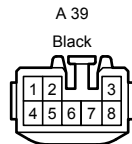
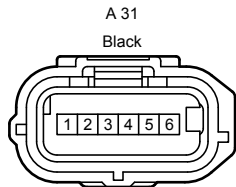
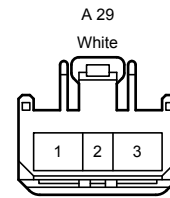


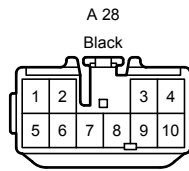

- A 27 Four Wheel Drive Control ECU
- A 28 Four Wheel Drive Control ECU
- A 29 Front Blower with Fan Motor Sub-Assembly
- A 31 Accelerator Pedal Sensor Assembly
- A 39 Stop Light Control Relay Assembly
- A 73 Stop Light Switch Assembly

- F 6 Front No.4 Speaker Assembly
- F 7 Front No.2 Speaker Assembly RH , Short Connector
- F 8 Front No.2 Speaker Assembly LH , Short Connector
- F 13 Front No.3 Speaker Assembly RH
- F 14 Front No.3 Speaker Assembly LH
- F 38 Airbag Cut Off Switch Cylinder Sub-Assembly
- F 41 Short Connector
- F 42 Short Connector
- F 74 Stereo Component Amplifier Assembly
- F 75 Parking Assist ECU
- F 76 Parking Assist ECU
- F 77 Multi-Media Module Receiver Assembly
- F 79 Multi-Display Assembly
- F 91 Automatic Light Control Sensor
- F 92 Clearance Warning ECU Assembly
- F 96 Multi-Media Module Receiver Assembly
- F 97 Multi-Display Assembly
- F 98 Junction Terminal
- F 99 Junction Connector

Position of Parts in Instrument Panel <RHD Front Separate Seat Type From Aug. 2015 Production>

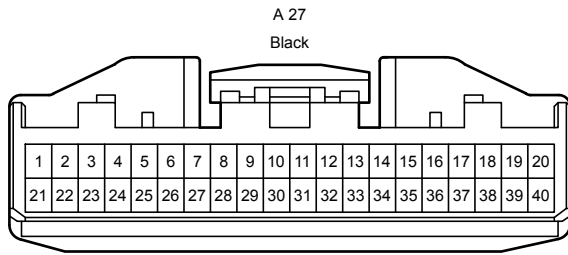

Position of Parts in Instrument Panel <RHD Front Separate Seat Type From Aug. 2015 Production>

