

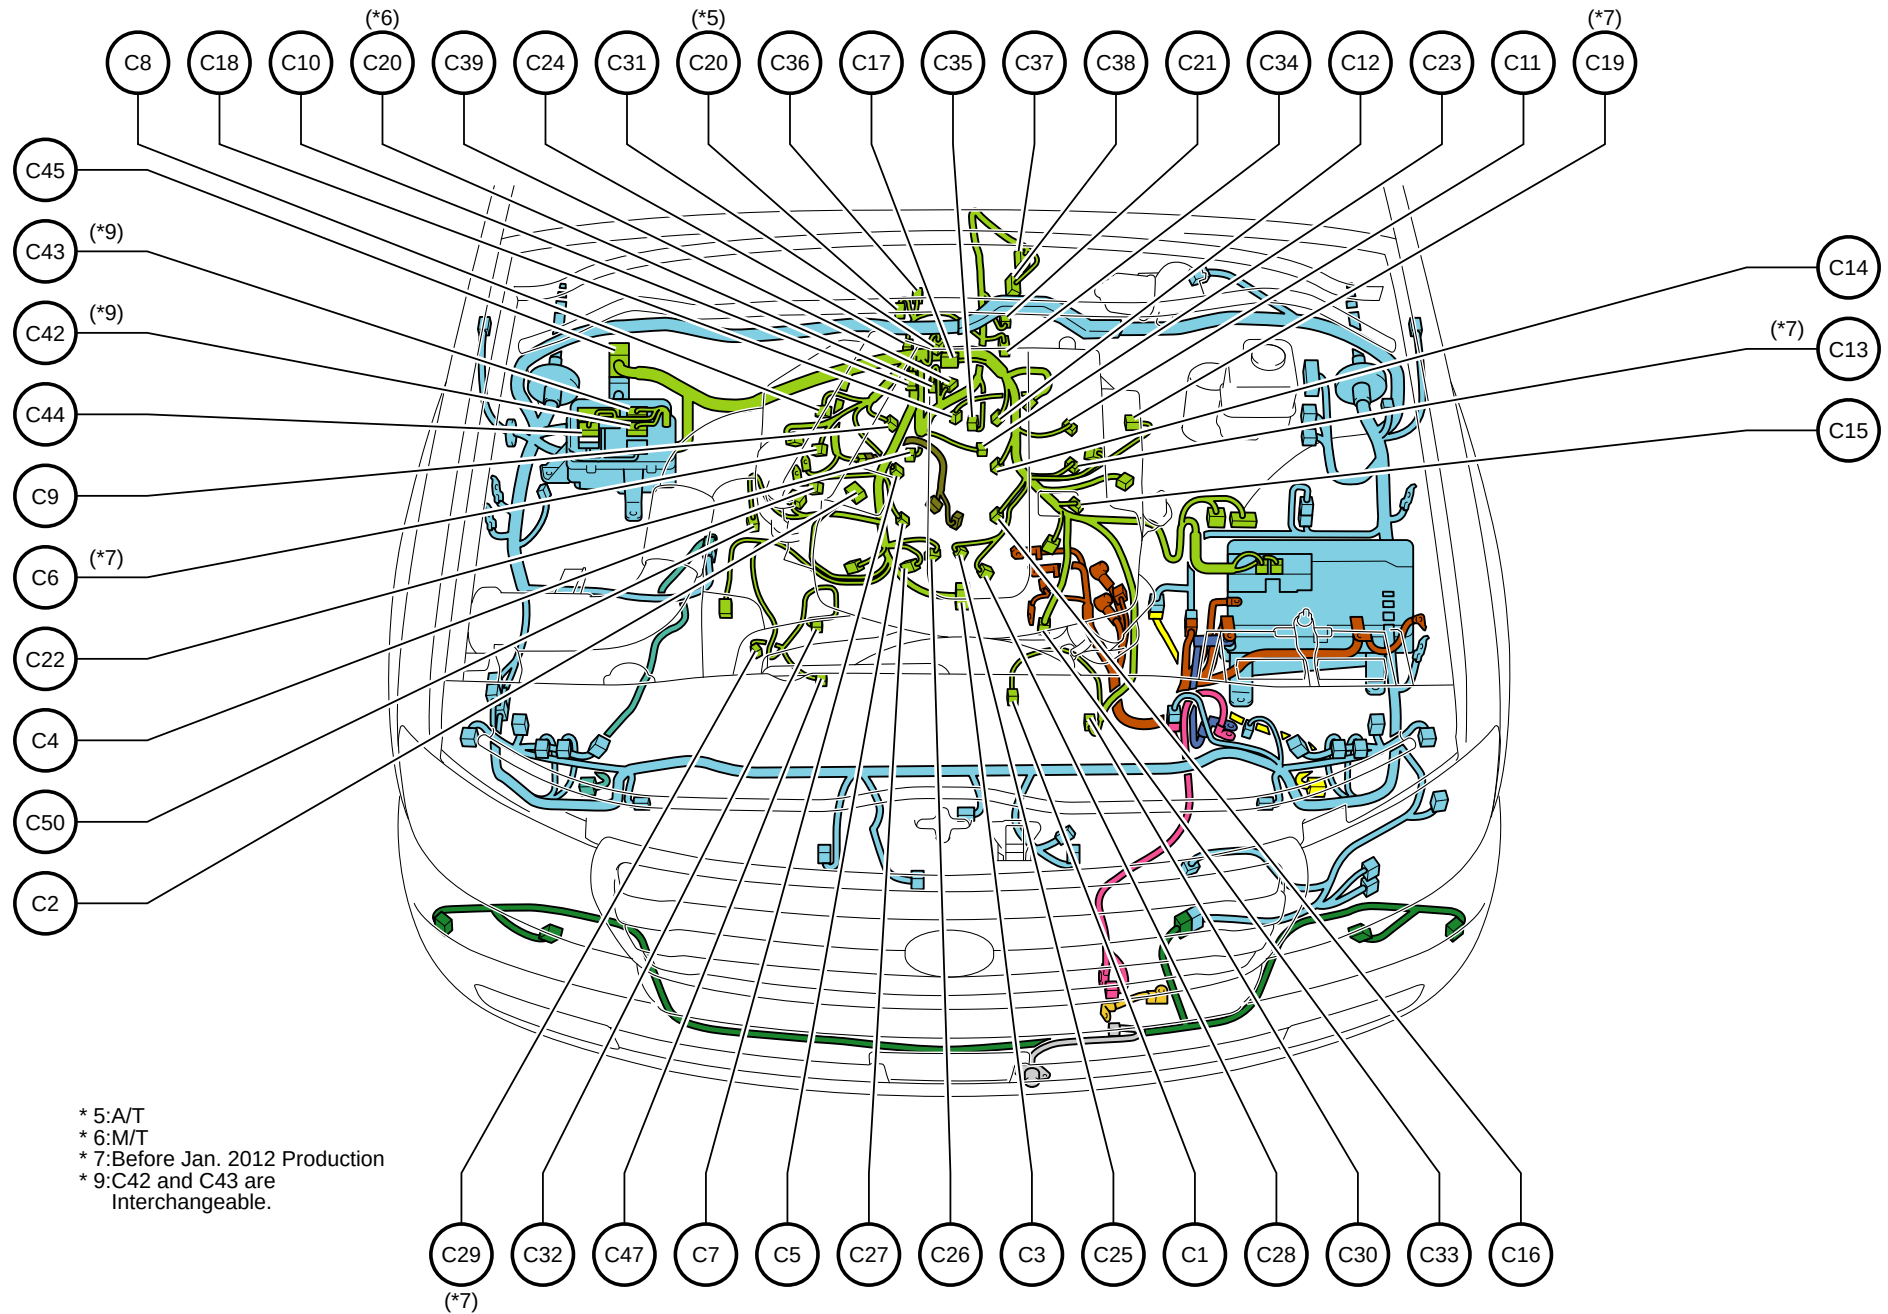
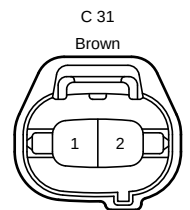
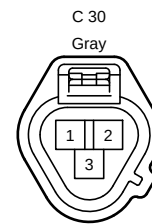
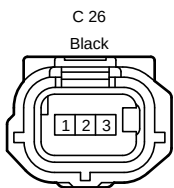
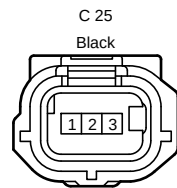
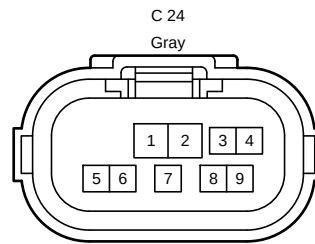
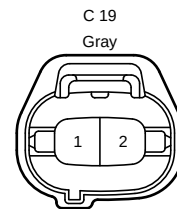
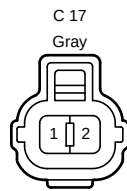
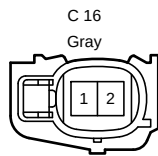
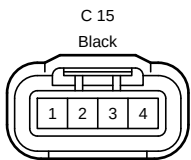
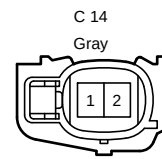
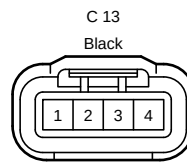
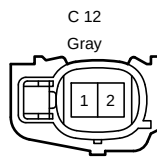
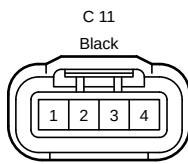
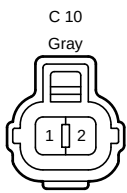
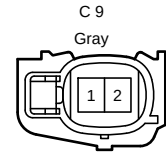
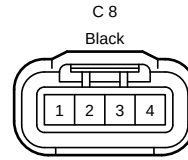
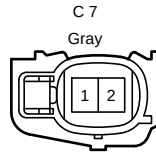
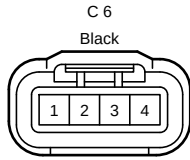
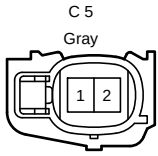
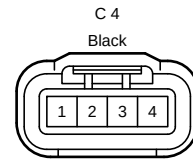
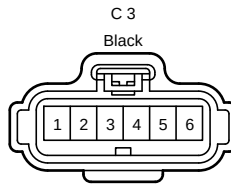


Position of Parts in Engine Compartment <LHD 1GR-FE Before Aug. 2015 Production>

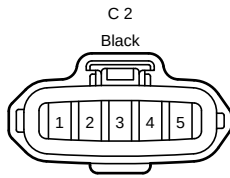

- C 1 Crankshaft Position Sensor
- C 2 Mass Air Flow Meter
- C 3 Throttle Body Assembly
- C 4 Ignition Coil Assembly No.1
- C 5 Fuel Injector Assembly No.1
- C 6 Ignition Coil Assembly No.3
- C 7 Fuel Injector Assembly No.3
- C 8 Ignition Coil Assembly No.5
- C 9 Fuel Injector Assembly No.5
- C 10 Noise Filter (Ignition Bank 1)
- C 11 Ignition Coil Assembly No.6
- C 12 Fuel Injector Assembly No.6
- C 13 Ignition Coil Assembly No.4
- C 14 Fuel Injector Assembly No.4
- C 15 Ignition Coil Assembly No.2
- C 16 Fuel Injector Assembly No.2
- C 17 Noise Filter (Ignition Bank 2)
- C 18 E.F.I. Engine Coolant Temperature Sensor
- C 19 Purge VSV
- C 20 Oxygen Sensor (Bank 1 Sensor 2)
- C 21 Oxygen Sensor (Bank 2 Sensor 2)
- C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- C 24 Park/Neutral Position Switch
- C 25 VVT Sensor (Bank 2 Intake Side)
- C 26 VVT Sensor (Bank 1 Intake Side)
- C 27 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
- C 28 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
- C 29 Power Steering Oil Pressure Switch
- C 30 Cooler Compressor Assembly
- C 31 VSV (ACIS)
- C 32 Engine Oil Level Sensor
- C 33 Oil Pressure Sender Gage Assembly
- C 34 Electronically Controlled Transmission Solenoid
- C 35 Transmission Revolution Sensor (Turbine)
- C 36 Transmission Revolution Sensor (Counter Gear)
- C 37 Transfer Shift Actuator Assembly
- C 38 Transfer Shift Actuator Assembly
- C 39 Back-Up Light Switch Assembly
- C 42 Junction Connector
- C 43 Junction Connector
- C 44 Junction Connector
- C 45 ECM
- C 47 Oil Pressure Sender Gage Assembly
- C 50 Mass Air Flow Meter

Position of Parts in Engine Compartment <LHD 1GR-FE Before Aug. 2015 Production>

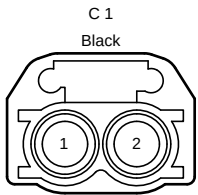

Position of Parts in Engine Compartment <LHD 1GR-FE Before Aug. 2015 Production>

