

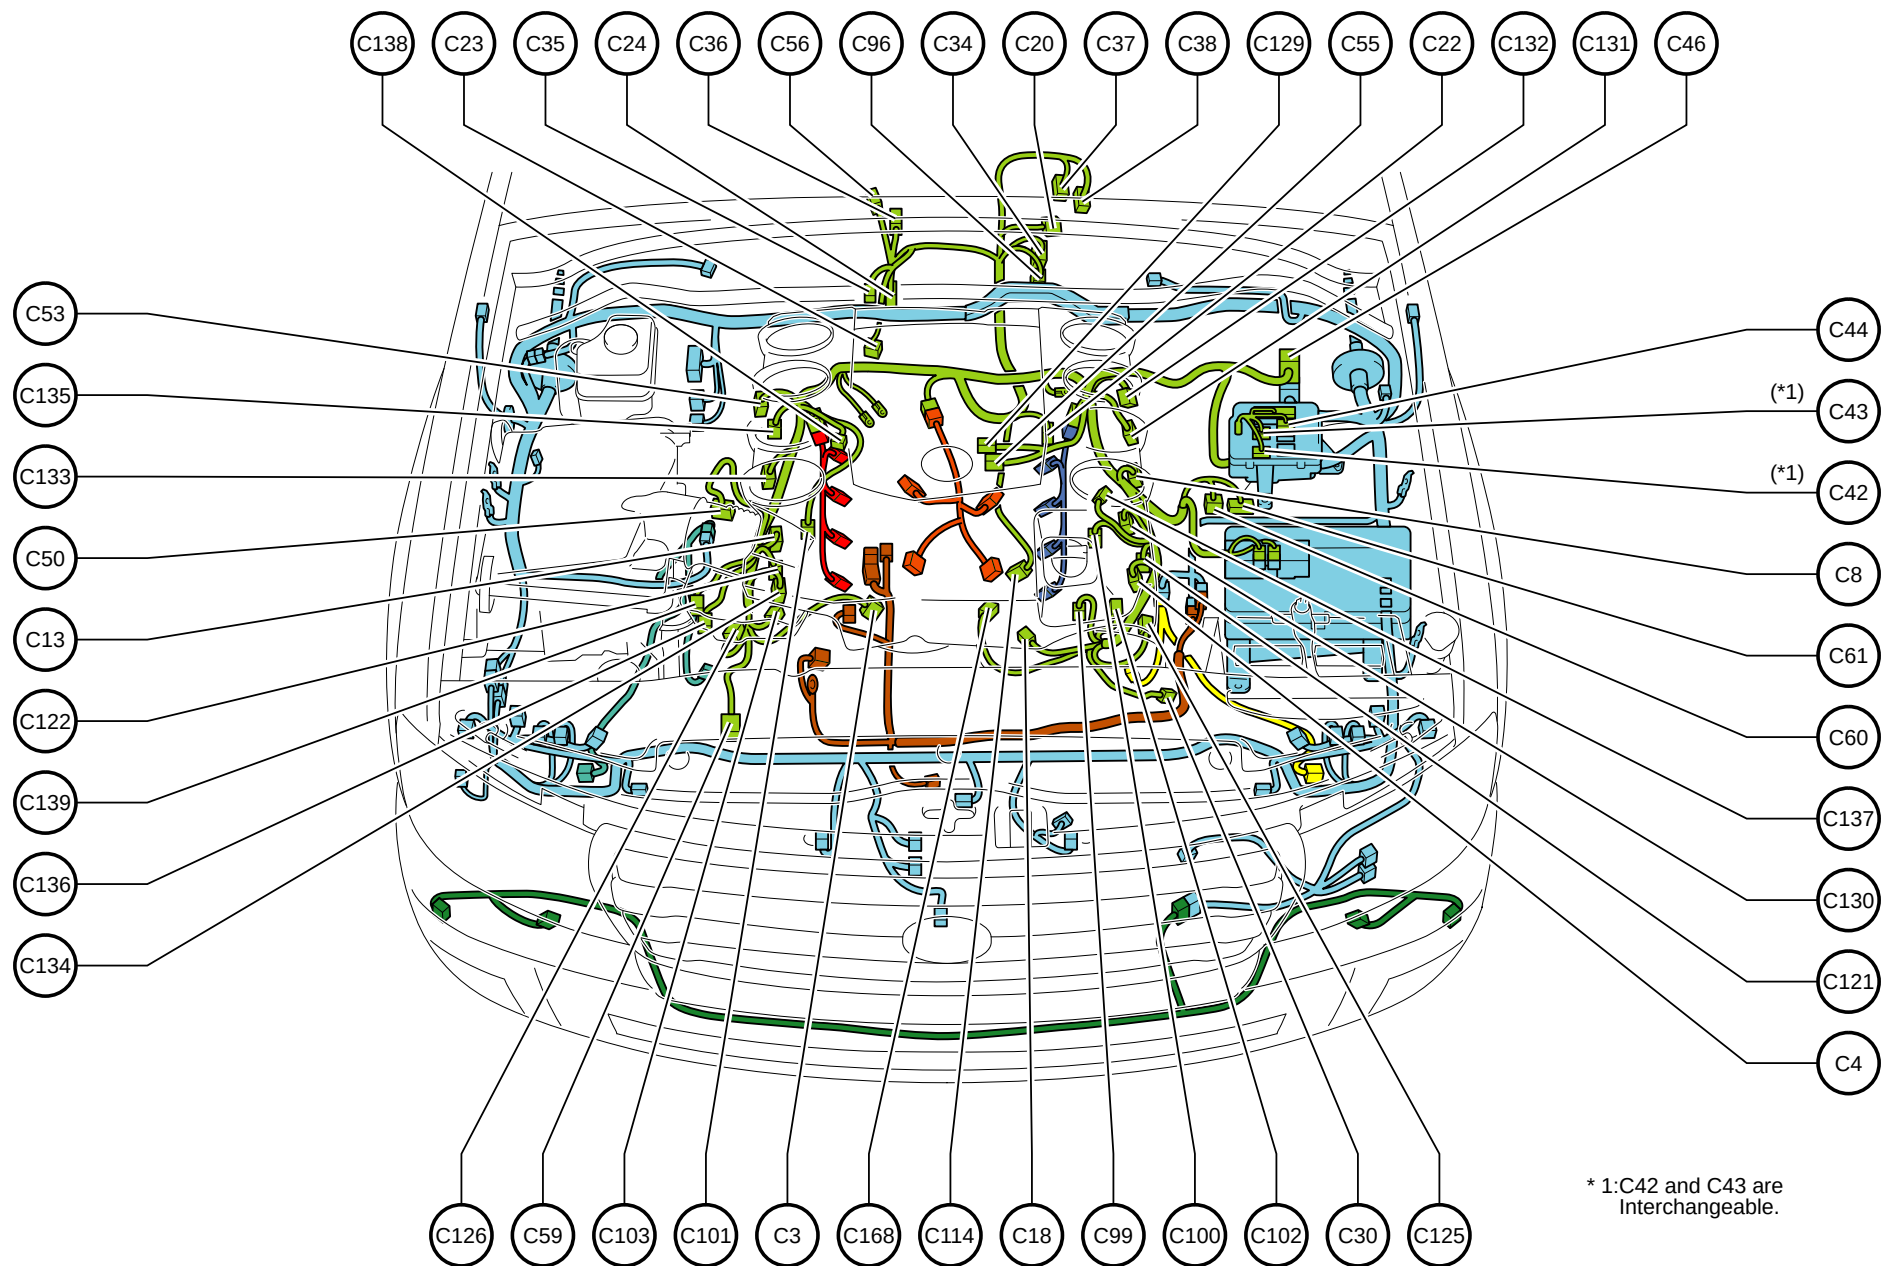
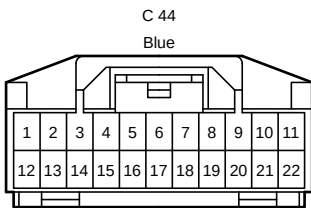
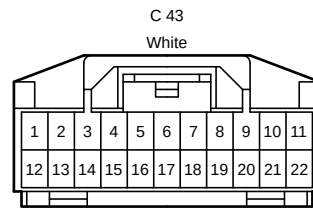
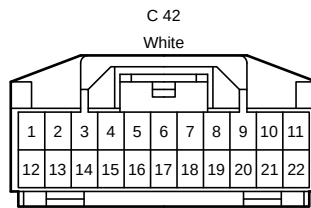
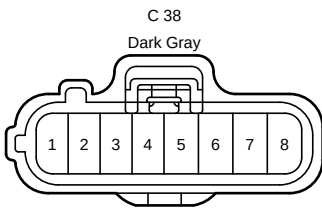
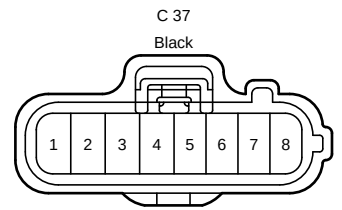
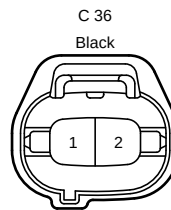
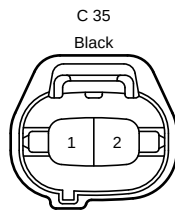
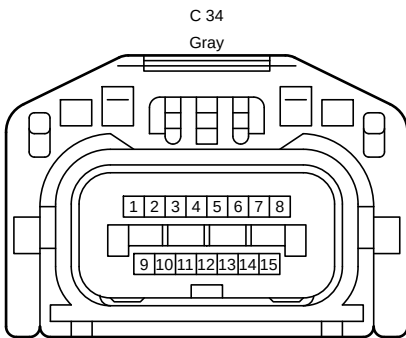
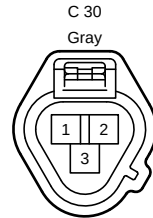
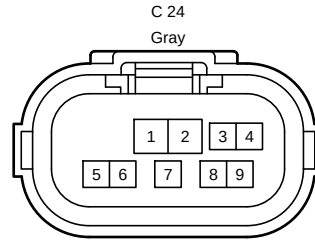
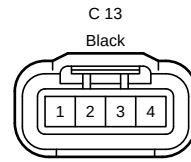
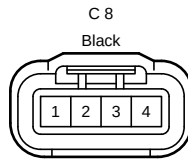


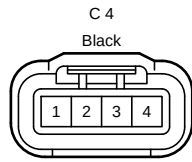


- C 3 Throttle Body Assembly
- C 4 Ignition Coil Assembly No.1
- C 8 Ignition Coil Assembly No.5
- C 13 Ignition Coil Assembly No.4
- C 18 E.F.I. Engine Coolant Temperature Sensor
- C 20 Oxygen Sensor (Bank 1 Sensor 2)
- C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- C 24 Park/Neutral Position Switch
- C 30 Cooler Compressor Assembly
- C 34 Electronically Controlled Transmission Solenoid
- C 35 Transmission Revolution Sensor (Turbine)
- C 36 Transmission Revolution Sensor (Counter Gear)
- C 37 Transfer Shift Actuator Assembly
- C 38 Transfer Shift Actuator Assembly
- C 42 Junction Connector
- C 43 Junction Connector
- C 44 Junction Connector
- C 46 ECM
- C 50 Mass Air Flow Meter
- C 53 Ignition Coil Assembly No.8
- C 55 Purge VSV
- C 56 Oxygen Sensor (Bank 2 Sensor 2)
- C 59 Power Steering Oil Pressure Sensor
- C 60 Air Injection Control Driver
- C 61 Air Injection Control Driver
- C 96 Electronically Controlled Transmission Solenoid
- C 99 Camshaft Position Sensor
- C 100 VVT Sensor (Bank 1 Intake Side)
- C 101 VVT Sensor (Bank 2 Intake Side)
- C 102 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
- C 103 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
- C 114 Crankshaft Position Sensor
- C 121 VVT Sensor (Bank 1 Exhaust Side)
- C 122 VVT Sensor (Bank 2 Exhaust Side)
- C 125 Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
- C 126 Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)
- C 129 VSV (ACIS)
- C 130 Ignition Coil Assembly No.3
- C 131 Ignition Coil Assembly No.7
- C 132 Noise Filter (Ignition Bank 1)
- C 133 Ignition Coil Assembly No.6
- C 134 Ignition Coil Assembly No.2
- C 135 Noise Filter (Ignition Bank 2)
- C 136 Air Pump Assembly
- C 137 Air Switching Valve (Bank 1)
- C 138 Air Switching Valve (Bank 2)
- C 139 Air Pump Assembly
- C 168 E.F.I. Vacuum Sensor Assembly

Position of Parts in Engine Compartment <RHD 1UR-FE Before Aug. 2015 Production>

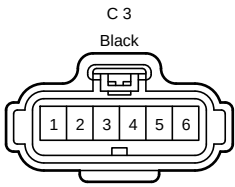

Position of Parts in Engine Compartment <RHD 1UR-FE Before Aug. 2015 Production>

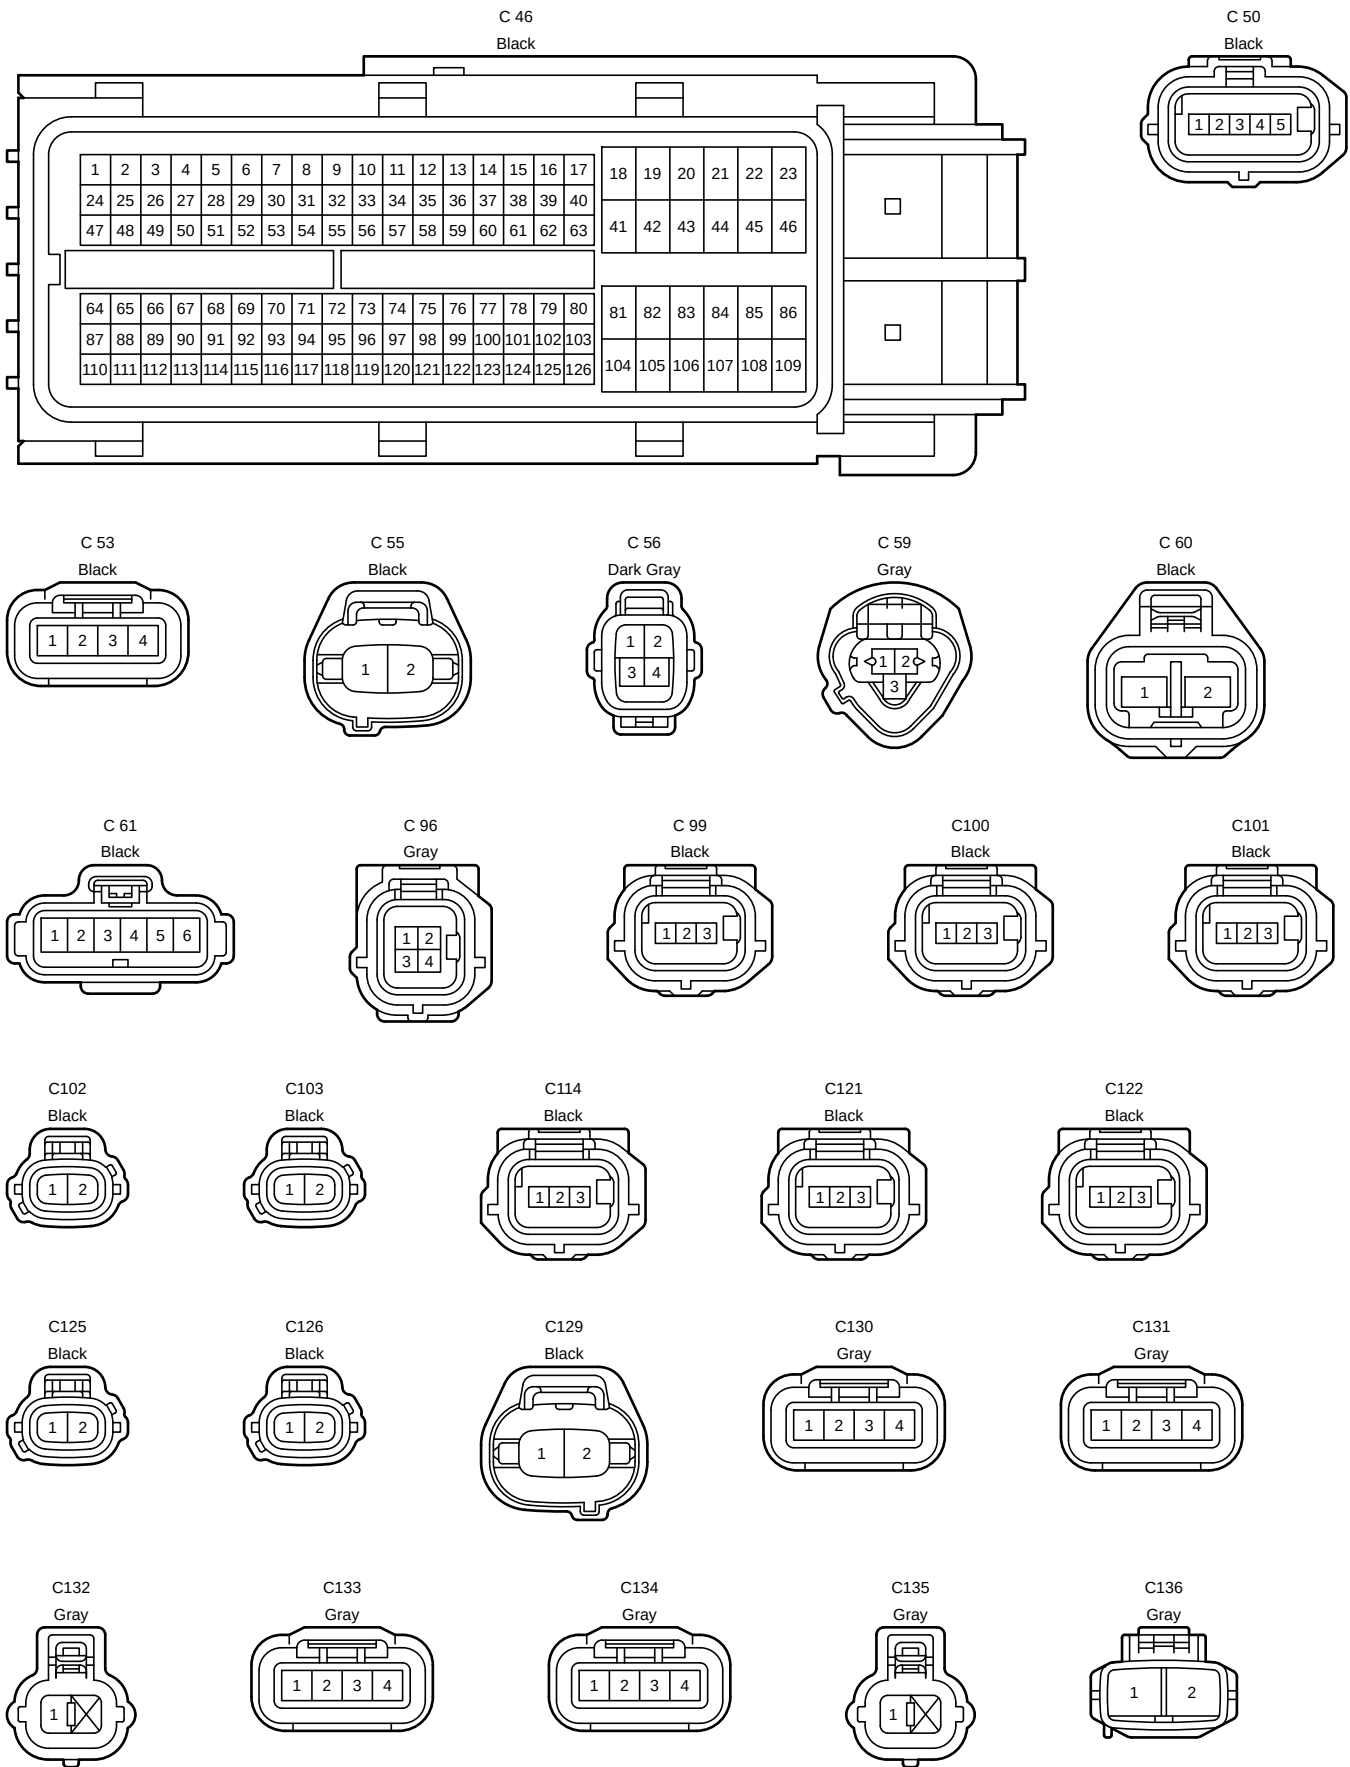


---

Position of Parts in Engine Compartment <RHD 1UR-FE Before Aug. 2015 Production>


C137

Black

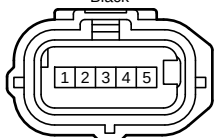


C138

Black

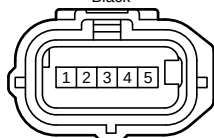

C139

Black

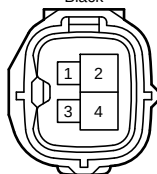

C168

Black

