

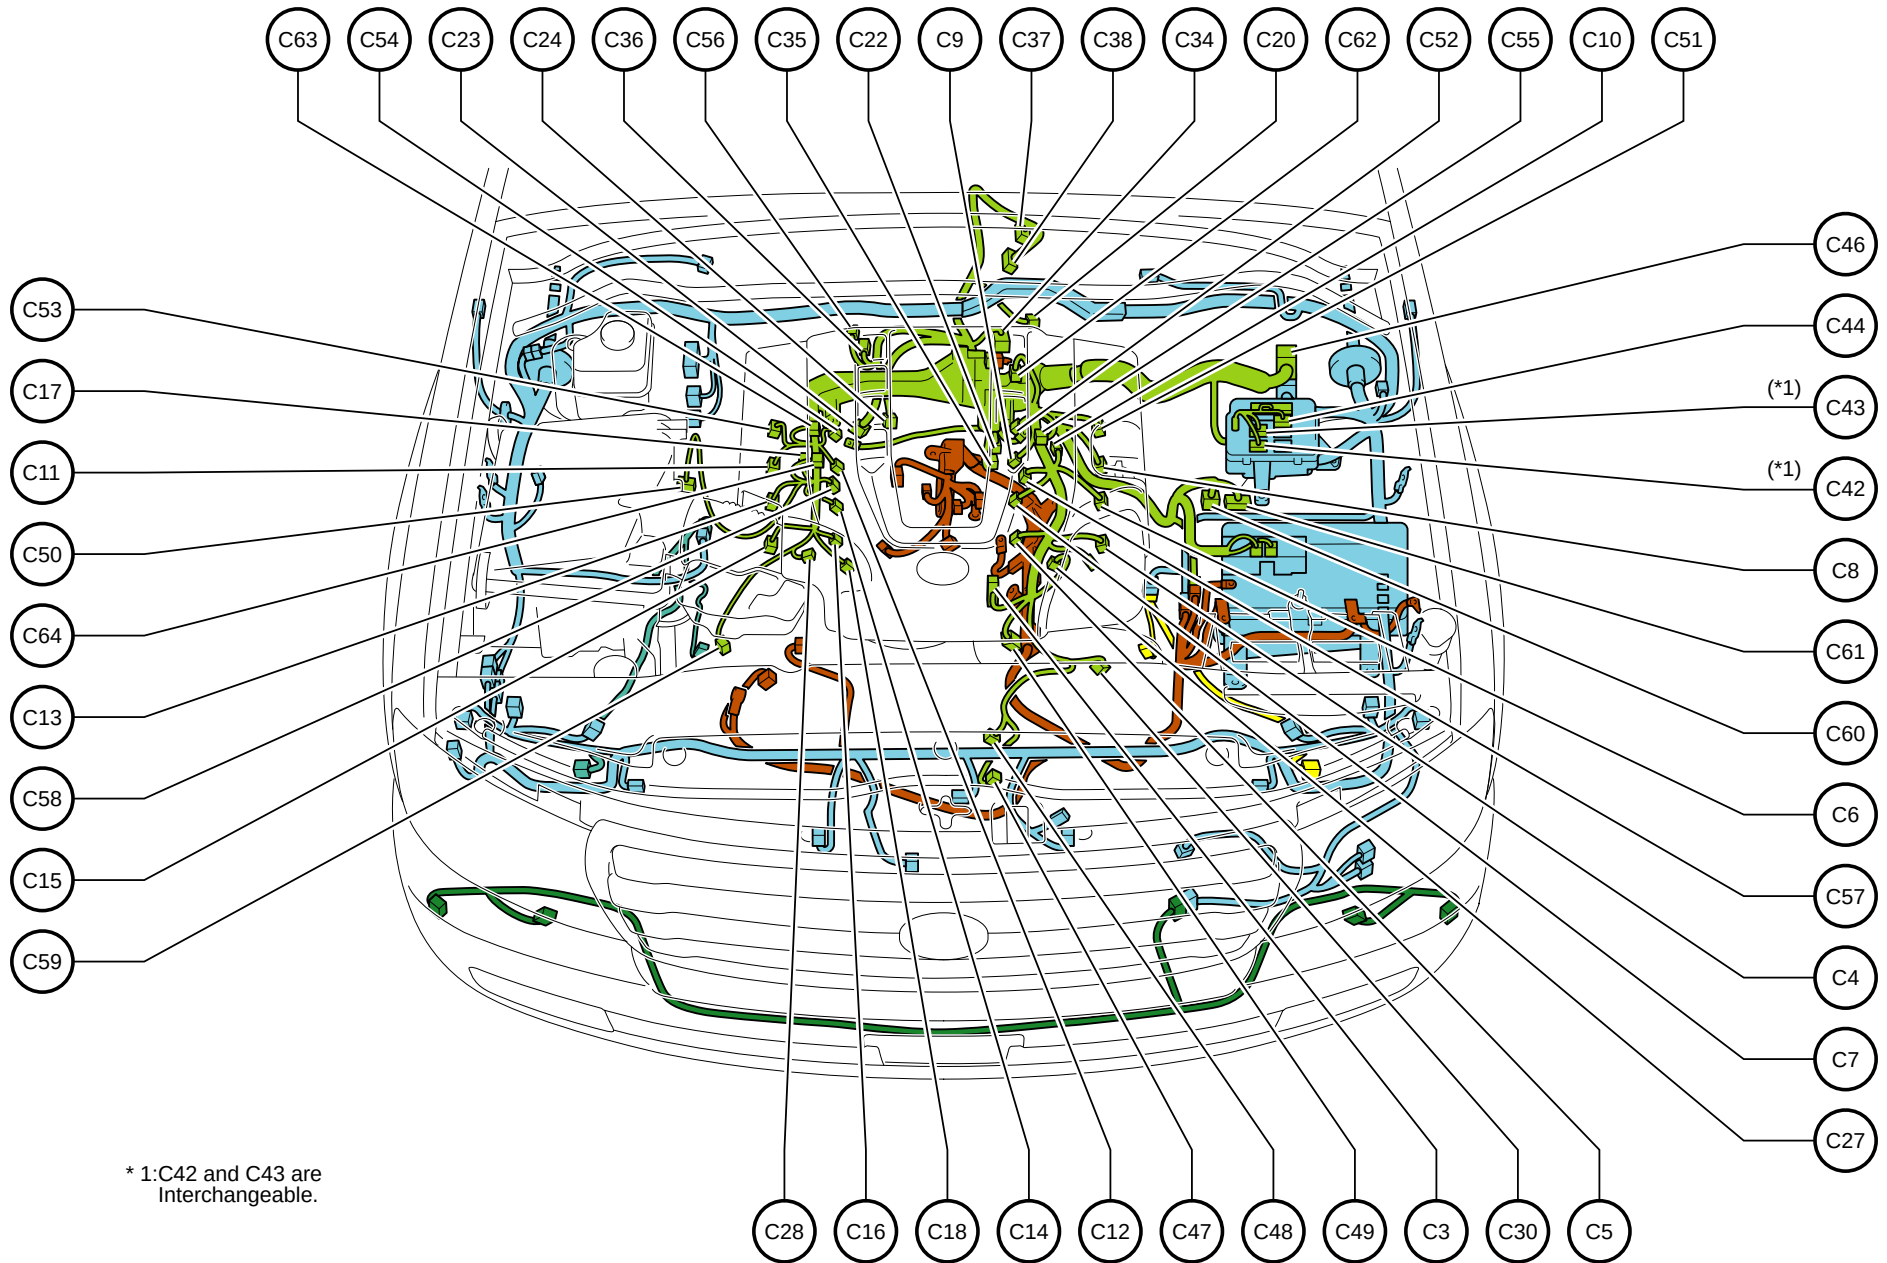
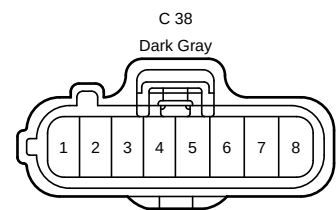
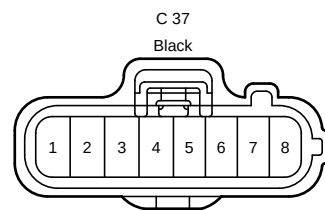
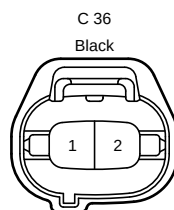
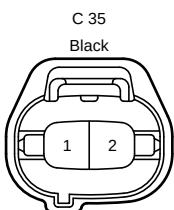
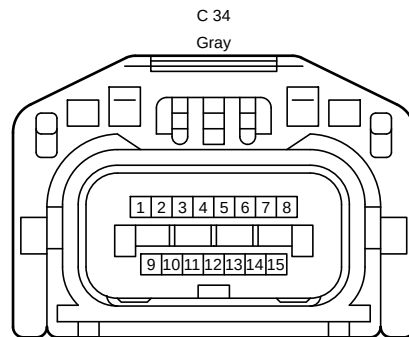
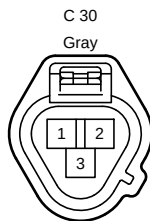
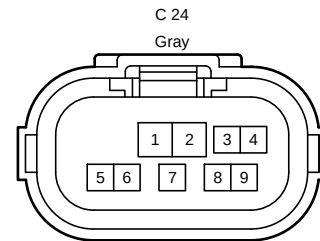
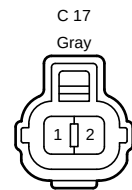
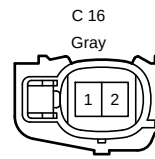
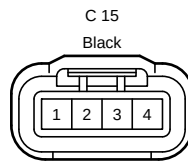
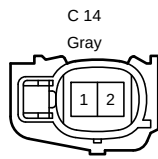
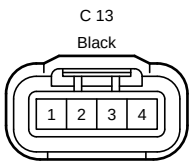
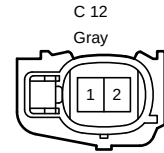
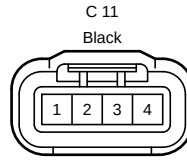
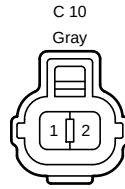
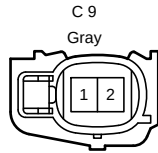
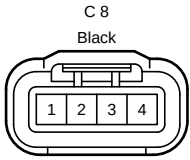
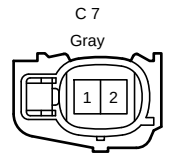
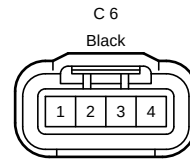
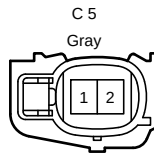


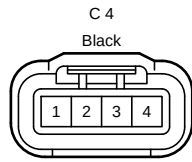


- C 3 Throttle Body Assembly
- C 4 Ignition Coil Assembly No.1
- C 5 Fuel Injector Assembly No.1
- C 6 Ignition Coil Assembly No.3
- C 7 Fuel Injector Assembly No.3
- C 8 Ignition Coil Assembly No.5
- C 9 Fuel Injector Assembly No.5
- C 10 Noise Filter (Ignition Bank 1)
- C 11 Ignition Coil Assembly No.6
- C 12 Fuel Injector Assembly No.6
- C 13 Ignition Coil Assembly No.4
- C 14 Fuel Injector Assembly No.4
- C 15 Ignition Coil Assembly No.2
- C 16 Fuel Injector Assembly No.2
- C 17 Noise Filter (Ignition Bank 2)
- C 18 E.F.I. Engine Coolant Temperature Sensor
- C 20 Oxygen Sensor (Bank 1 Sensor 2)
- C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- C 24 Park/Neutral Position Switch
- C 27 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
- C 28 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
- C 30 Cooler Compressor Assembly
- C 34 Electronically Controlled Transmission Solenoid
- C 35 Transmission Revolution Sensor (Turbine)
- C 36 Transmission Revolution Sensor (Counter Gear)
- C 37 Transfer Shift Actuator Assembly
- C 38 Transfer Shift Actuator Assembly
- C 42 Junction Connector
- C 43 Junction Connector
- C 44 Junction Connector
- C 46 ECM
- C 47 Oil Pressure Sender Gage Assembly
- C 48 Crankshaft Position Sensor
- C 49 Camshaft Position Sensor
- C 50 Mass Air Flow Meter
- C 51 Ignition Coil Assembly No.7
- C 52 Fuel Injector Assembly No.7
- C 53 Ignition Coil Assembly No.8
- C 54 Fuel Injector Assembly No.8
- C 55 Purge VSV
- C 56 Oxygen Sensor (Bank 2 Sensor 2)
- C 57 VVT Sensor (Bank 1)
- C 58 VVT Sensor (Bank 2)
- C 59 Power Steering Oil Pressure Sensor
- C 60 Air Injection Control Driver
- C 61 Air Injection Control Driver
- C 62 VSV (ACIS)
- C 63 VSV (for No.1 Air Switching Valve)
- C 64 VSV (for No.2 Air Switching Valve)

Position of Parts in Engine Compartment <RHD 2UZ-FE Before Aug. 2015 Production>

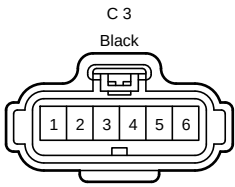


Position of Parts in Engine Compartment <RHD 2UZ-FE Before Aug. 2015 Production>


C 42
White

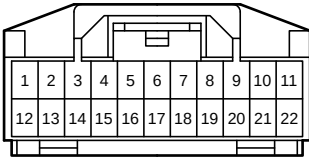


C 43
White

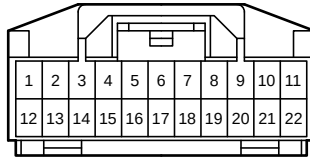


C 44
Blue

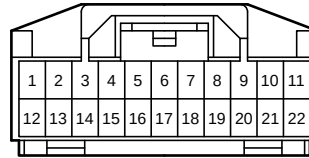

C 46
Black

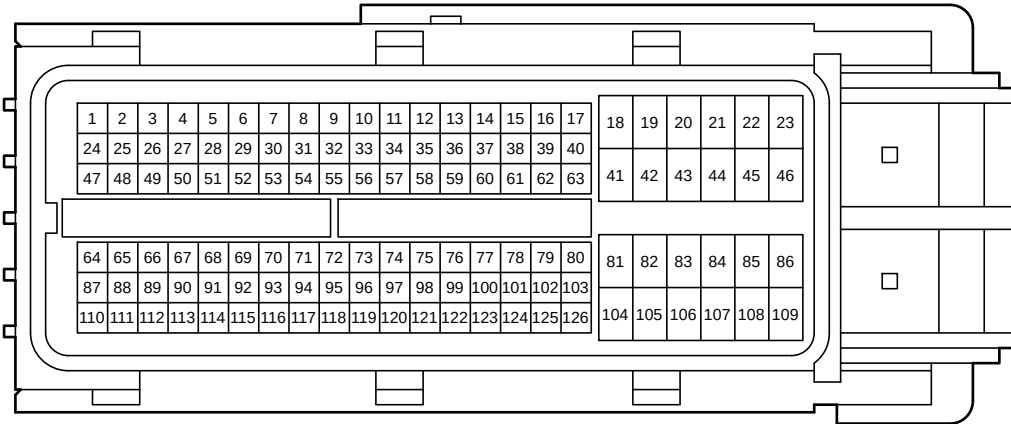


C 47
Black

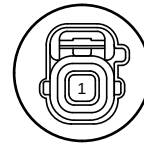

C 48
Dark Gray




C 49
Gray

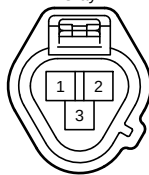


C 50
Black



 
C 51
Black




C 52
Gray

 


C 53
Black

 

C 54
Gray

 

C 55
Black

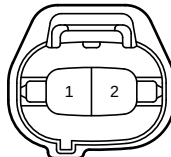

C 56
Dark Gray




C 57
Dark Gray




C 58
Dark Gray




C 59
Gray

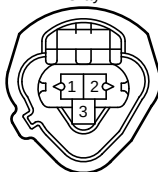


C 60
Black

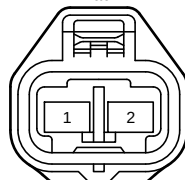


C 61
Black

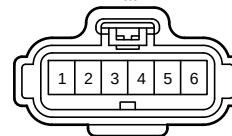

C 62
Black

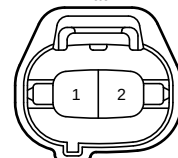

C 63
Brown

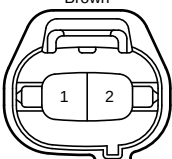

C 64
Brown

