

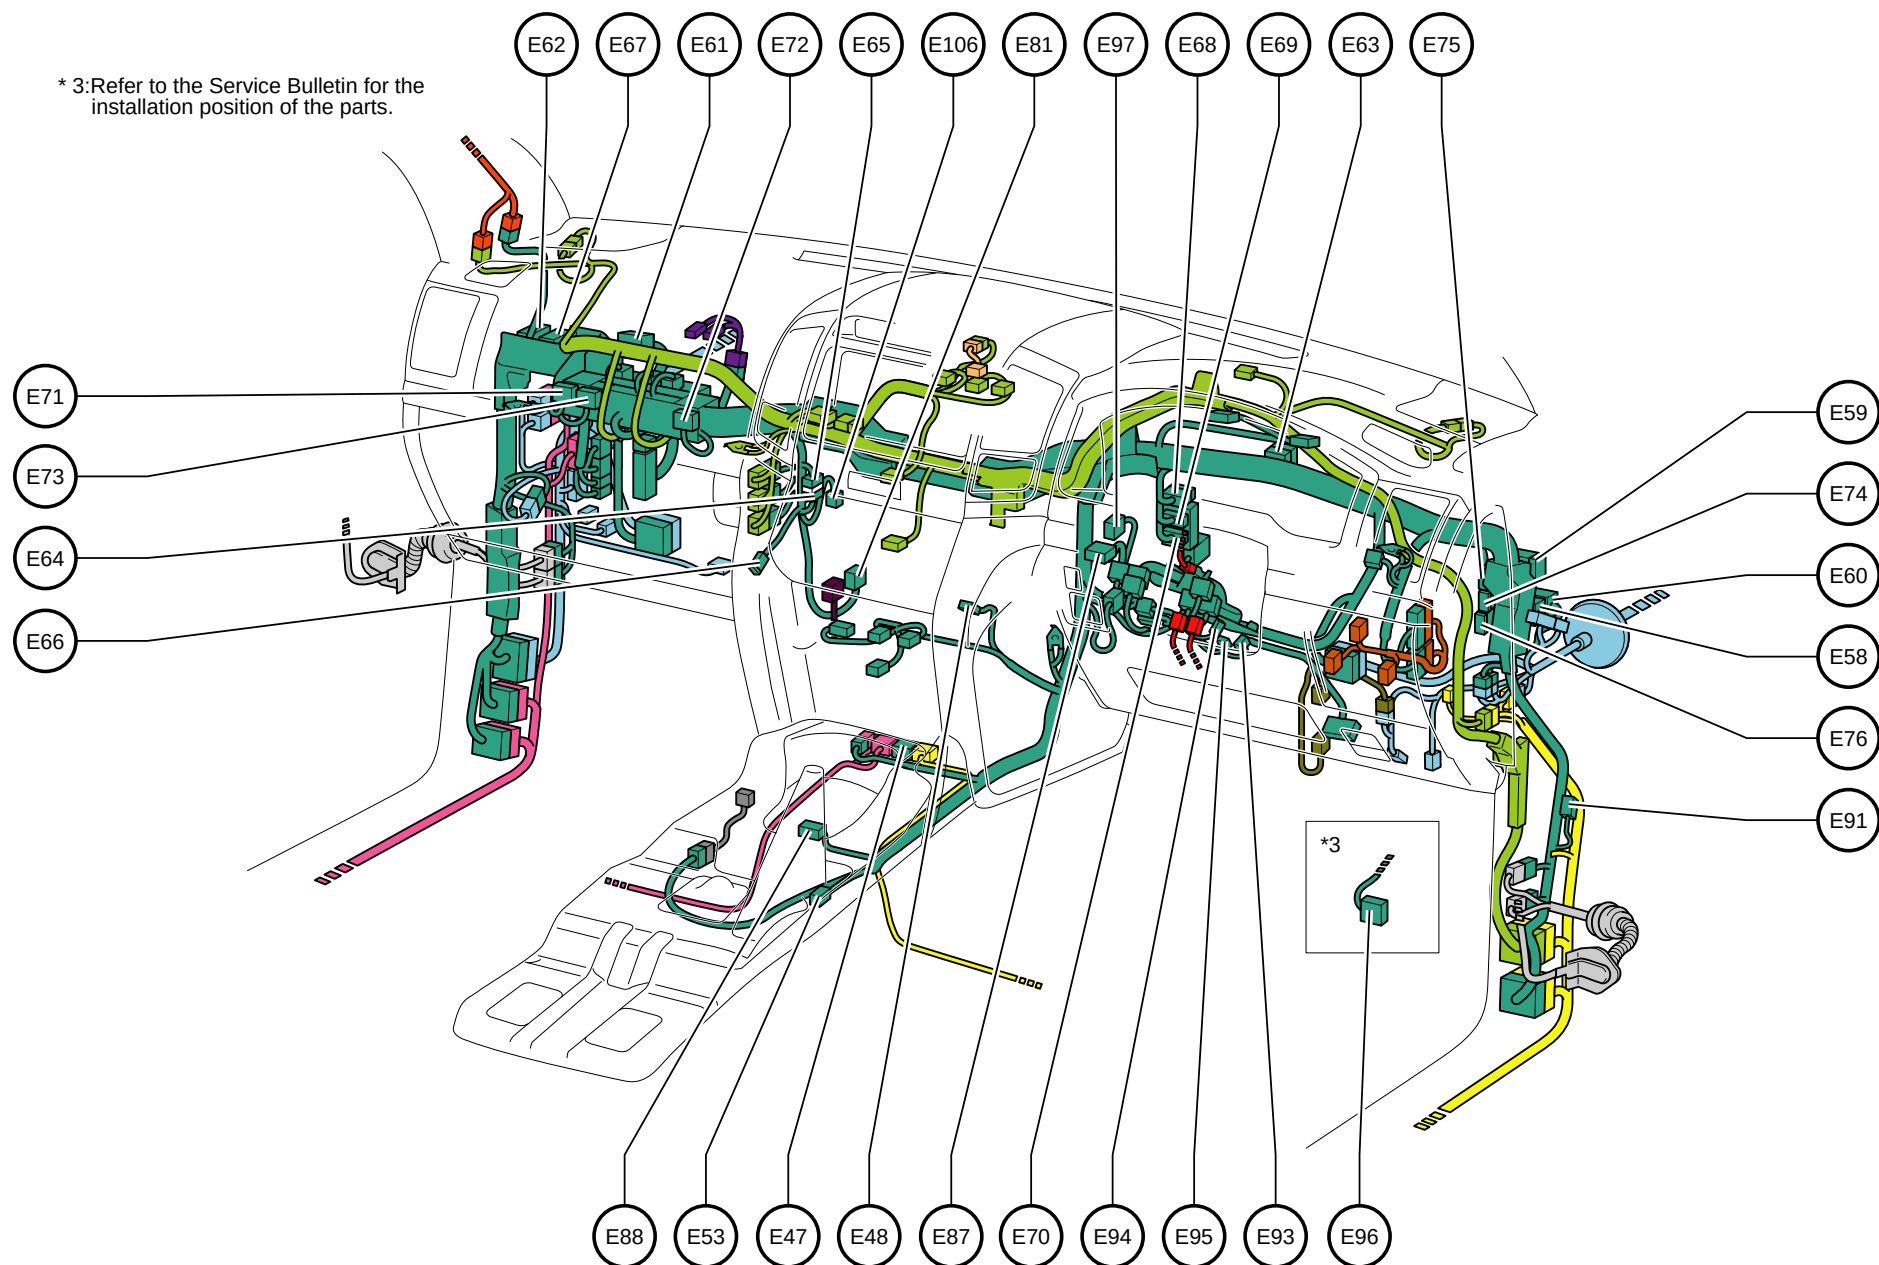
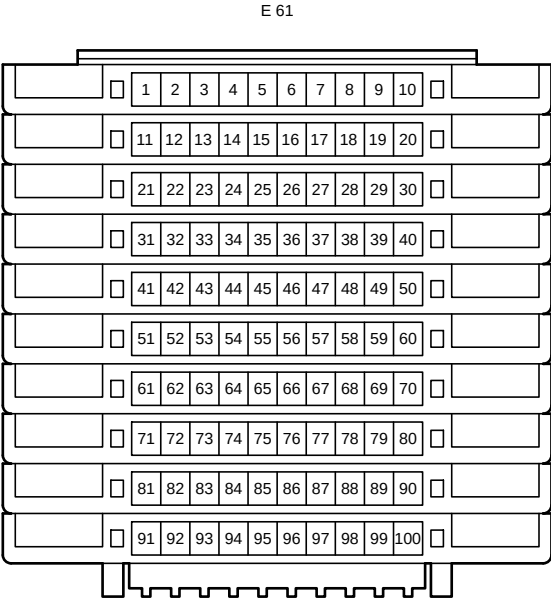
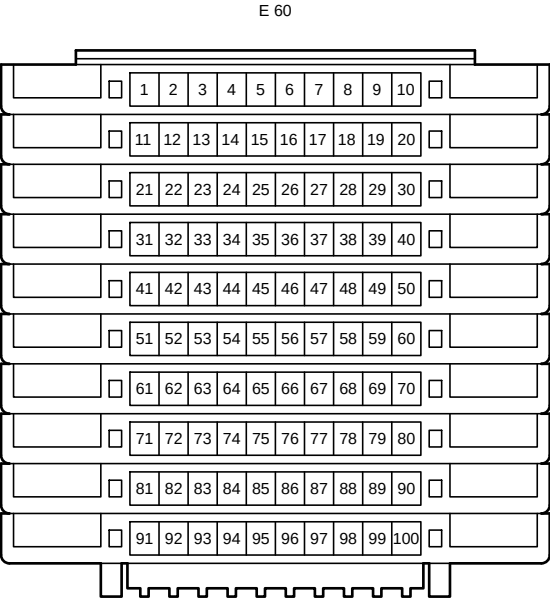
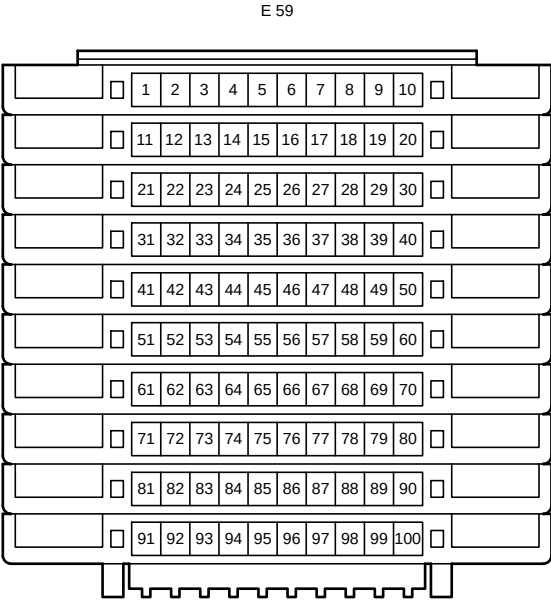
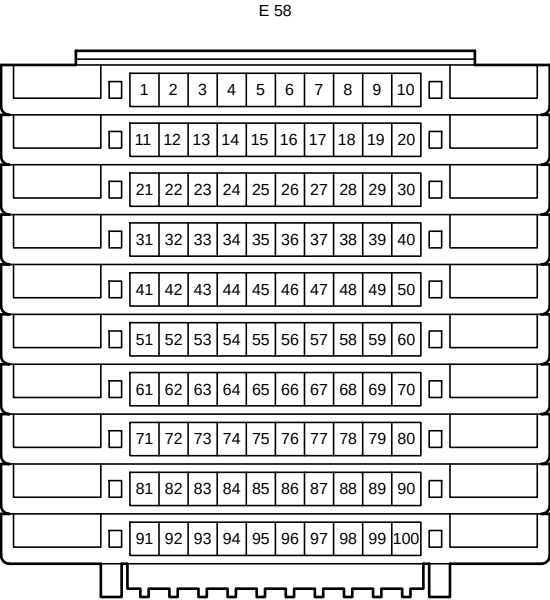


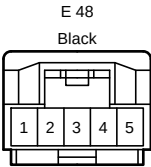

- E 47 Center Airbag Sensor Assembly
- E 48 Transfer Position Switch
- E 53 Parking Brake Switch Assembly
- E 58 Junction Connector
- E 59 Junction Connector
- E 60 Junction Connector
- E 61 Junction Connector
- E 62 Junction Connector
- E 63 Junction Connector
- E 64 Junction Connector
- E 65 Junction Connector
- E 66 Junction Connector
- E 67 Junction Connector
- E 68 Junction Connector
- E 69 Junction Connector
- E 70 Junction Connector
- E 71 Junction Connector
- E 72 Junction Connector
- E 73 Junction Connector
- E 74 Junction Connector
- E 75 Junction Connector
- E 76 Junction Connector
- E 81 A/C Amplifier Assembly
- E 87 Differential Lock Switch
- E 88 Deceleration Sensor
- E 91 Option Connector (Parking Assist-Sensor)
- E 93 Ignition or Starter Switch Assembly
- E 94 Un-Lock Warning Switch Assembly
- E 95 Transponder Key Amplifier
- E 96 Transponder Key ECU Assembly
- E 97 Idle Up Switch
- E 106 Junction Connector

Position of Parts in Instrument Panel <RHD Front Bench Seat Type Before Aug. 2015 Production>

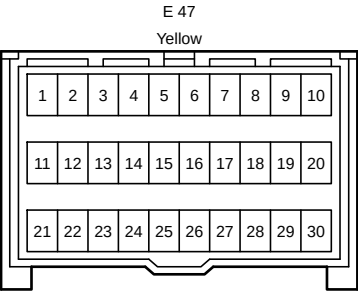

Position of Parts in Instrument Panel <RHD Front Bench Seat Type Before Aug. 2015 Production>

