



Position of Parts in Engine Compartment

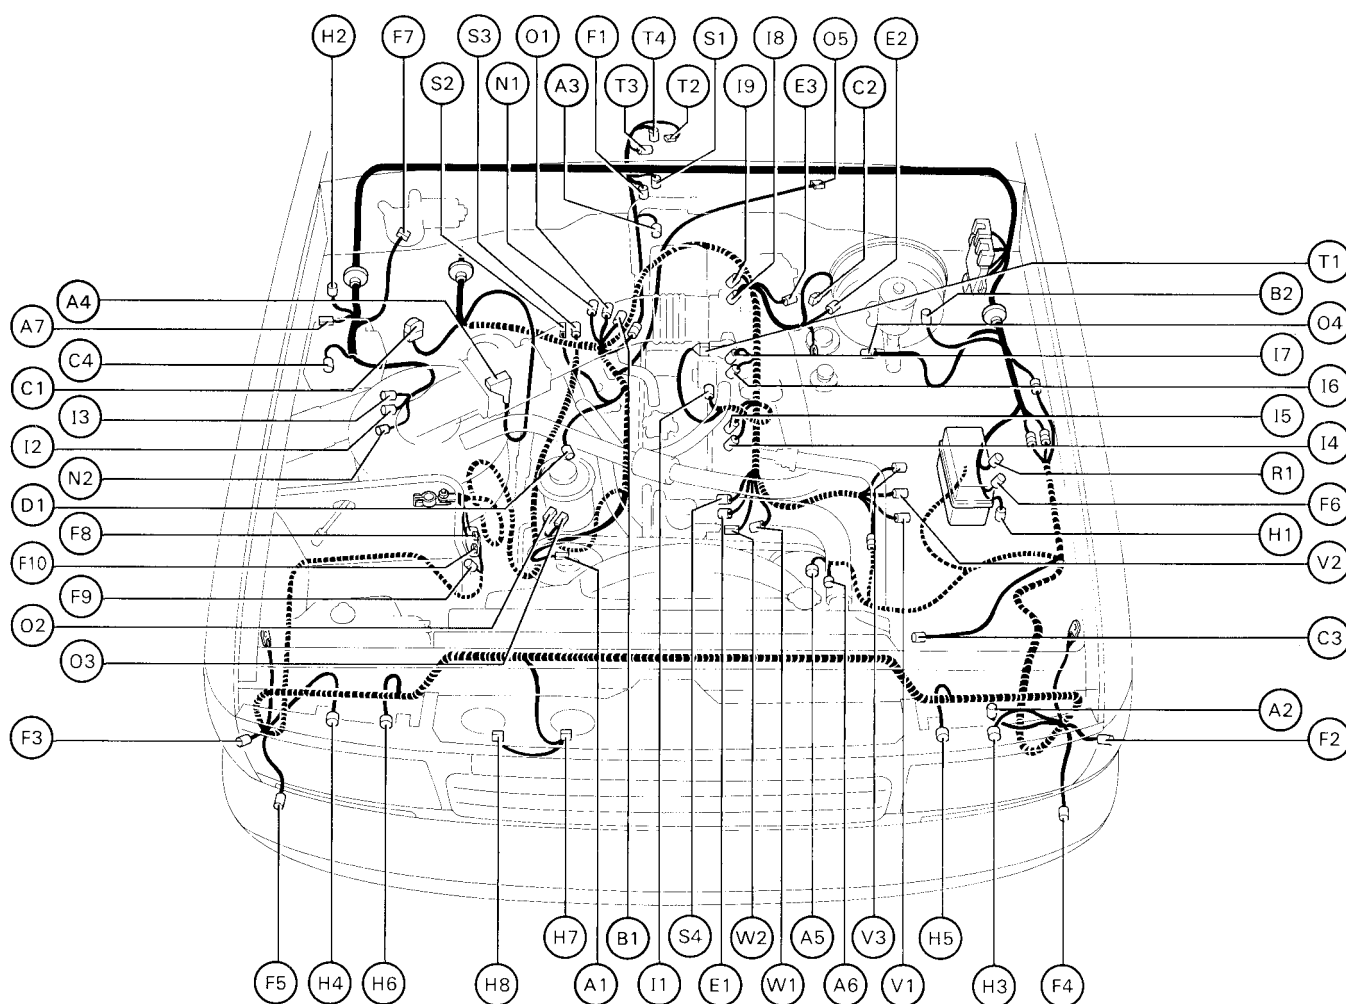

A 1	A/C Magnetic Clutch	F 3	Front Clearance Light RH	N 2	Noise Filter (for Ignition System)
A 2	A/C Pressure SW	F 4	Front Turn Signal Light LH	O 1	O/D Solenoid
A 3	A/T Fluid Temp. Sensor	F 5	Front Turn Signal Light RH	O 2	Oil Pressure Sender Gauge
A 4	Air Flow Meter	F 6	Front Washer Motor	O 3	Oil Pressure Sender Gauge
A 5	Alternator	F 7	Front Wiper Control Motor	O 4	Oxygen Sensor (Main)
A 6	Alternator	F 8	Fusible Link (AM1)	O 5	Oxygen Sensor (Sub)
A 7	Auto Antenna Control Motor	F 9	Fusible Link (AM2)	R 1	Rear Washer Motor
B 1	Back-Up Light and A/T Indicator SW	F 10	Fusible Link (Main)	S 1	Speed Sensor
B 2	Brake Fluid Level SW	H 1	Headlight Cleaner Motor	S 2	Starter
C 1	Check Connector	H 2	Headlight Cleaner Relay	S 3	Starter
C 2	Cold Start Injector	H 3	Headlight No. 1 LH	S 4	Start Injector Time SW
C 3	Cooling Fan Motor	H 4	Headlight No. 1 RH	T 1	Throttle Position Sensor
C 4	Cruise Control Actuator	H 5	Headlight No. 2 LH	T 2	Transfer 2-4 Control Motor Actuator
D 1	Distributor	H 6	Headlight No. 2 RH	T 3	Transfer L4 Position SW
E 1	EFI Water Temp. Sensor	H 7	Horn	T 4	Transfer Neutral Position SW
E 2	EGR Gas Temp. Sensor	H 8	Horn	V 1	VSV (for Air Injection System)
E 3	Exhaust Manifold Temp. Sensor	I 1	ISC Valve	V 2	VSV (for EGR Control System)
F 1	4WD Indicator SW	I 2	Igniter	V 3	VSV (for Fuel Pressure Control System)
F 2	Front Clearance Light LH	I 3	Ignition Coil	W 1	Water Temp. SW
		I 4	Injector No. 1	W 2	Water Temp. Sender
		I 5	Injector No. 2		
		I 6	Injector No. 3		
		I 7	Injector No. 4		
		I 8	Injector No. 5		
		I 9	Injector No. 6		
		N 1	Neutral Start SW		

ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

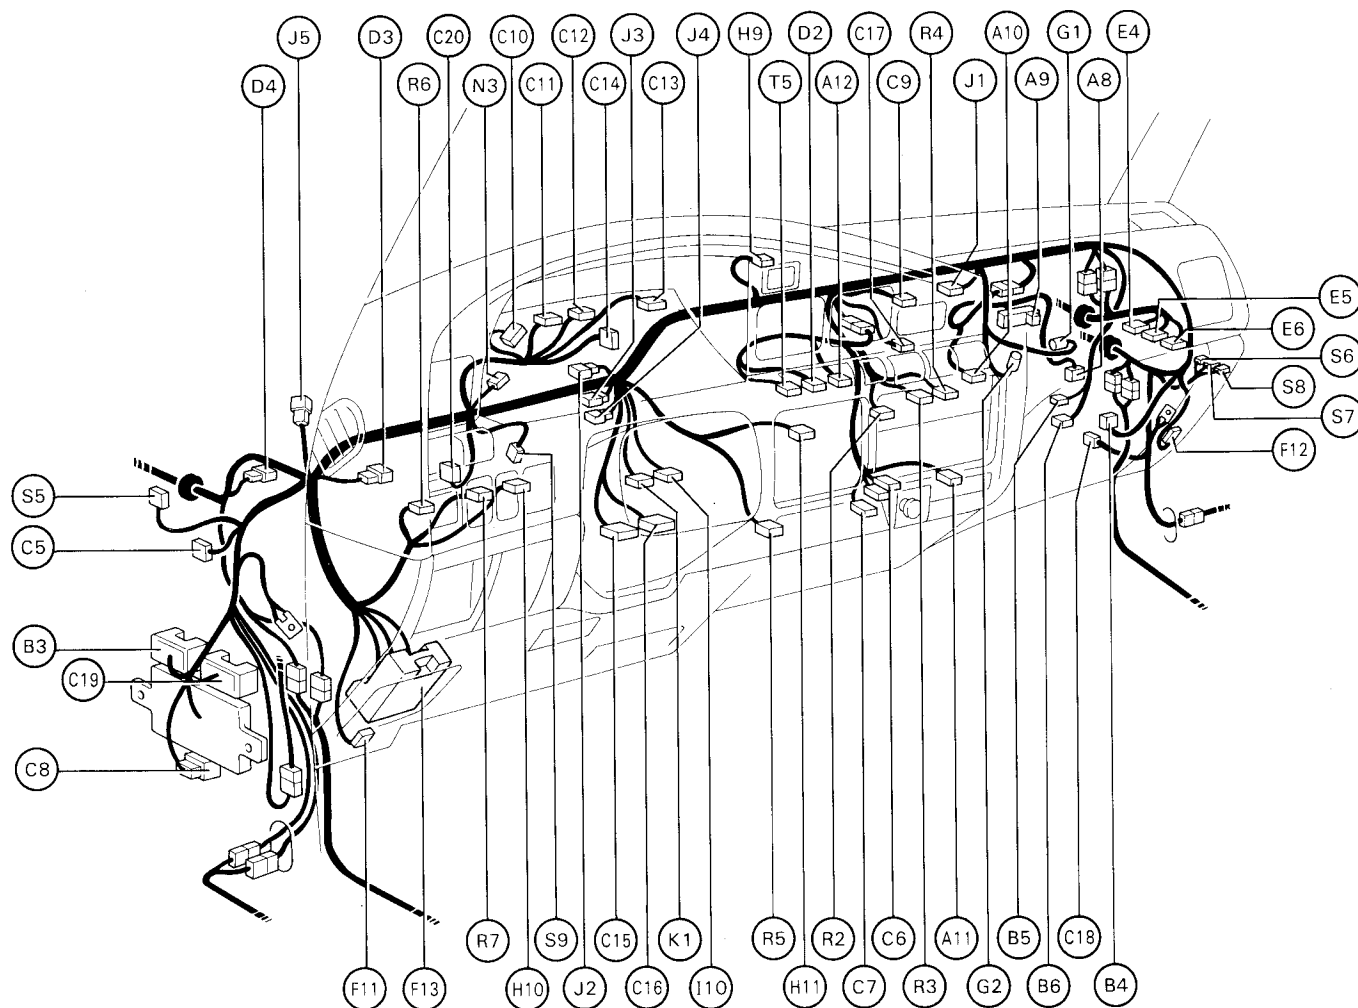

A 8 A/C Amplifier
A 9 A/C Cut Relay
A 10 A/C Thermistor
A 11 Ashtray
A 12 Auto Antenna Control SW

B 3 Blower High Relay
B 4 Blower Motor (for A/C)
B 5 Blower Motor (for Heater)
B 6 Blower Resistor

C 5 Center Diff. Lock Control Relay
C 6 Cigarette Lighter
C 7 Cigarette Lighter Illumination
C 8 Circuit Opening Relay
C 9 Clock
C 10 Combination Meter
C 11 Combination Meter
C 12 Combination Meter
C 13 Combination Meter
C 14 Combination Meter (A/T Indicator)
C 15 Combination SW
C 16 Combination SW
C 17 Cooling Fan
(for Radio and Tape Player)

C 18 Cooling Fan Control ECU
(for Engine Compartment)
C 19 Cooling Fan Relay
(for Engine Compartment)
C 20 Cruise Control ECU

D 2 Defogger SW
D 3 Diode
D 4 Diode

E 4 Engine ECU
E 5 Engine ECU
E 6 Engine ECU

F 11 Front Speaker LH
F 12 Front Speaker RH
F 13 Fuse Block

G 1 Glove Box Light
G 2 Glove Box Light SW

H 9 Hazard SW
H 10 Headlight Cleaner SW
H 11 Heater Blower and A/C SW

I 10 Ignition and Unlock Warning SW

J 1 Junction Connector
J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector


K 1 Key Interlock Solenoid
N 3 Noise Filter (for Stop Light)

R 2 Radio and Player
R 3 Radio and Player
R 4 Radio and Player
R 5 Rear Heater SW
R 6 Remote Control Mirror SW
R 7 Rheostat

S 5 Seat Belt Warning Relay
S 6 Stereo Component Amplifier
S 7 Stereo Component Amplifier
S 8 Stereo Component Amplifier
S 9 Stop Light and Cruise Control Stop SW

T 5 Transfer Control SW

Position of Parts in Body

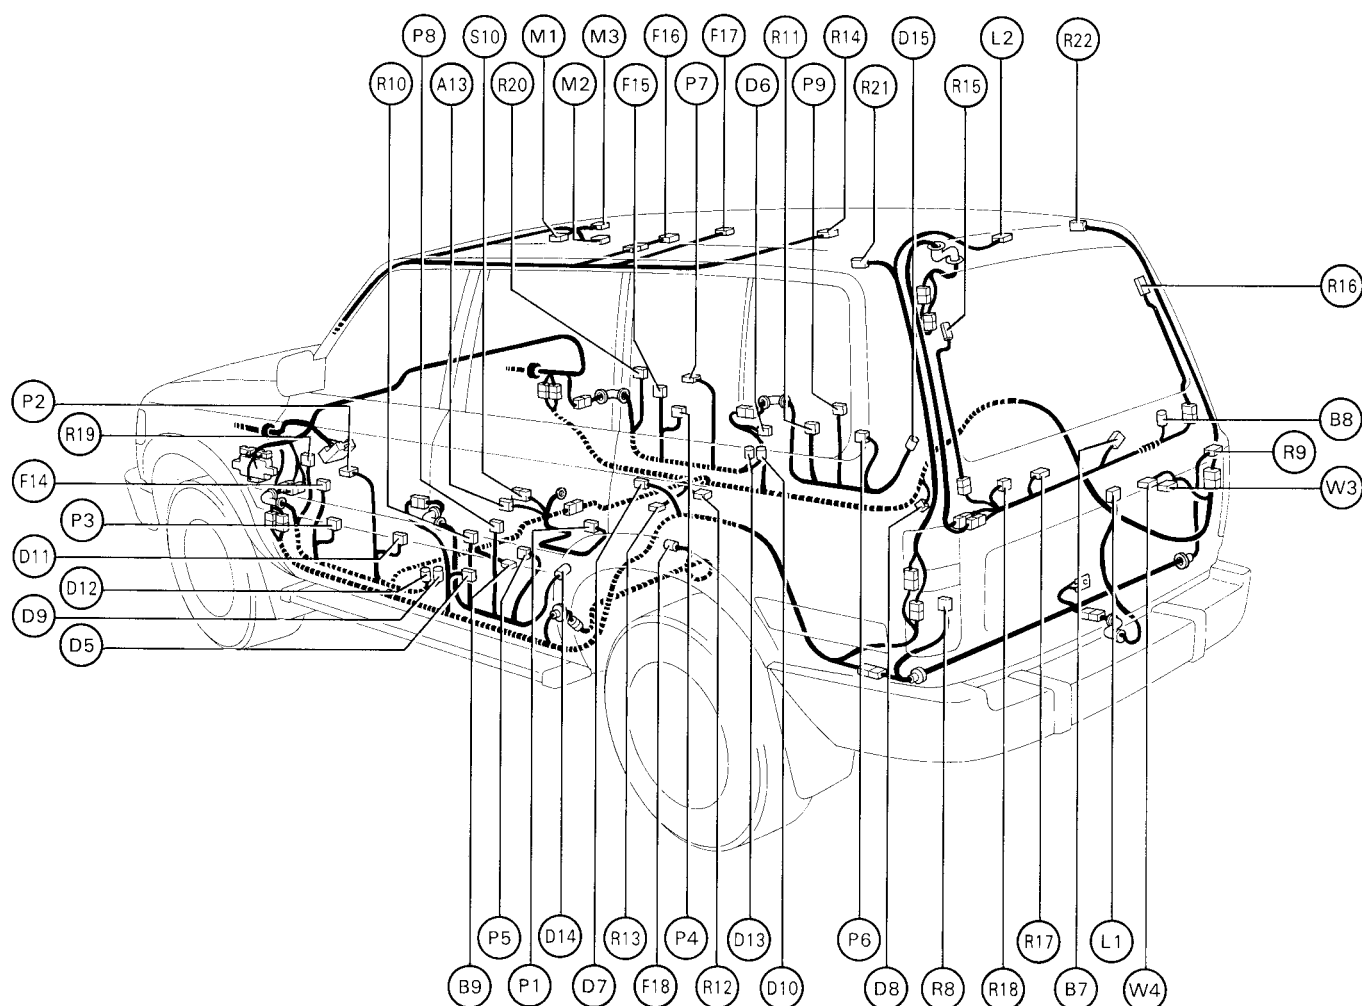

A 13	A/T Shift Lever Illumination	L 1	Licence Plate Light	R 13	Rear Heater Relay
B 7	Back Door Courtesy SW	L 2	Luggage Compartment Light	R 14	Rear Interior Light
B 8	Back Door Lock Control Motor	M 1	Moon Roof Control Relay	R 15	Rear Window Defogger (+)
B 9	Buckle SW	M 2	Moon Roof Control SW and Personal Light or, Personal Light (w/o Moon Roof)	R 16	Rear Window Defogger (-)
D 5	Door Courtesy SW Front LH	M 3	Moon Roof Limit SW and Motor	R 17	Rear Wiper Control Motor
D 6	Door Courtesy SW Front RH	P 1	Parking Brake SW	R 18	Rear Wiper Control Relay
D 7	Door Courtesy SW Rear LH	P 2	Power Window Master SW	R 19	Remote Control Mirror LH
D 8	Door Courtesy SW Rear RH	P 3	Power Window Motor Front LH	R 20	Remote Control Mirror RH
D 9	Door Key Lock and Unlock SW LH	P 4	Power Window Motor Front RH	R 21	Roof Speaker LH
D 10	Door Key Lock and Unlock SW RH	P 5	Power Window Motor Rear LH	R 22	Roof Speaker RH
D 11	Door Lock Control Relay	P 6	Power Window Motor Rear RH		
D 12	Door Lock Motor Front LH	P 7	Power Window SW Front RH	S 10	Shift Lock ECU
D 13	Door Lock Motor Front RH	P 8	Power Window SW Rear LH	W 3	Woofer Speaker
D 14	Door Lock Motor Rear LH	P 9	Power Window SW Rear RH	W 4	Woofer Speaker Amplifier
D 15	Door Lock Motor Rear RH				
F 14	Front Door Speaker LH	R 8	Rear Combination Light LH		
F 15	Front Door Speaker RH	R 9	Rear Combination Light RH		
F 16	Front Interior Light (w/ Moon Roof)	R 10	Rear Door Speaker LH		
F 17	Front Interior Light (w/o Moon Roof)	R 11	Rear Door Speaker RH		
F 18	Fuel Sender and Pump	R 12	Rear Heater		