



ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

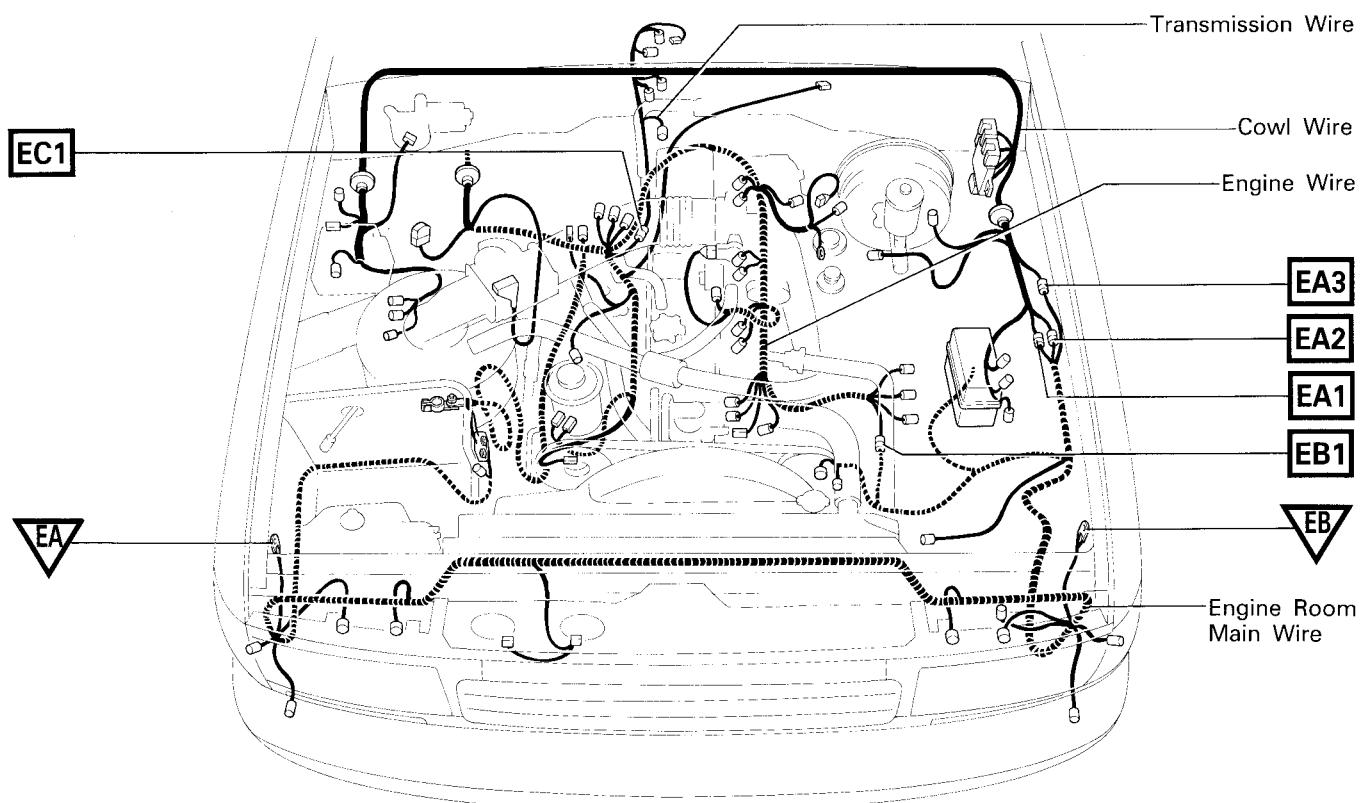

○ : Location of Splice Points

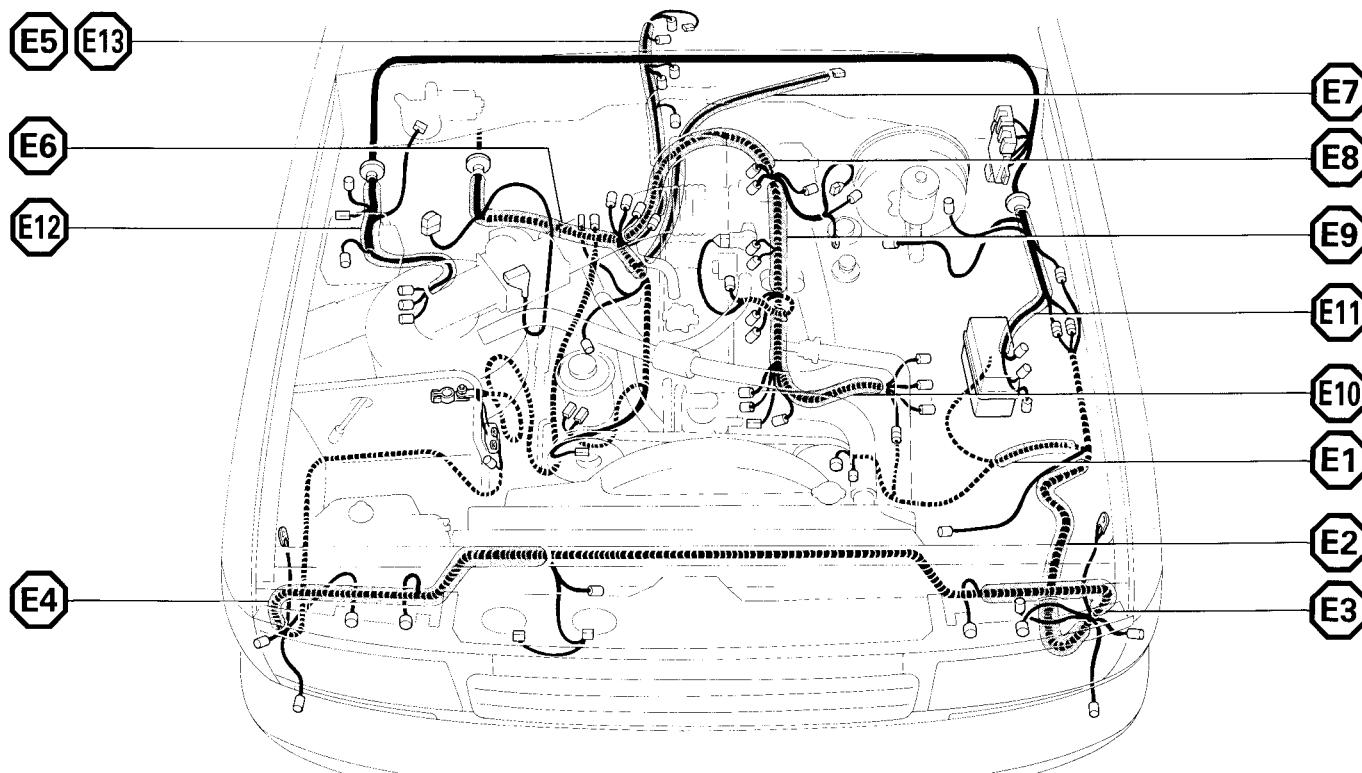

Connector Joining Wire Harness and Wire Harness

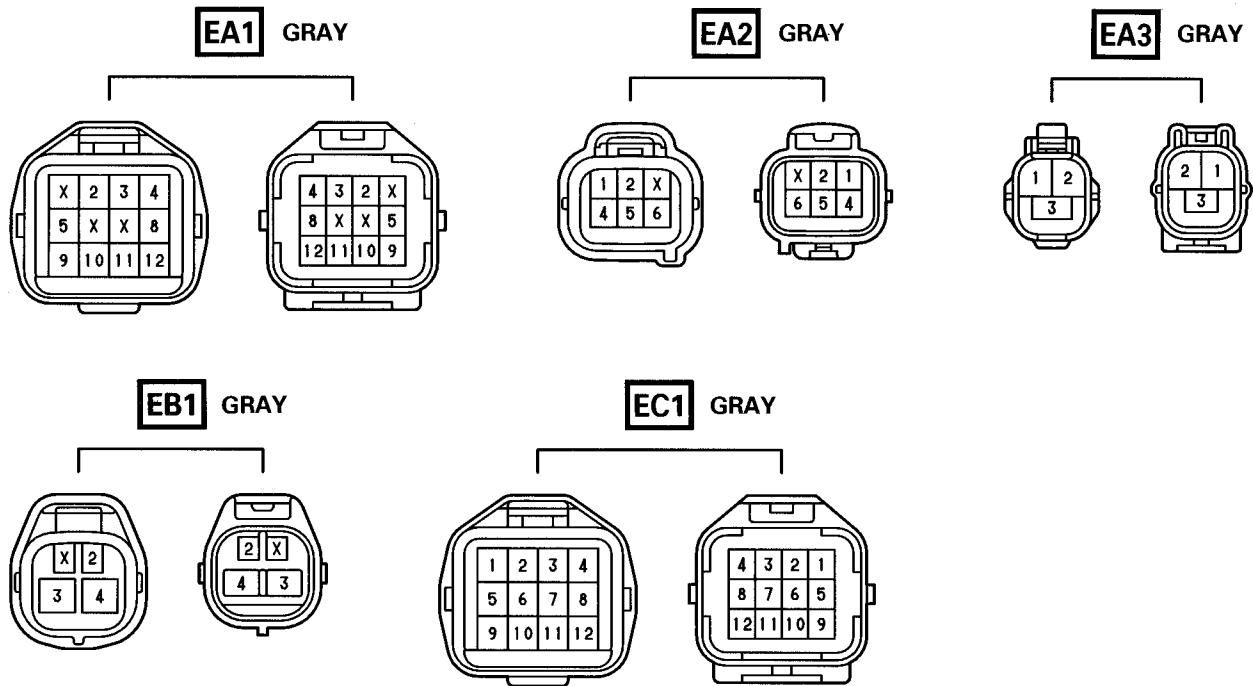


| CODE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION) |
|------------|--|
| EA1 | |
| EA2 | COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER) |
| EA3 | |
| EB1 | ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE R/B NO.2) |
| EC1 | ENGINE WIRE AND TRANSMISSION WIRE (NEAR THE STARTER) |


ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

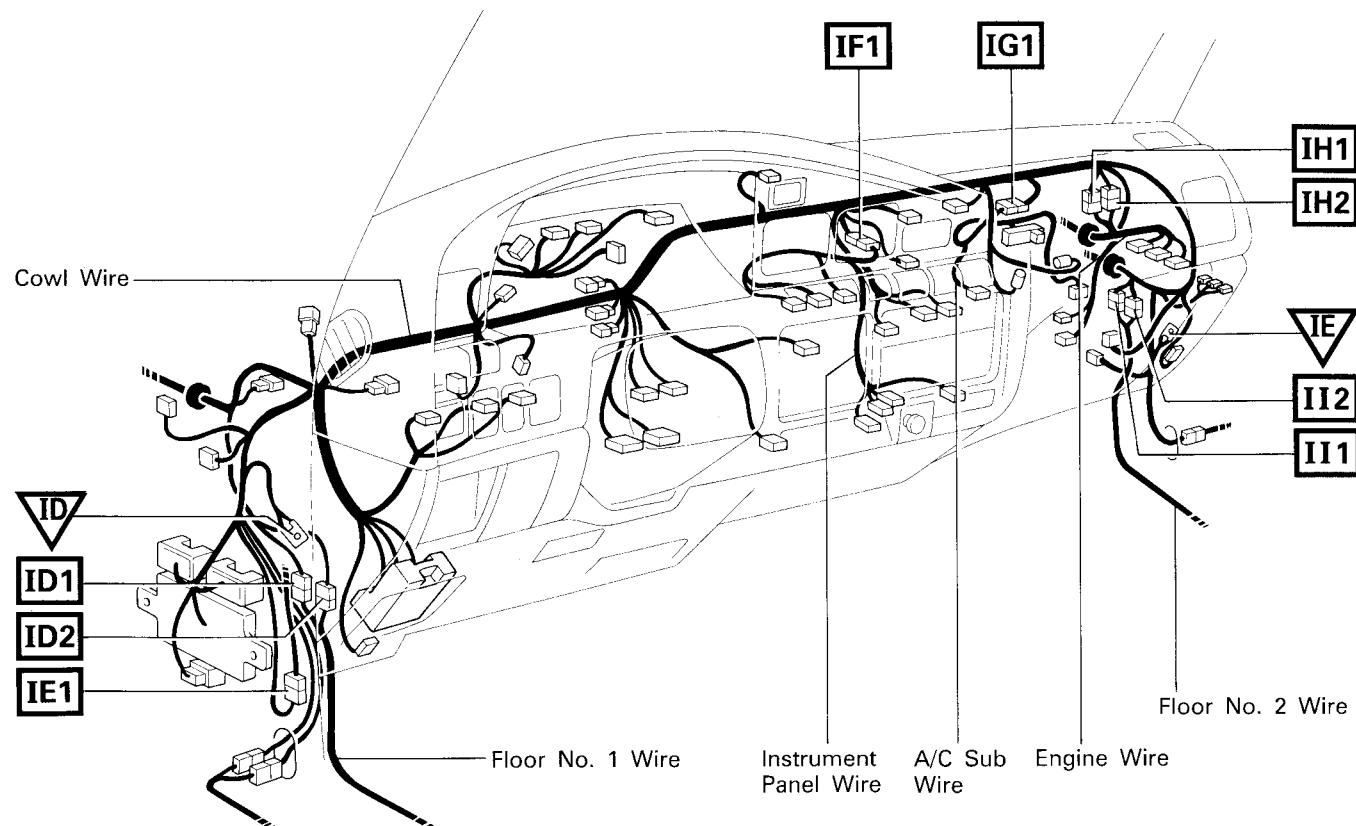

○ : Location of Splice Points

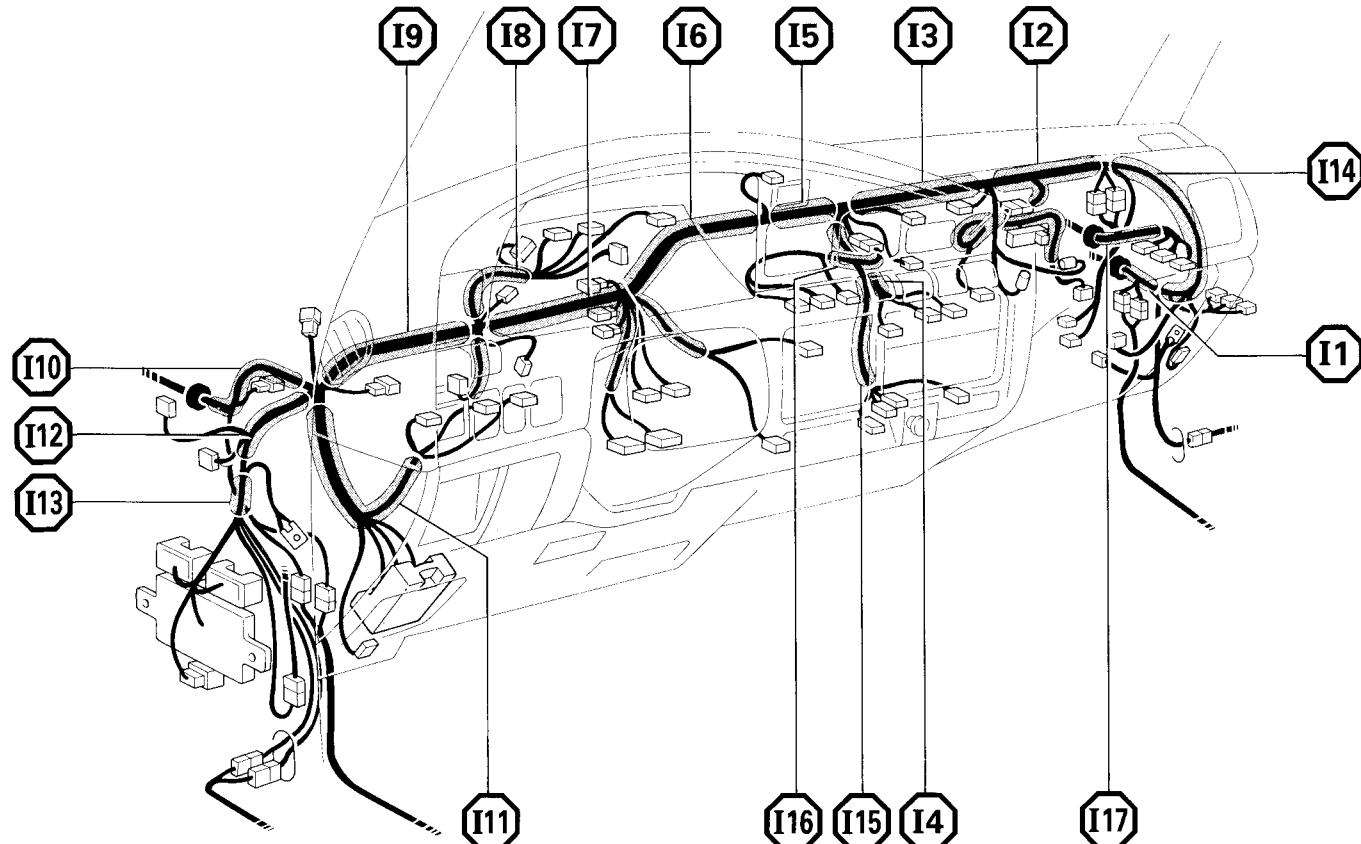


Connector Joining Wire Harness and Wire Harness

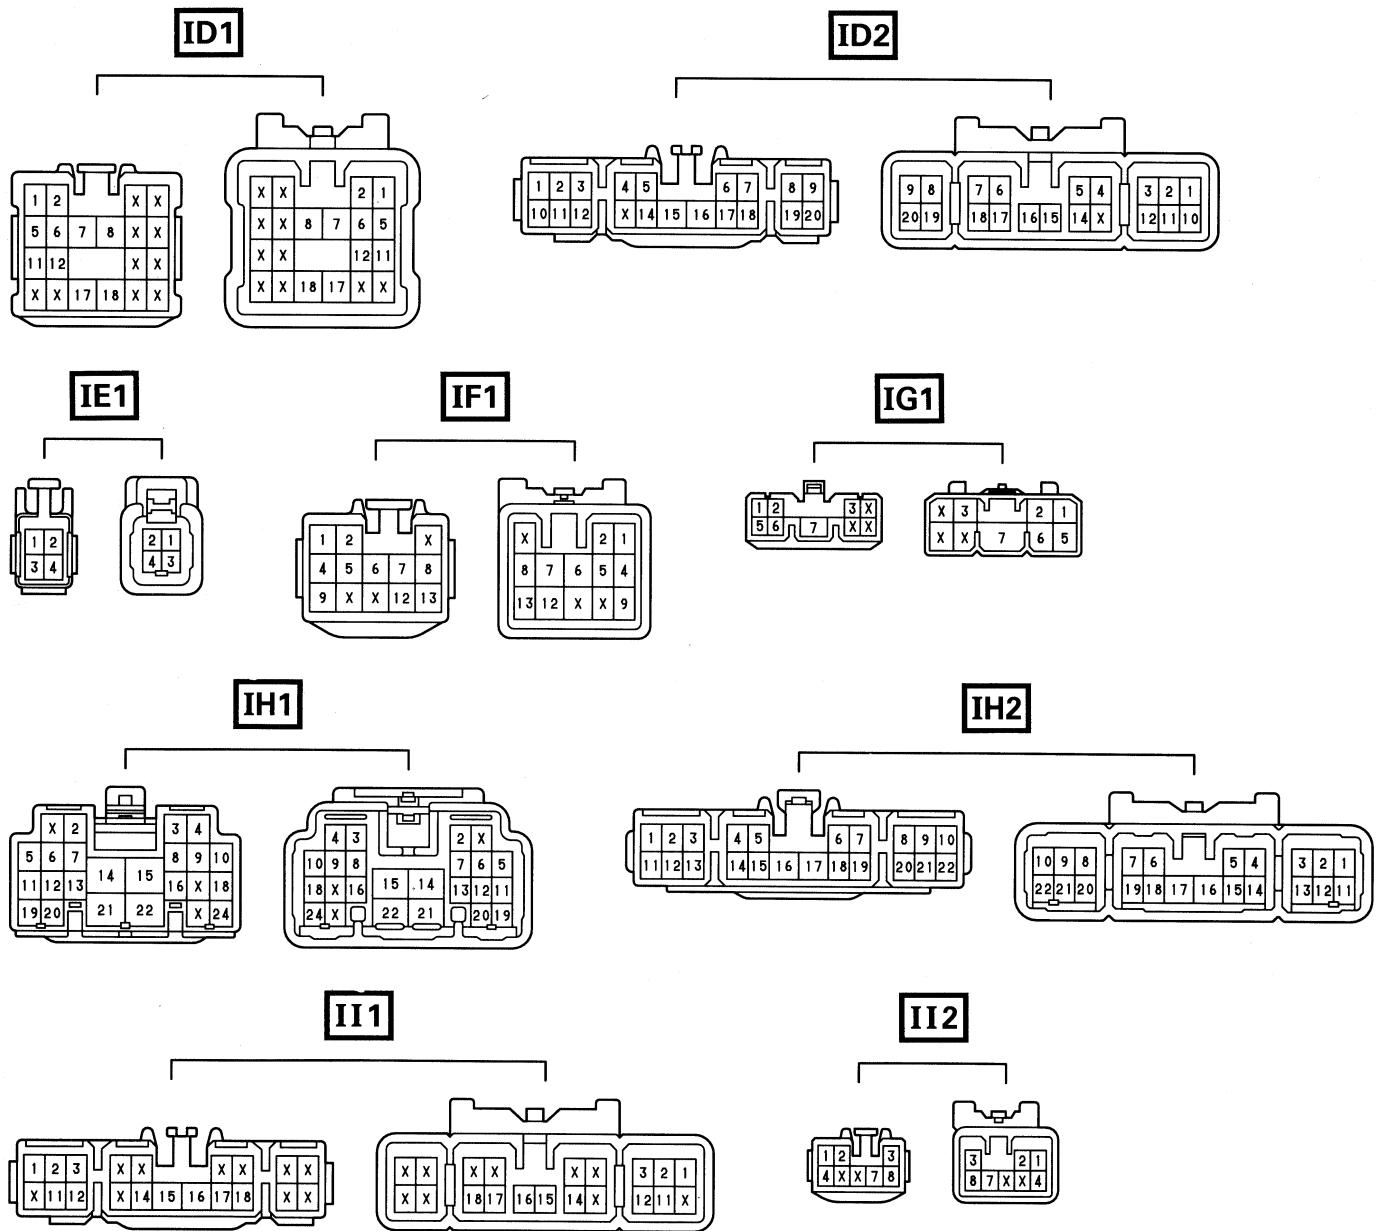


| CODE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION) |
|------|---|
| ID1 | COWL WIRE AND FLOOR NO.1 WIRE (LEFT KICK PANEL) |
| ID2 | |
| IE1 | ROOF NO.1 WIRE AND COWL WIRE (LEFT KICK PANEL) |
| IF1 | INSTRUMENT PANEL WIRE AND COWL WIRE (INSTRUMENT PANEL CENTER) |
| IG1 | COWL WIRE AND A/C SUB WIRE (BEHIND GLOVE BOX) |
| IH1 | ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX) |
| IH2 | |
| II1 | COWL WIRE AND FLOOR NO. 2 WIRE (RIGHT KICK PANEL) |
| II2 | |

ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

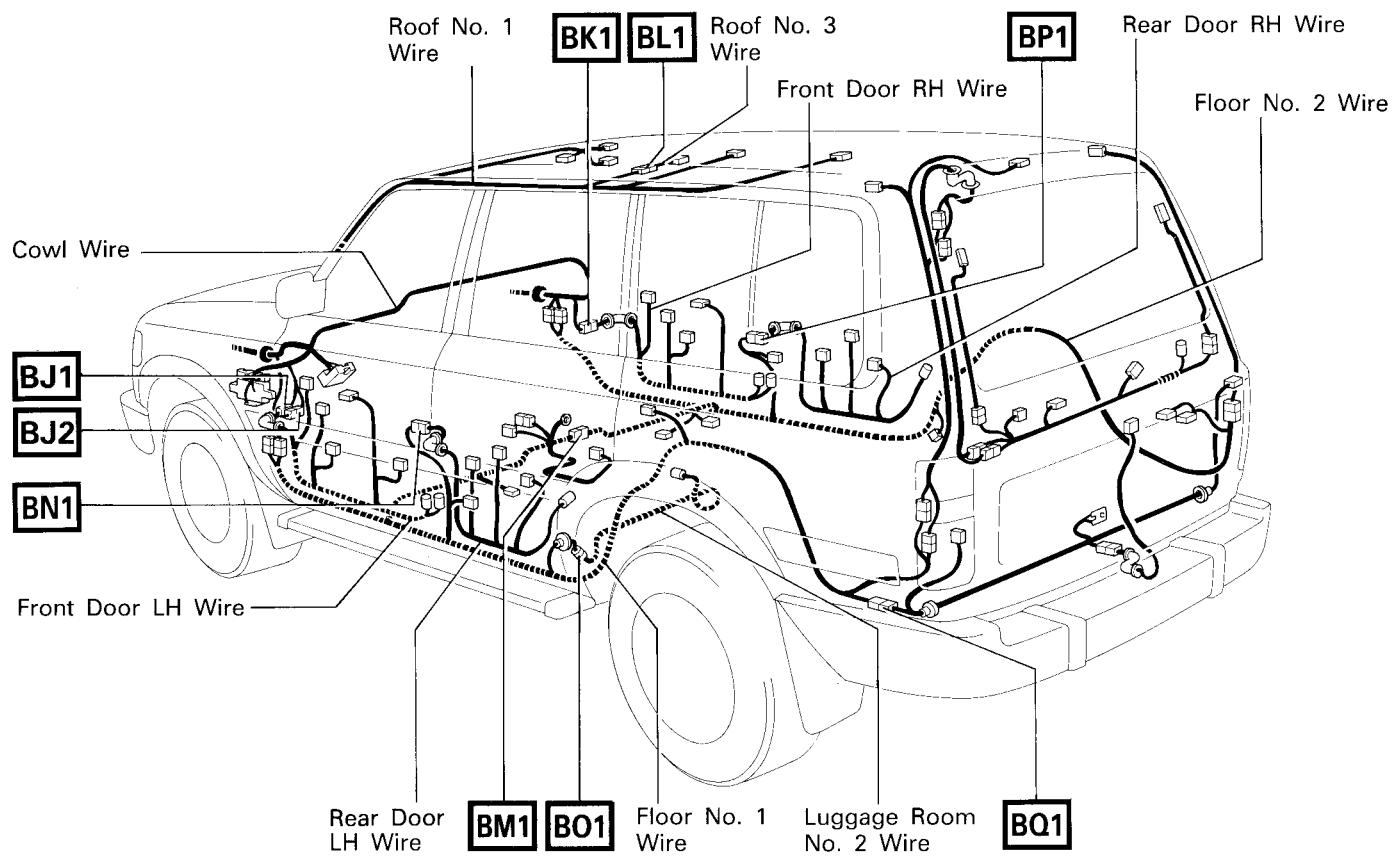

▽ : Location of Ground Points

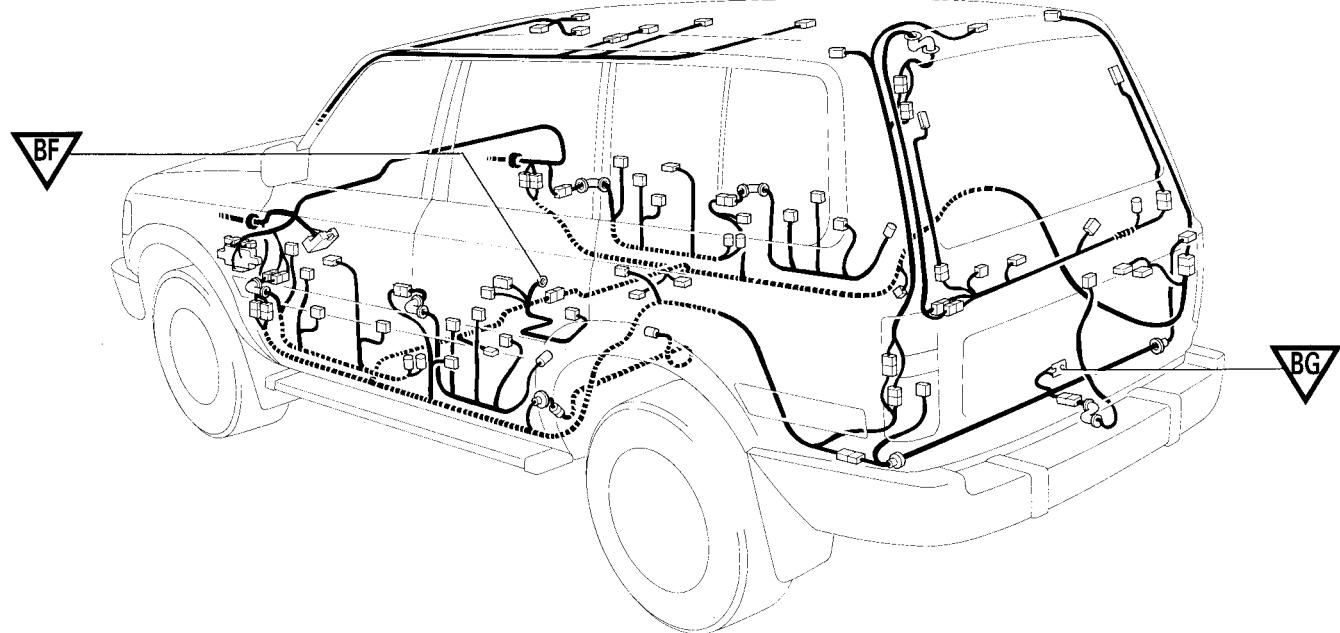


Connector Joining Wire Harness and Wire Harness

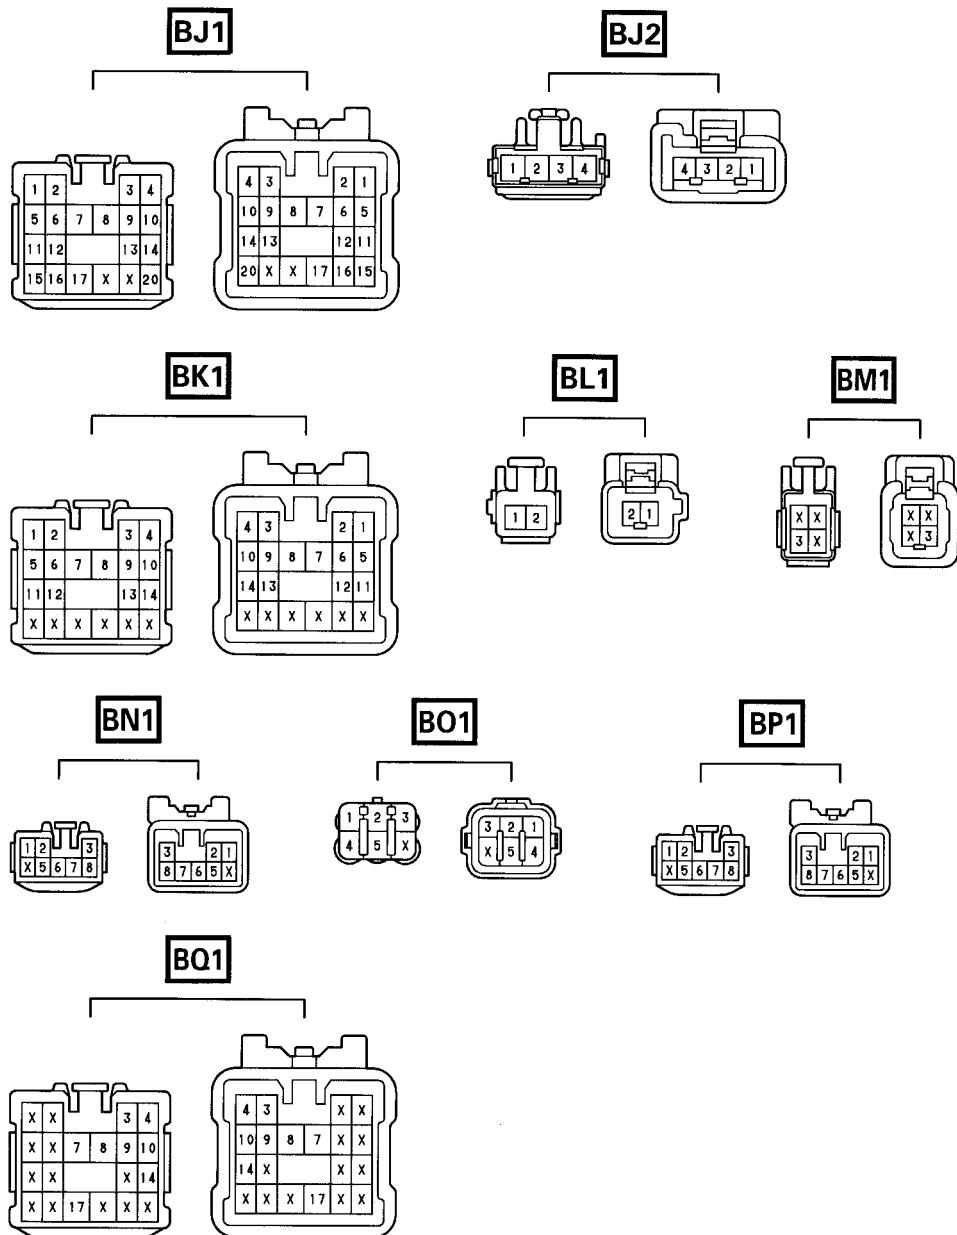


| CODE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION) |
|------------|--|
| BJ1 | FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL) |
| BJ2 | FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL) |
| BK1 | ROOF NO.1 WIRE AND ROOF NO.3 WIRE (ROOF LEFT) |
| BL1 | ROOF NO.1 WIRE AND ROOF NO.3 WIRE (ROOF LEFT) |
| BM1 | FLOOR NO.2 WIRE AND FLOOR NO.1 WIRE (UNDER THE CENTER CONSOLE BOX) |
| BN1 | REAR DOOR LH WIRE AND FLOOR NO.1 WIRE (LEFT CENTER PILLAR) |
| BO1 | FLOOR NO.1 WIRE AND LUGGAGE ROOM NO.2 WIRE (BESIDE THE FUEL TANK) |
| BP1 | REAR DOOR RH WIRE AND FLOOR NO.2 WIRE (RIGHT CENTER PILLAR) |
| BQ1 | FLOOR NO.3 WIRE AND FLOOR NO.1 WIRE (LEFT QUARTER PANEL INNER) |

ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

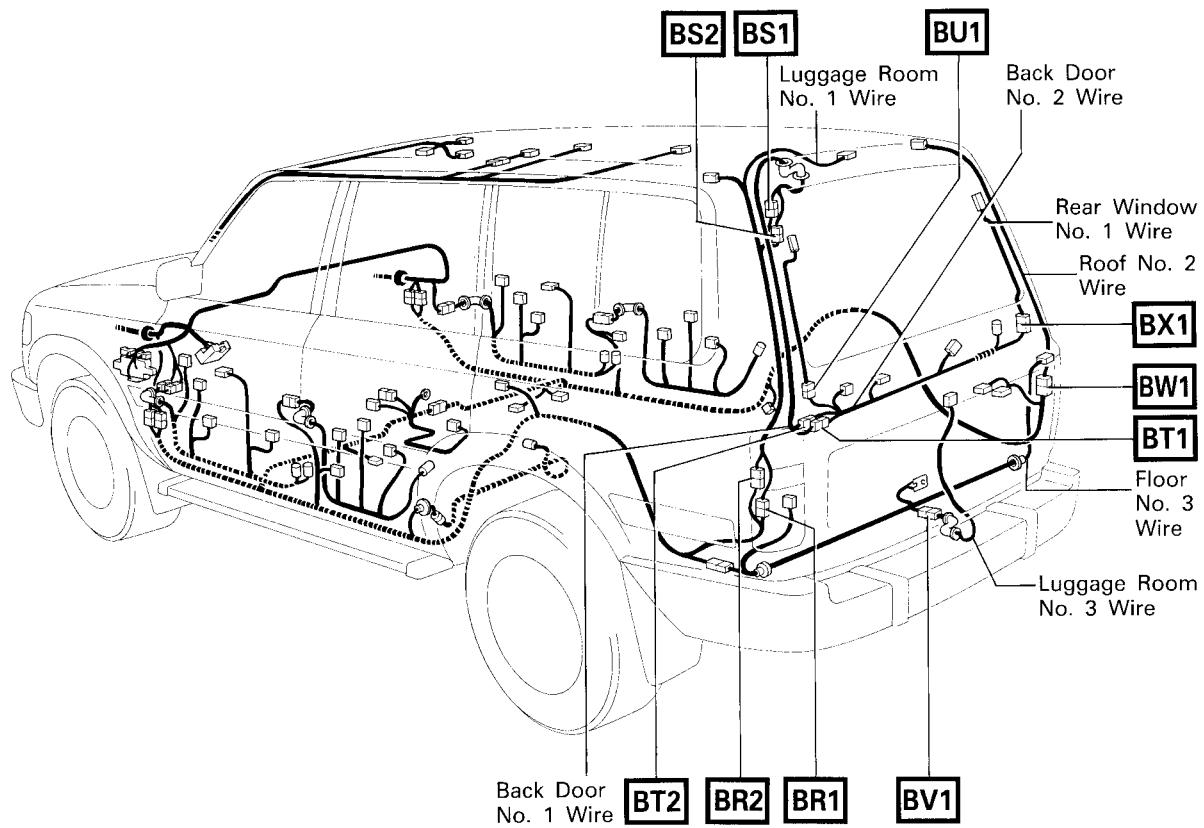

▽ : Location of Splice Points

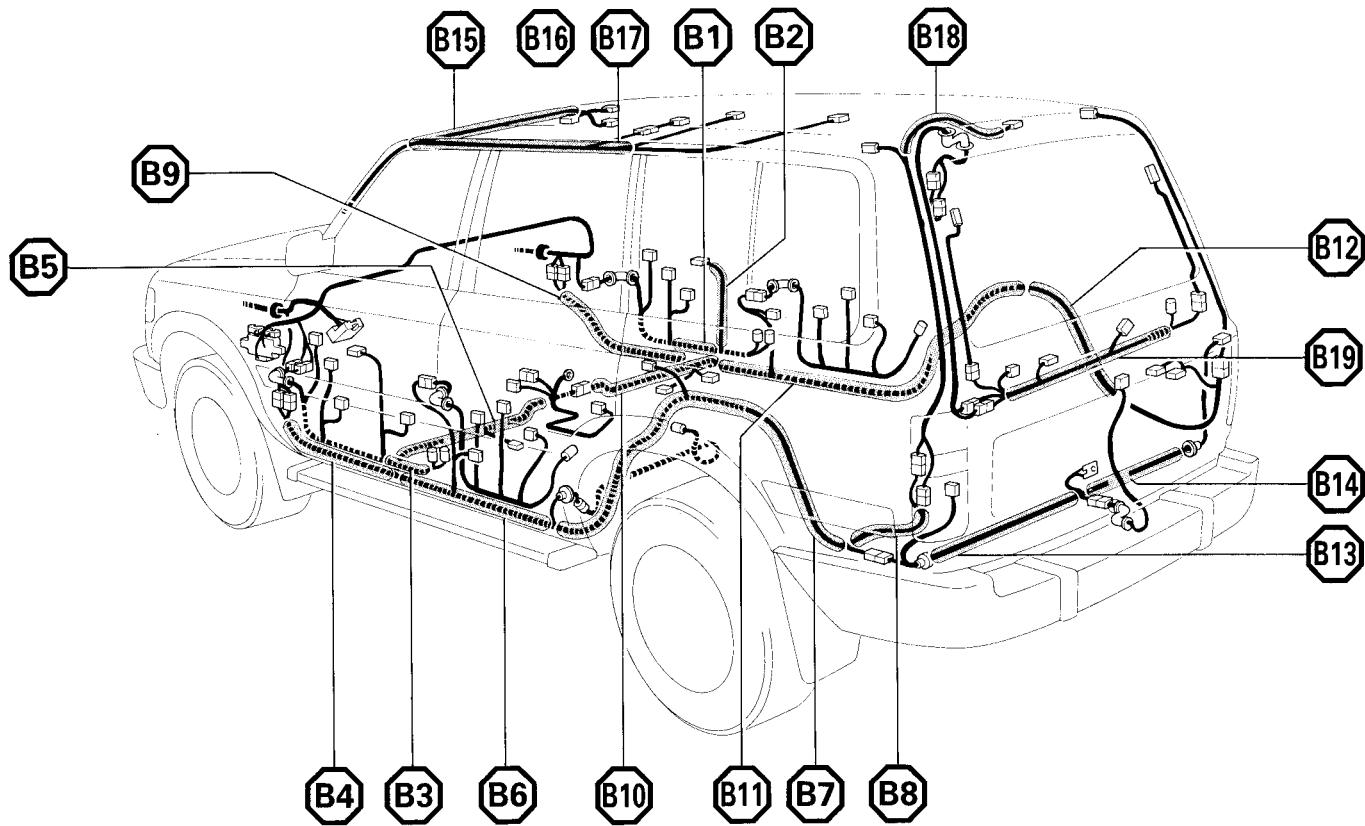

Connector Joining Wire Harness and Wire Harness

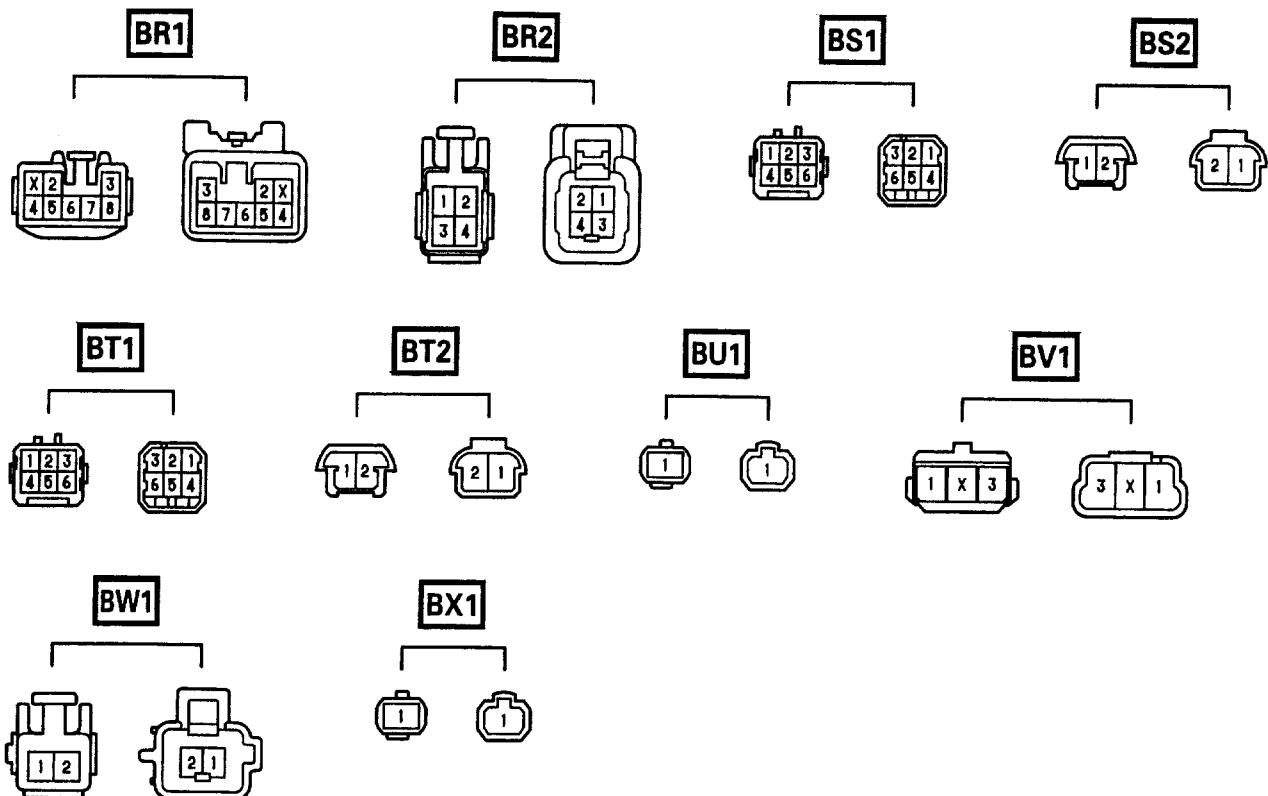

| CODE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION) |
|------|---|
| BR1 | LUGGAGE ROOM NO.1 WIRE AND FLOOR NO.1 WIRE (LEFT QUARTER PANEL INNER) |
| BR2 | |
| BS1 | BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF) |
| BS2 | |
| BT1 | BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT) |
| BT2 | |
| BU1 | REAR WINDOW NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT) |
| BV1 | LUGGAGE ROOM NO. 3 WIRE AND FLOOR NO. 3 WIRE (UNDER THE LOWER BACK PANEL) |
| BW1 | ROOF NO. 2 WIRE AND FLOOR NO. 2 WIRE (RIGHT QUARTER PANEL INNER) |
| BX1 | REAR WINDOW NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR RIGHT) |