


POWER SOURCE

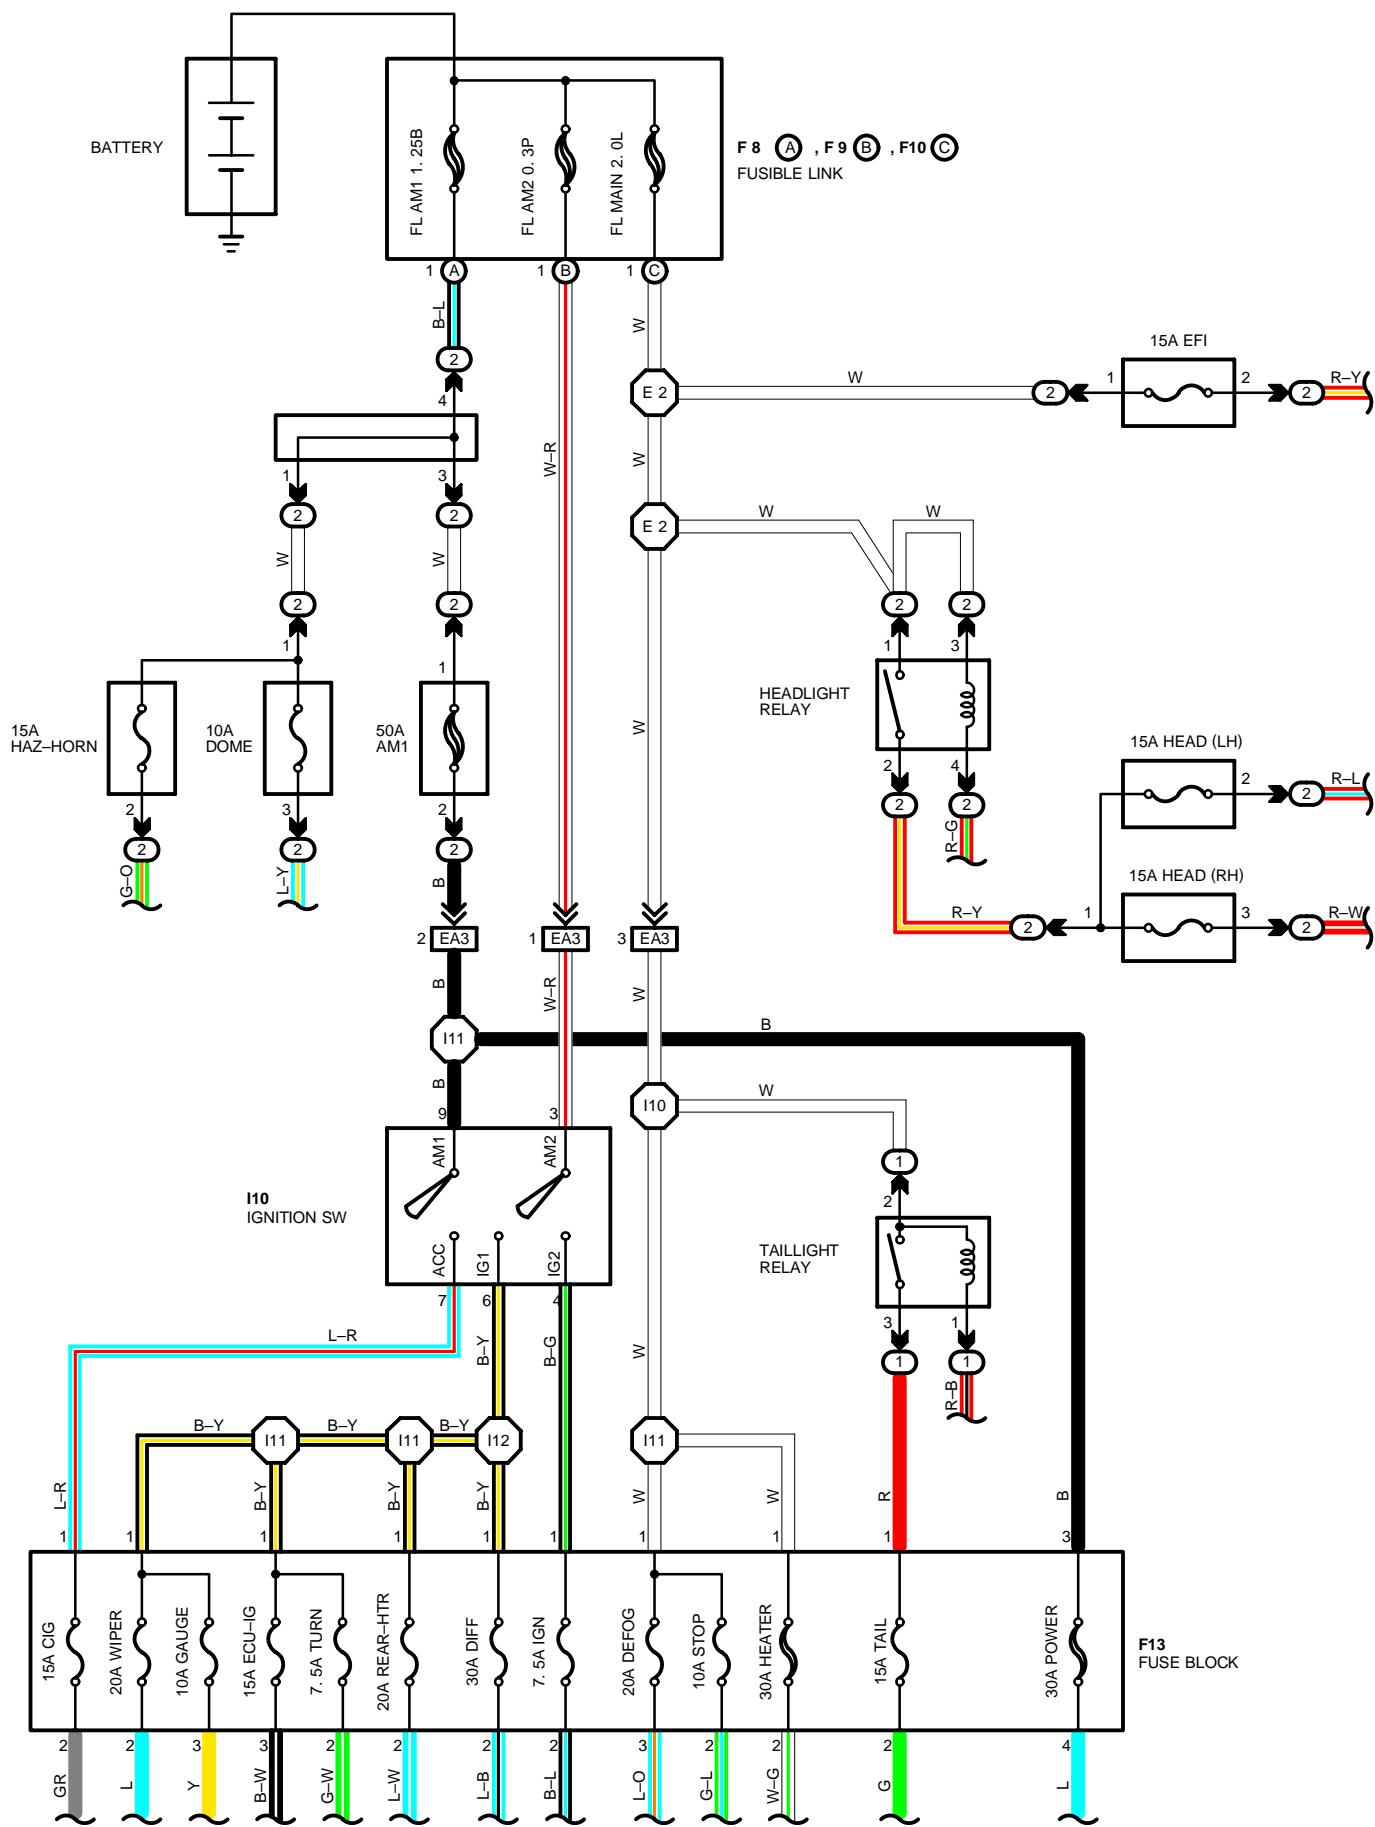

SERVICE HINTS

HEADLIGHT RELAY

(2) 1- (2) 2: CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

I11 IGNITION SW

9-7 : CLOSED WITH IGNITION KEY AT **ACC** OR **ON** POSITION

9-6 : CLOSED WITH IGNITION KEY AT **ON** OR **ST** POSITION

3-4: CLOSED WITH IGNITION KEY AT **ON** OR **ST** POSITION

TAILLIGHT RELAY

(1) 2- (1) 3: CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F8	A 19	F10	C 19	I10	20
F9	B 19	F13	20		

□ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	18	R/B NO. 1 (LEFT KICK PANEL)
2	16	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)


□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA3	22	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E2	22	ENGINE ROOM MAIN WIRE	I11	24	COWL WIRE
I10	24	COWL WIRE	I12		

 F8 (A), **F9** (B), **F10** (C)



F13

(SEE PAGE 18)

I10 BLACK

