



Position of Parts in Body (LHD)

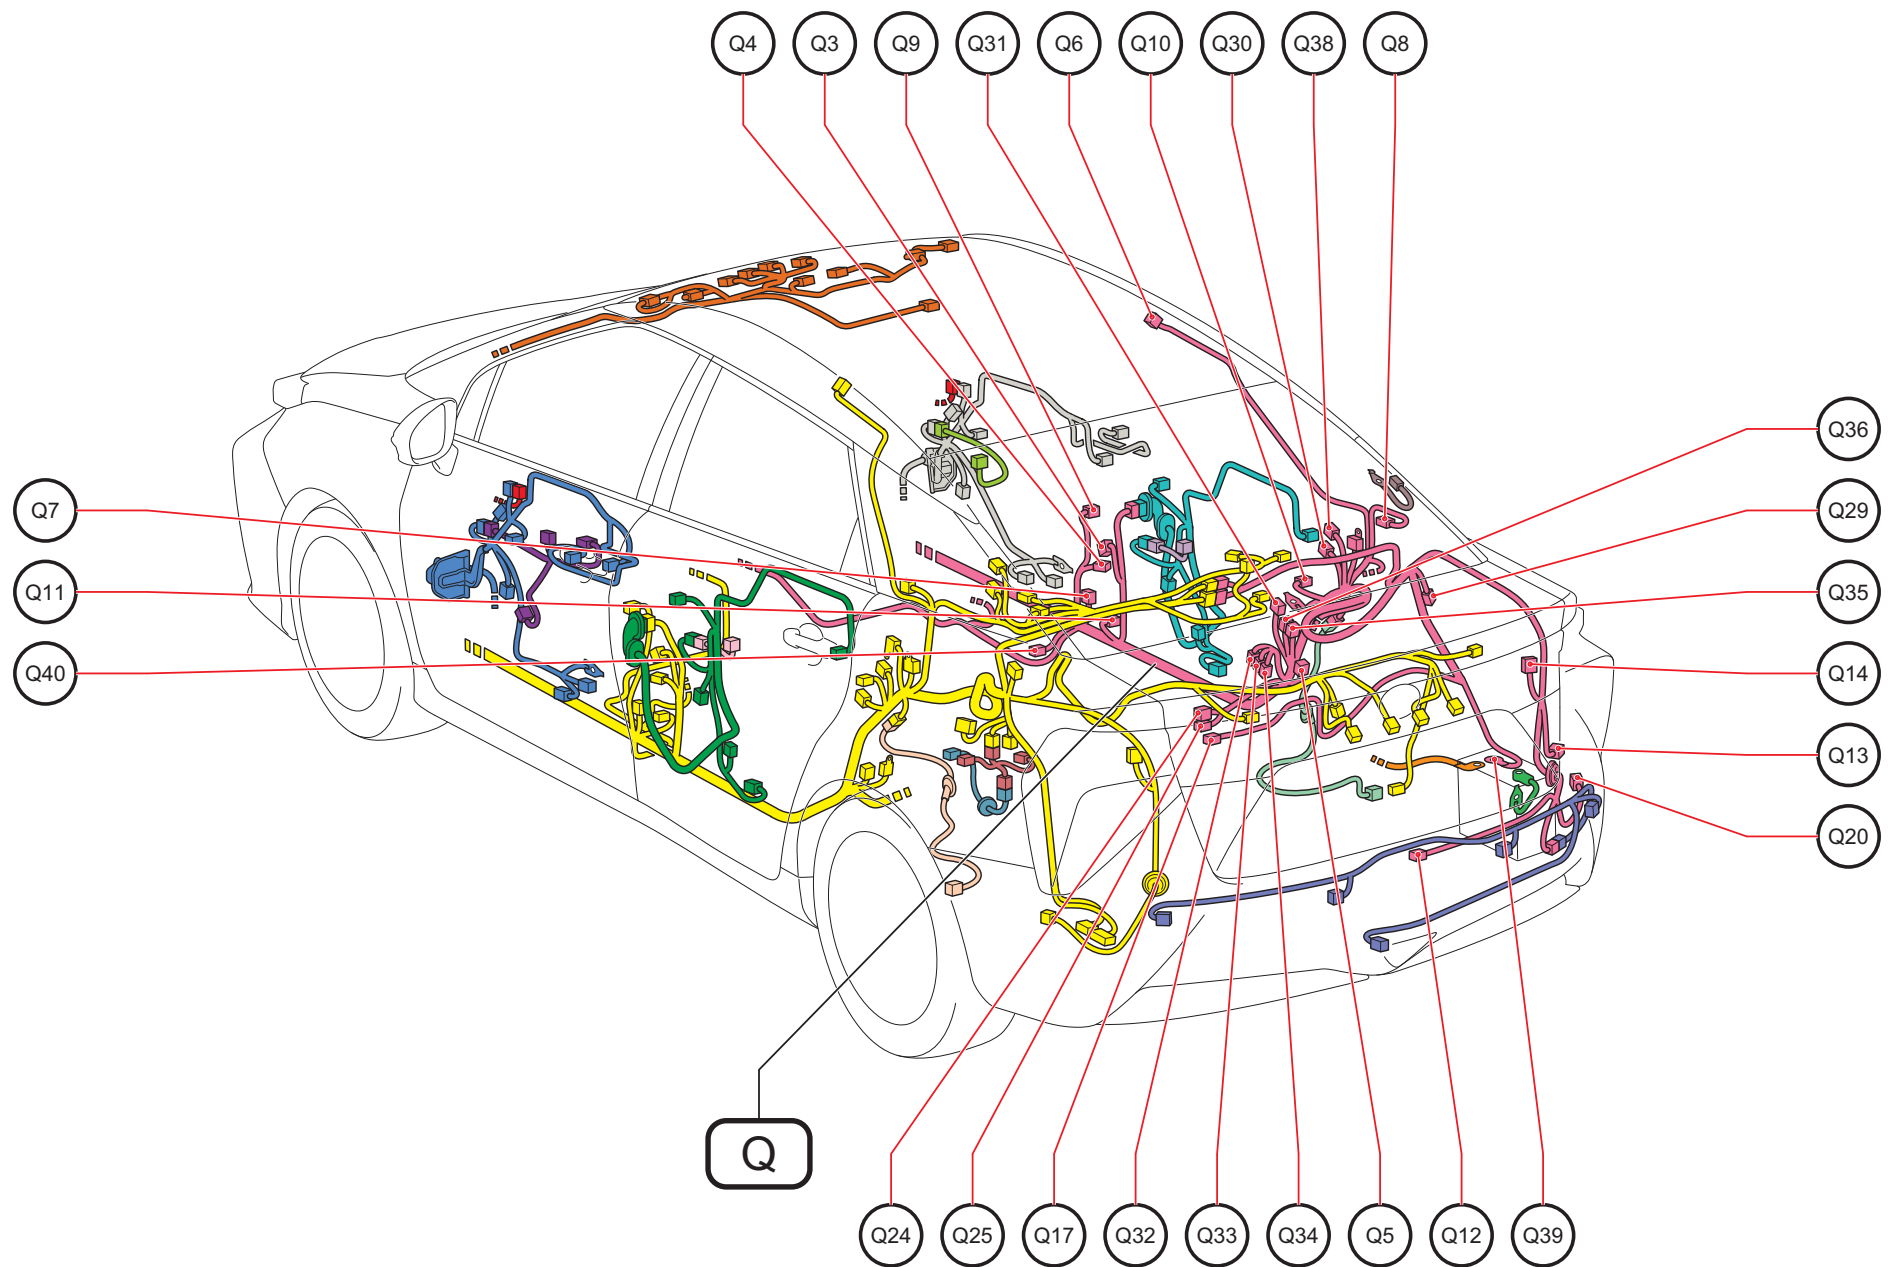


Q3	Side Airbag Sensor Assembly RH
Q4	Front Seat Outer Belt Assembly RH
Q5	Rear Airbag Sensor RH
Q6	Curtain Shield Airbag Assembly RH
Q7	No. 2 Side Airbag Sensor Assembly RH
Q8	Rear Seat 3 Point Type Outer Belt Assembly RH
Q9	Front Door Courtesy Light Switch Assembly RH
Q10	Rear Door Courtesy Light Switch Assembly RH
Q11	Front Seat Outer Belt Assembly RH
Q12	Electrical Key Antenna
Q13	Battery Thermometer Sensor (Thermistor Assembly)
Q14	Rear Combination Light Assembly RH
Q17	Indoor Electrical Key Oscillator
Q20	Blind Spot Monitor Sensor RH
Q24	Rear Seat Heater (Bench Type Rear Seat Back Cover)
Q25	Rear Buckle Switch RH
Q29	No. 20 Junction Connector
Q30	No. 21 Junction Connector
Q31	No. 7 CAN Junction Connector
Q32	No. 1 CAN Junction Connector
Q33	No. 1 CAN Junction Connector
Q34	No. 1 CAN Junction Connector
Q35	No. 1 CAN Junction Terminal
Q36	No. 2 CAN Junction Terminal
Q38	No. 22 Junction Connector
Q39	Fusible Link Block Assembly
Q40	Diode (Front Seat Outer Belt Assembly RH)


Position of Parts in Body (LHD)

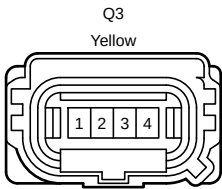

 
90980-12699




90980-12452

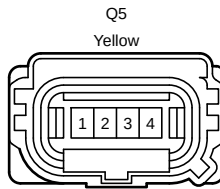


90980-12699

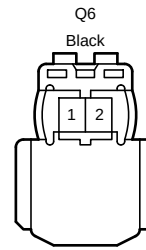

90980-12575

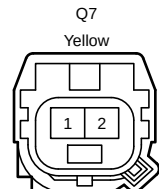

90980-12490

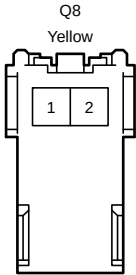


90980-12253




90980-10871



 90980-10871




90980-12063

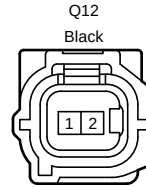


90980-12416




90980-11070

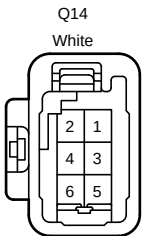


90980-11452

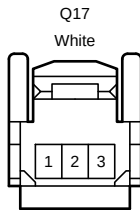


90980-12795

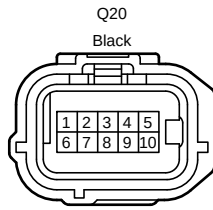


90980-12380

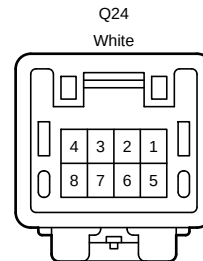


90980-12734

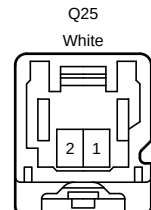


90980-12936

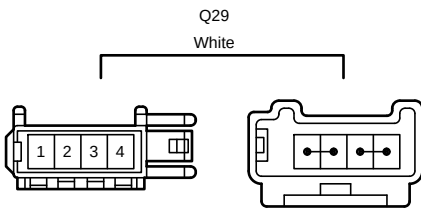

90980-12304

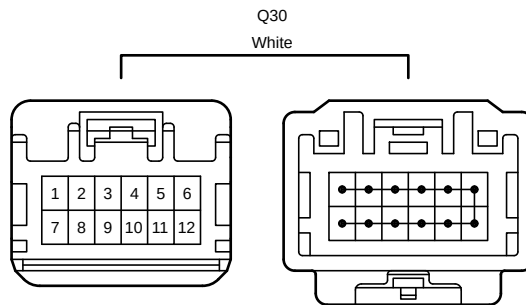

90980-12737

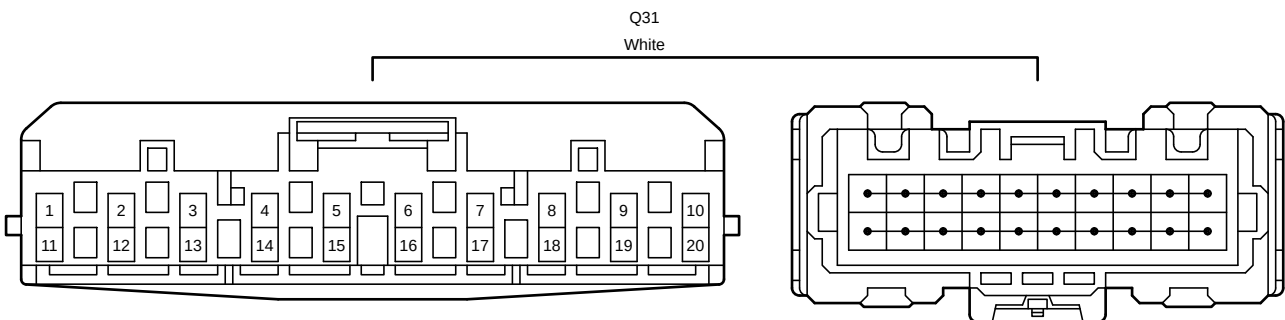

90980-12A58

Position of Parts in Body (LHD)

