



Position of Parts in Body (LHD)

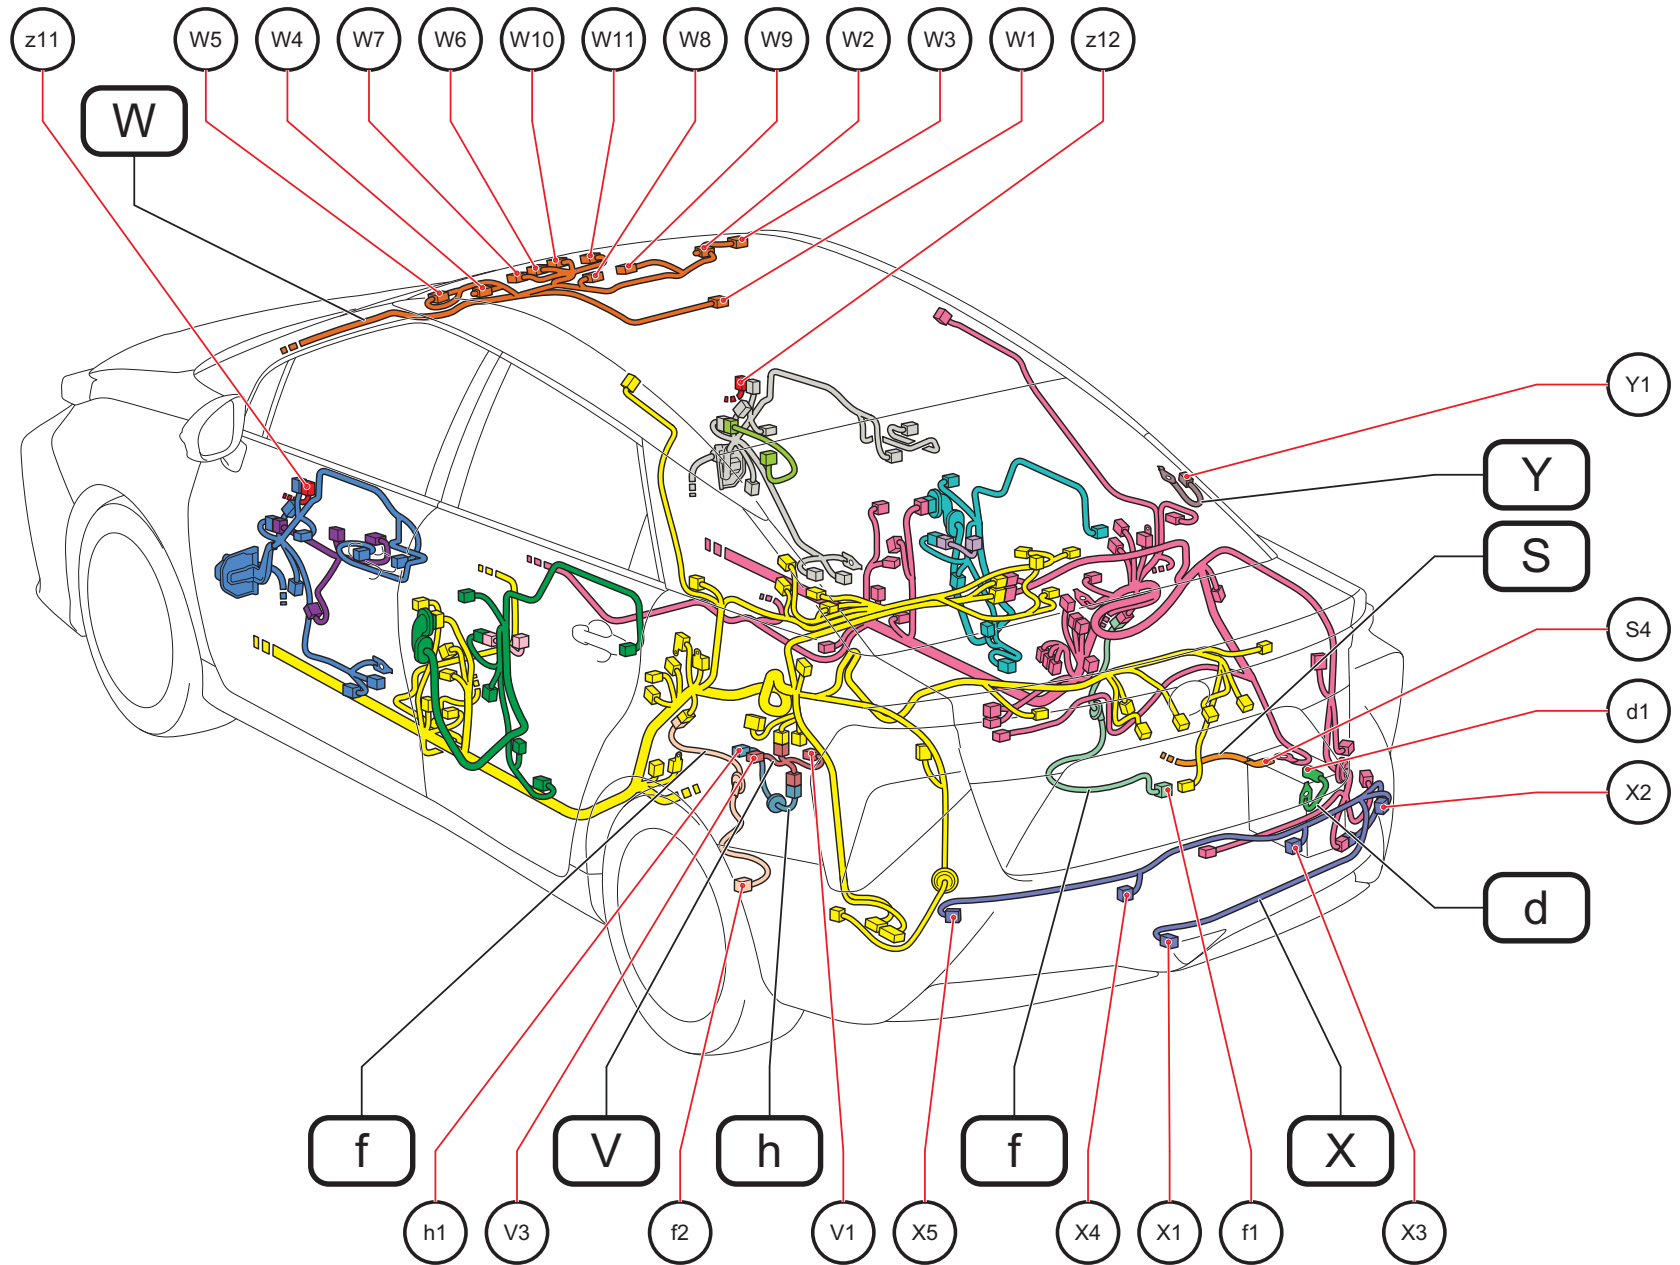

S4	Fusible Link Block Assembly
V1	Fuel Lid with Motor Lock Assembly
V3	Fuel Filler Opening Lid Sub-Assembly
W1	No. 1 Room Light Assembly
W2	Vanity Light Assembly RH
W3	Visor Assembly RH
W4	Vanity Light Assembly LH
W5	Visor Assembly LH
W6	Inner Rear View Mirror Assembly
W7	Lane Departure Warning Camera
W8	Map Light Assembly
W9	Map Light Assembly
W10	Rain Sensor
W11	Air Conditioning Thermistor Assembly
X1	Rear Fog Light Assembly
X2	Rear No. 2 Ultrasonic Sensor RH
X3	Rear No. 2 Ultrasonic Sensor Center RH
X4	Rear No. 2 Ultrasonic Sensor Center LH
X5	Rear No. 2 Ultrasonic Sensor LH
Y1	Rear Window Defogger (Back Window Glass)
d1	Battery
f1	Skid Control Sensor RH (Rear Axle Hub & Bearing Assembly RH)
f2	Skid Control Sensor LH (Rear Axle Hub & Bearing Assembly LH)
h1	Hydrogen Fuel Control Transmitter
z11	Outer Rear View Mirror Assembly LH
z12	Outer Rear View Mirror Assembly RH

Position of Parts in Body (LHD)

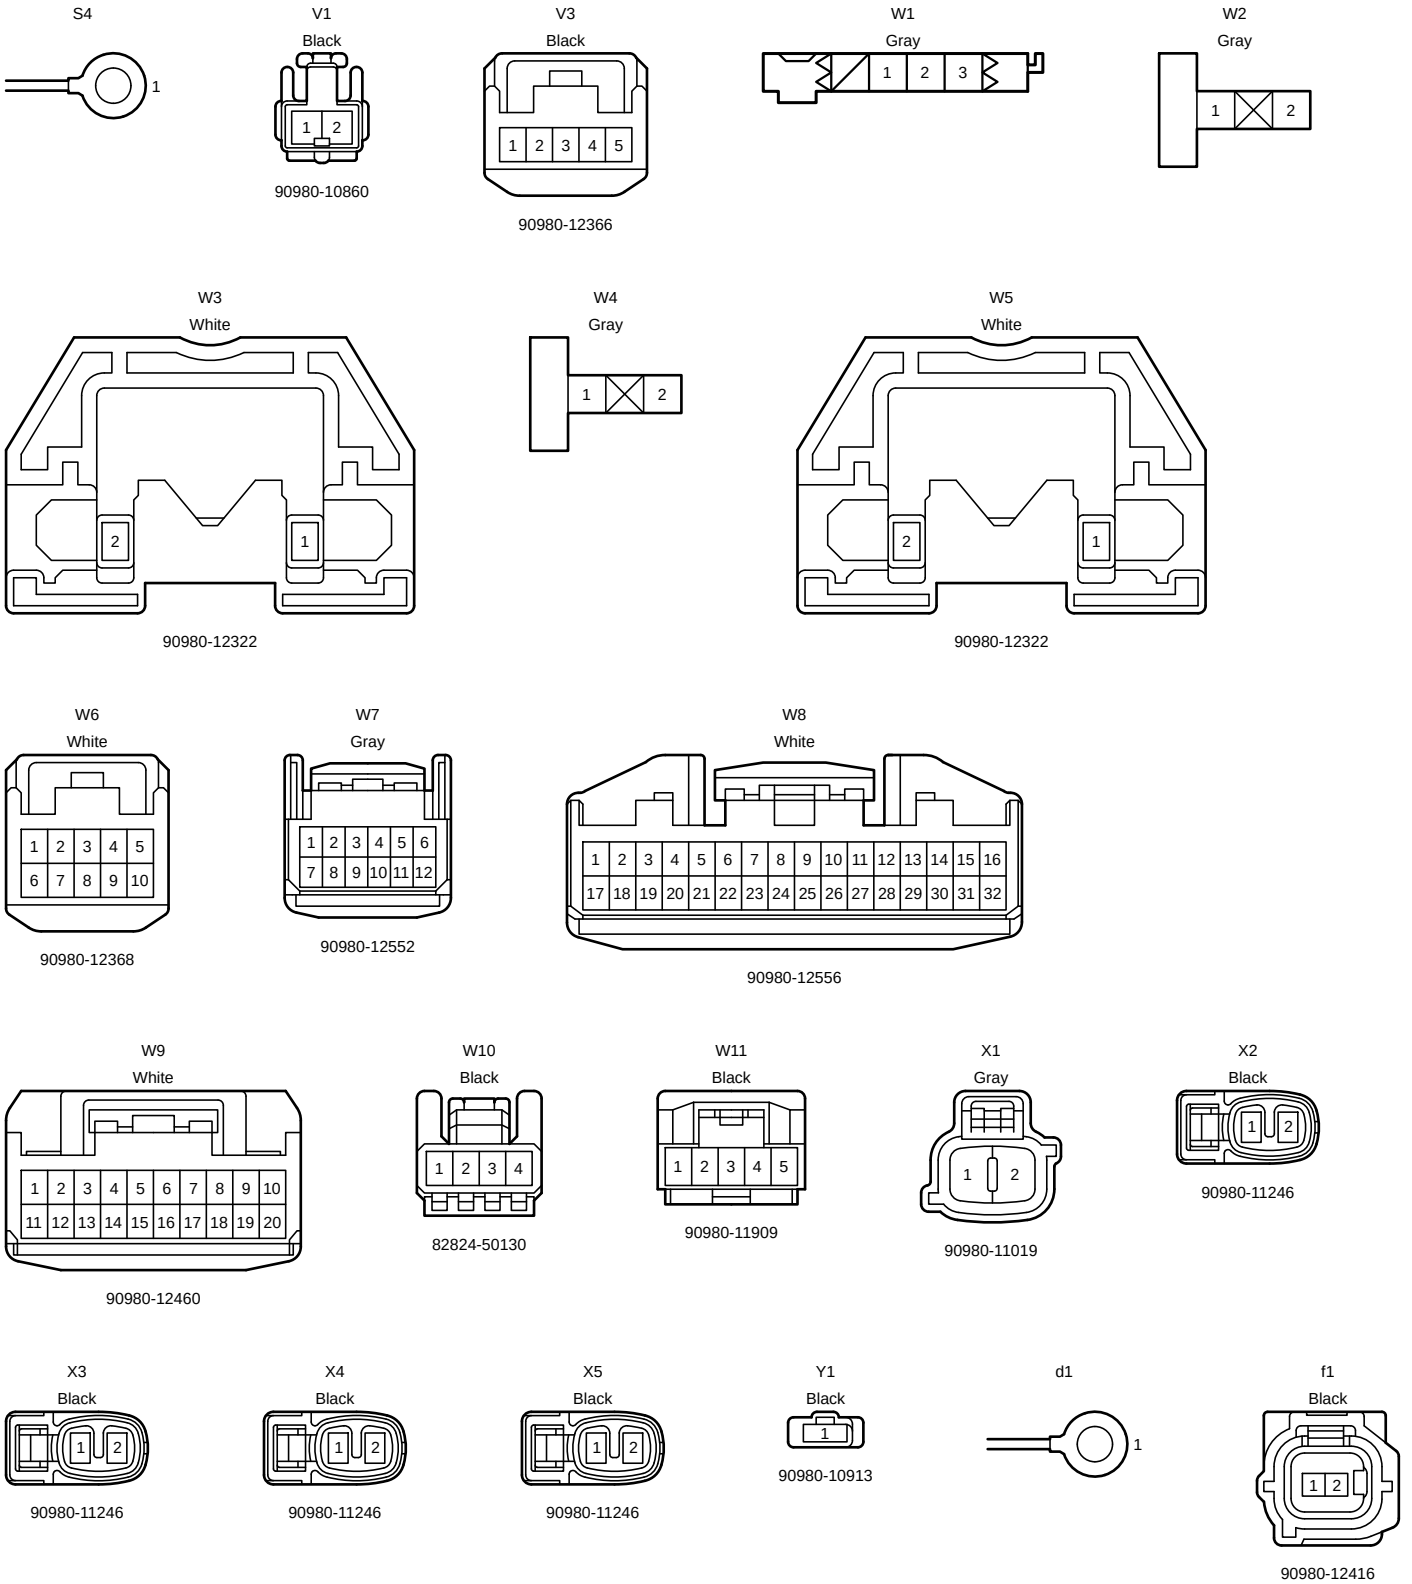

Position of Parts in Body (LHD)

