



Position of Parts in Motor Compartment (LHD)

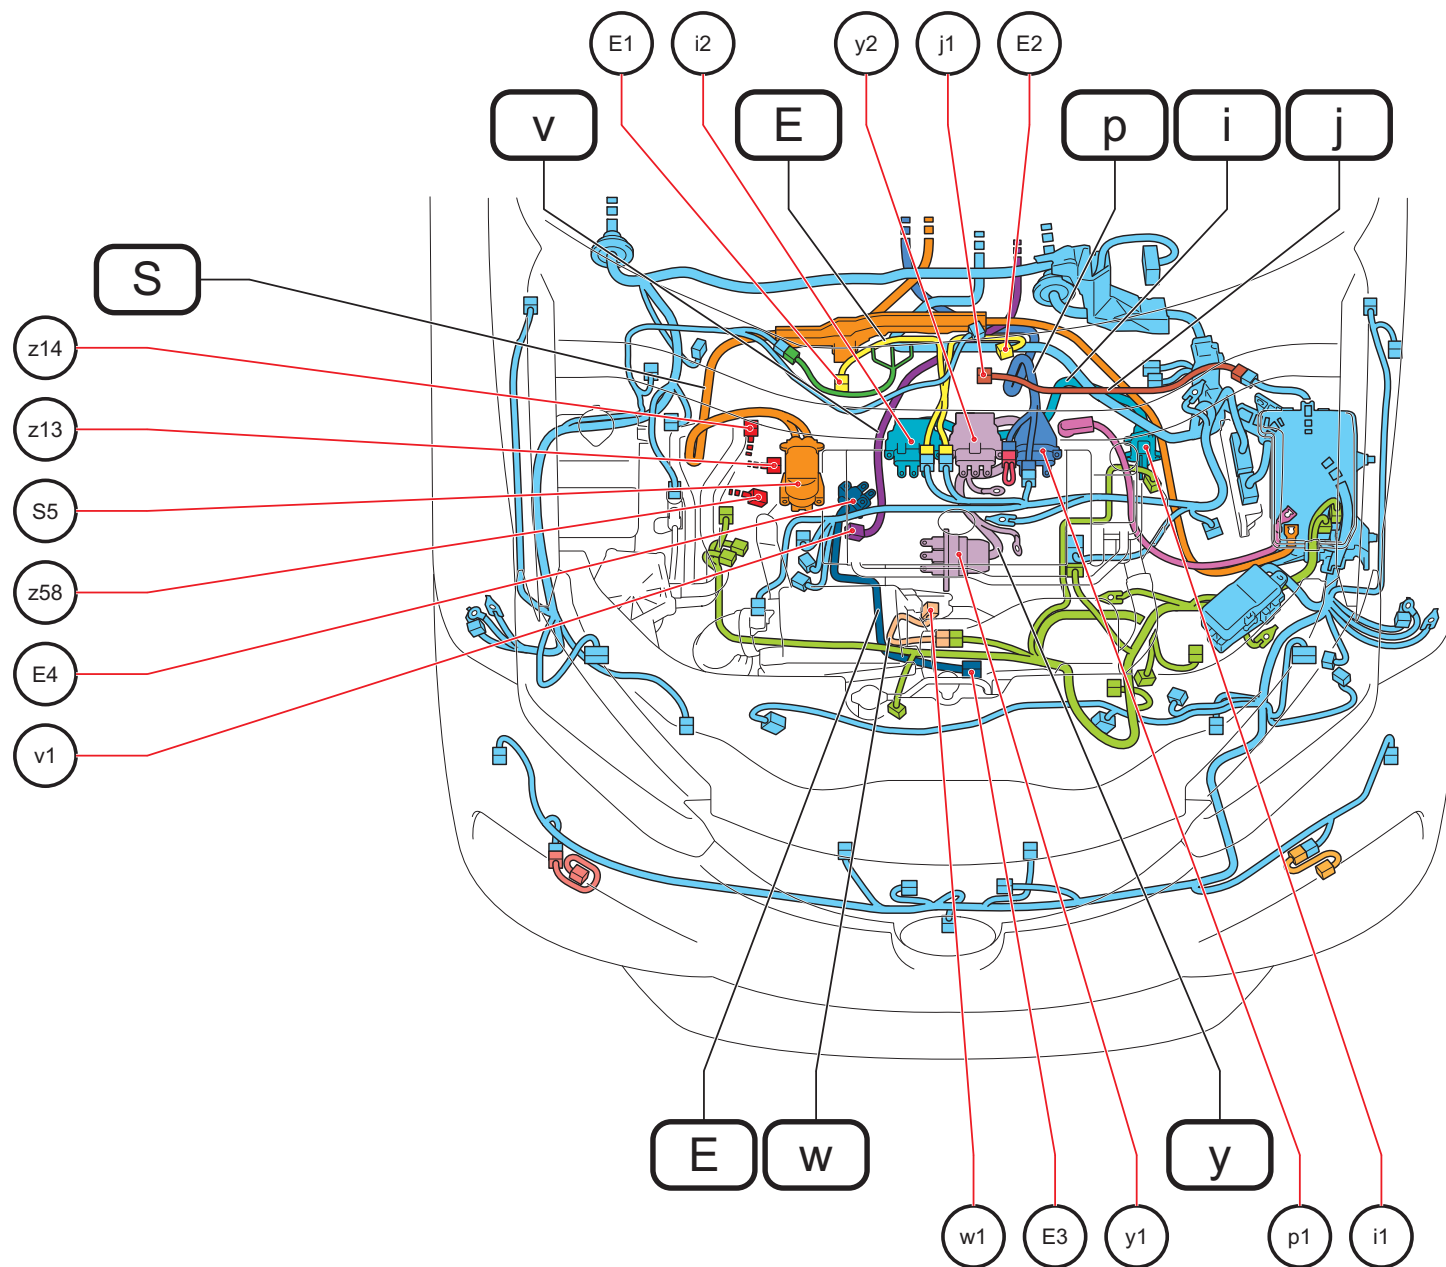


Position of Parts in Motor Compartment (LHD)

E1	Electric Heater Sub-Assembly
E2	FC Cooling Water Temperature Control Valve
E3	Compressor with Motor Assembly
E4	Inverter with Converter Assembly
S5	FC Inverter Input Junction Assembly
i1	FCV Transaxle with Motor Assembly
i2	Inverter with Converter Assembly
j1	Front Hydrogen Detector
p1	Inverter with Converter Assembly
v1	FC Water & Hydrogen Pump Inverter Assembly
w1	FC Air Compressor with Motor Assembly
y1	FC Air Compressor with Motor Assembly
y2	Inverter with Converter Assembly
z13	FC Inverter Input Junction Assembly , FC Water & Hydrogen Pump Inverter Assembly
z14	FC Inverter Input Junction Assembly , Electric Heater Sub-Assembly
z58	FC Cooling Water Pump Assembly , FC Water & Hydrogen Pump Inverter Assembly


Position of Parts in Motor Compartment (LHD)

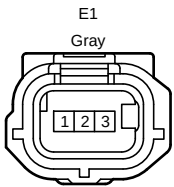


90980-12353

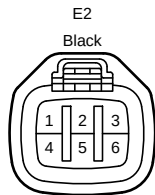


90980-11144

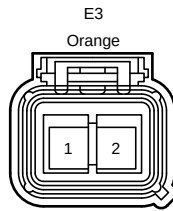


90980-12568

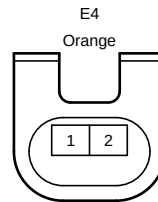


82824-48330

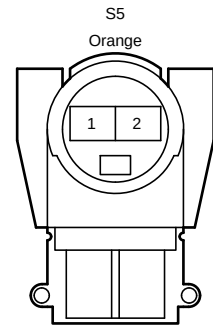


90980-12A26

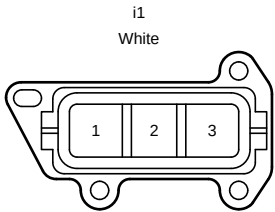


82824-48381

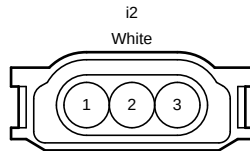


82824-48390

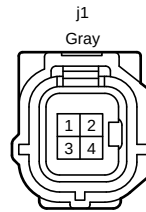


90980-12495

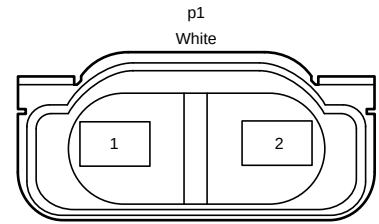


G9A22-62010

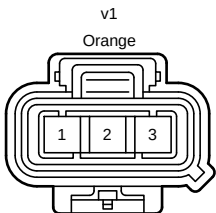


82824-62080

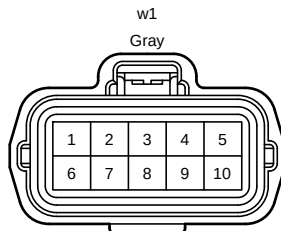


90980-11658

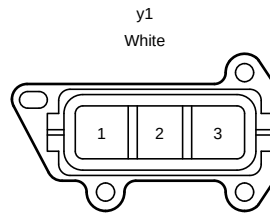


17A95-77010

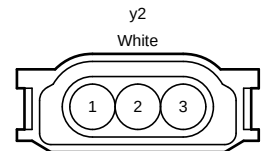


17A96-77010

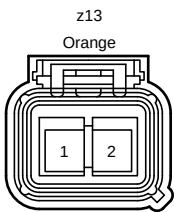

90980-12568

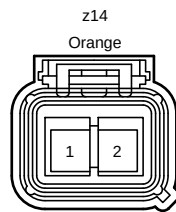

90980-12568

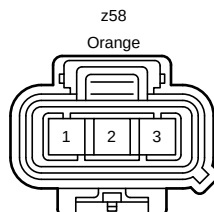

82824-62080