

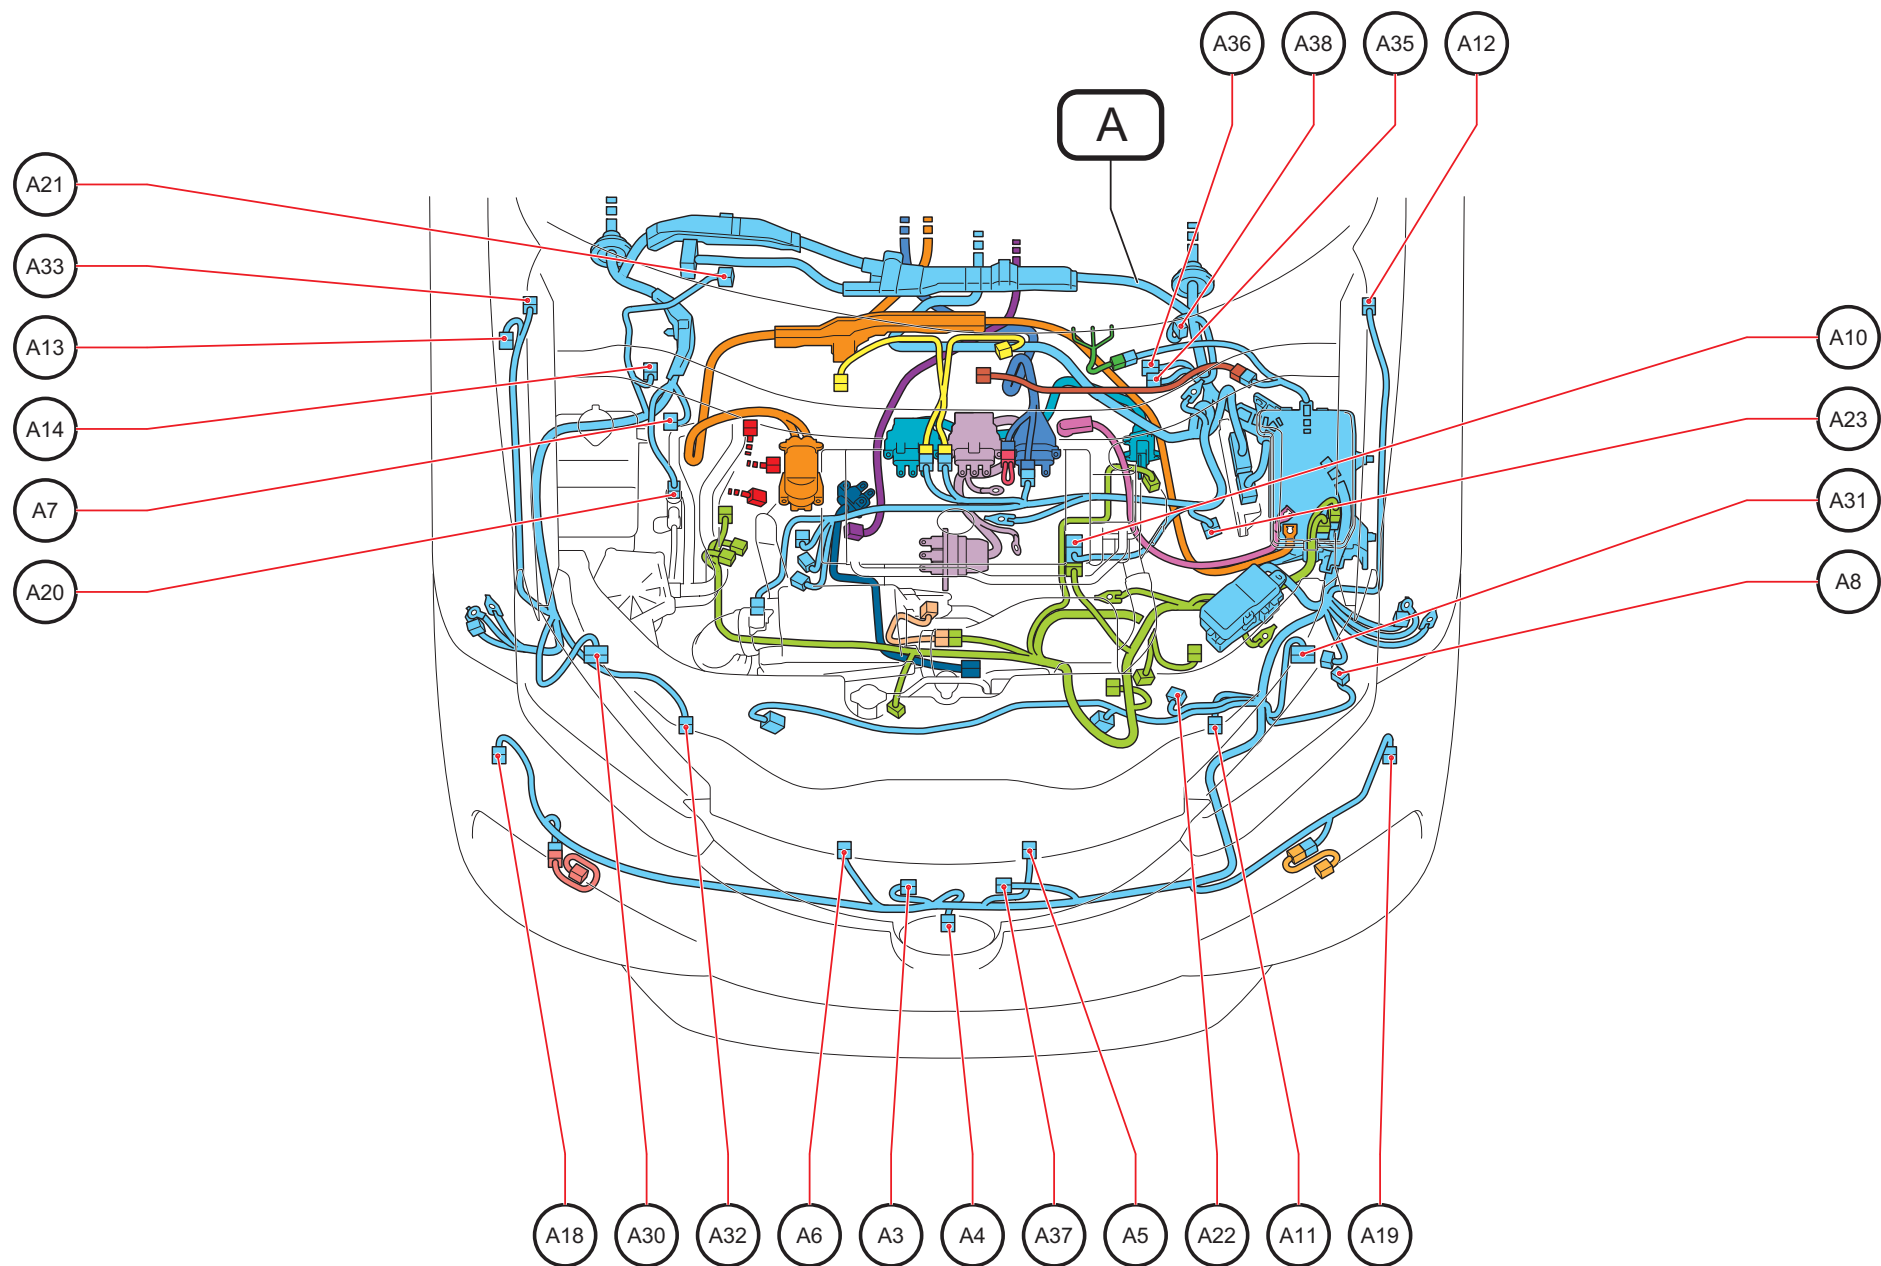
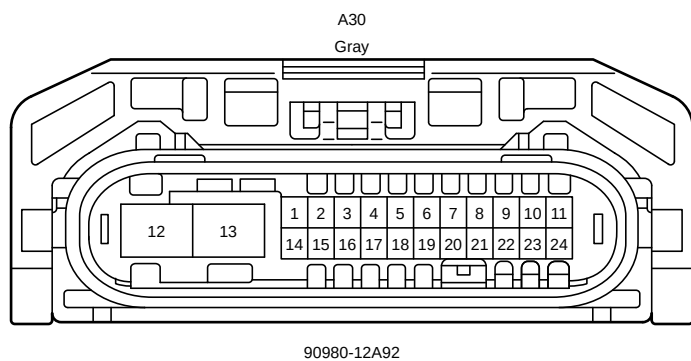
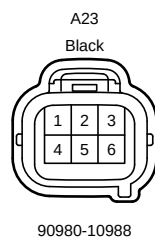
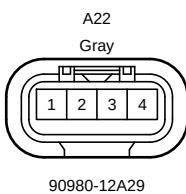
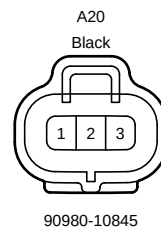
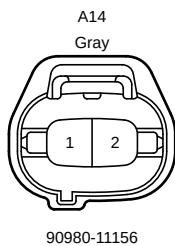
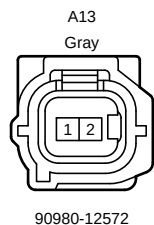
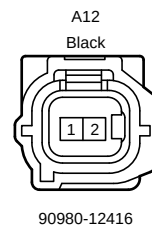
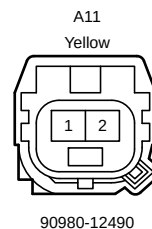
 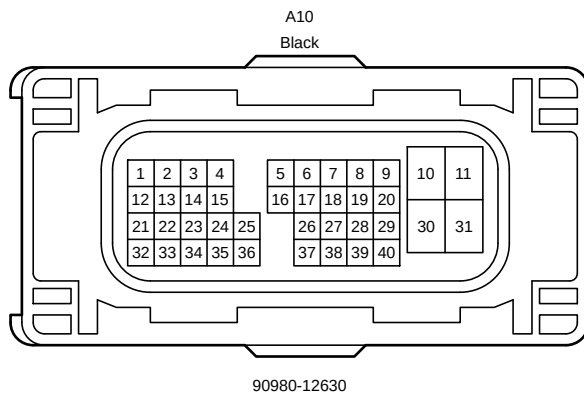
 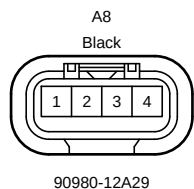



Position of Parts in Motor Compartment (RHD)



A3	Millimeter Wave Radar Sensor Assembly
A4	Thermistor Assembly
A5	High Pitched Horn Assembly
A6	Low Pitched Horn Assembly
A7	Windshield Washer Motor and Pump Assembly
A8	Oil with Motor Pump Assembly
A10	Inverter with Converter Assembly
A11	Front Airbag Sensor LH
A12	Front Speed Sensor LH
A13	Wireless Door Lock Buzzer
A14	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A18	Clearance Light Assembly RH
A19	Clearance Light Assembly LH
A20	Air Conditioner Pressure Sensor
A21	Windshield Wiper Motor Assembly
A22	Heater Water with Motor Pump Assembly
A23	3 Way Valve
A30	Headlight Light Control ECU RH (Headlight Assembly RH)
A31	Headlight Light Control ECU LH (Headlight Assembly LH)
A32	Front Airbag Sensor RH
A33	Front Speed Sensor RH
A35	Brake Booster Pump Assembly
A36	Brake Booster Pump Assembly
A37	Hood Courtesy Switch (Hood Lock Assembly)
A38	Security Horn Assembly

Position of Parts in Motor Compartment (RHD)

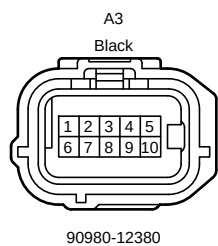

Position of Parts in Motor Compartment (RHD)

