


Position of Parts in Motor Compartment (RHD)

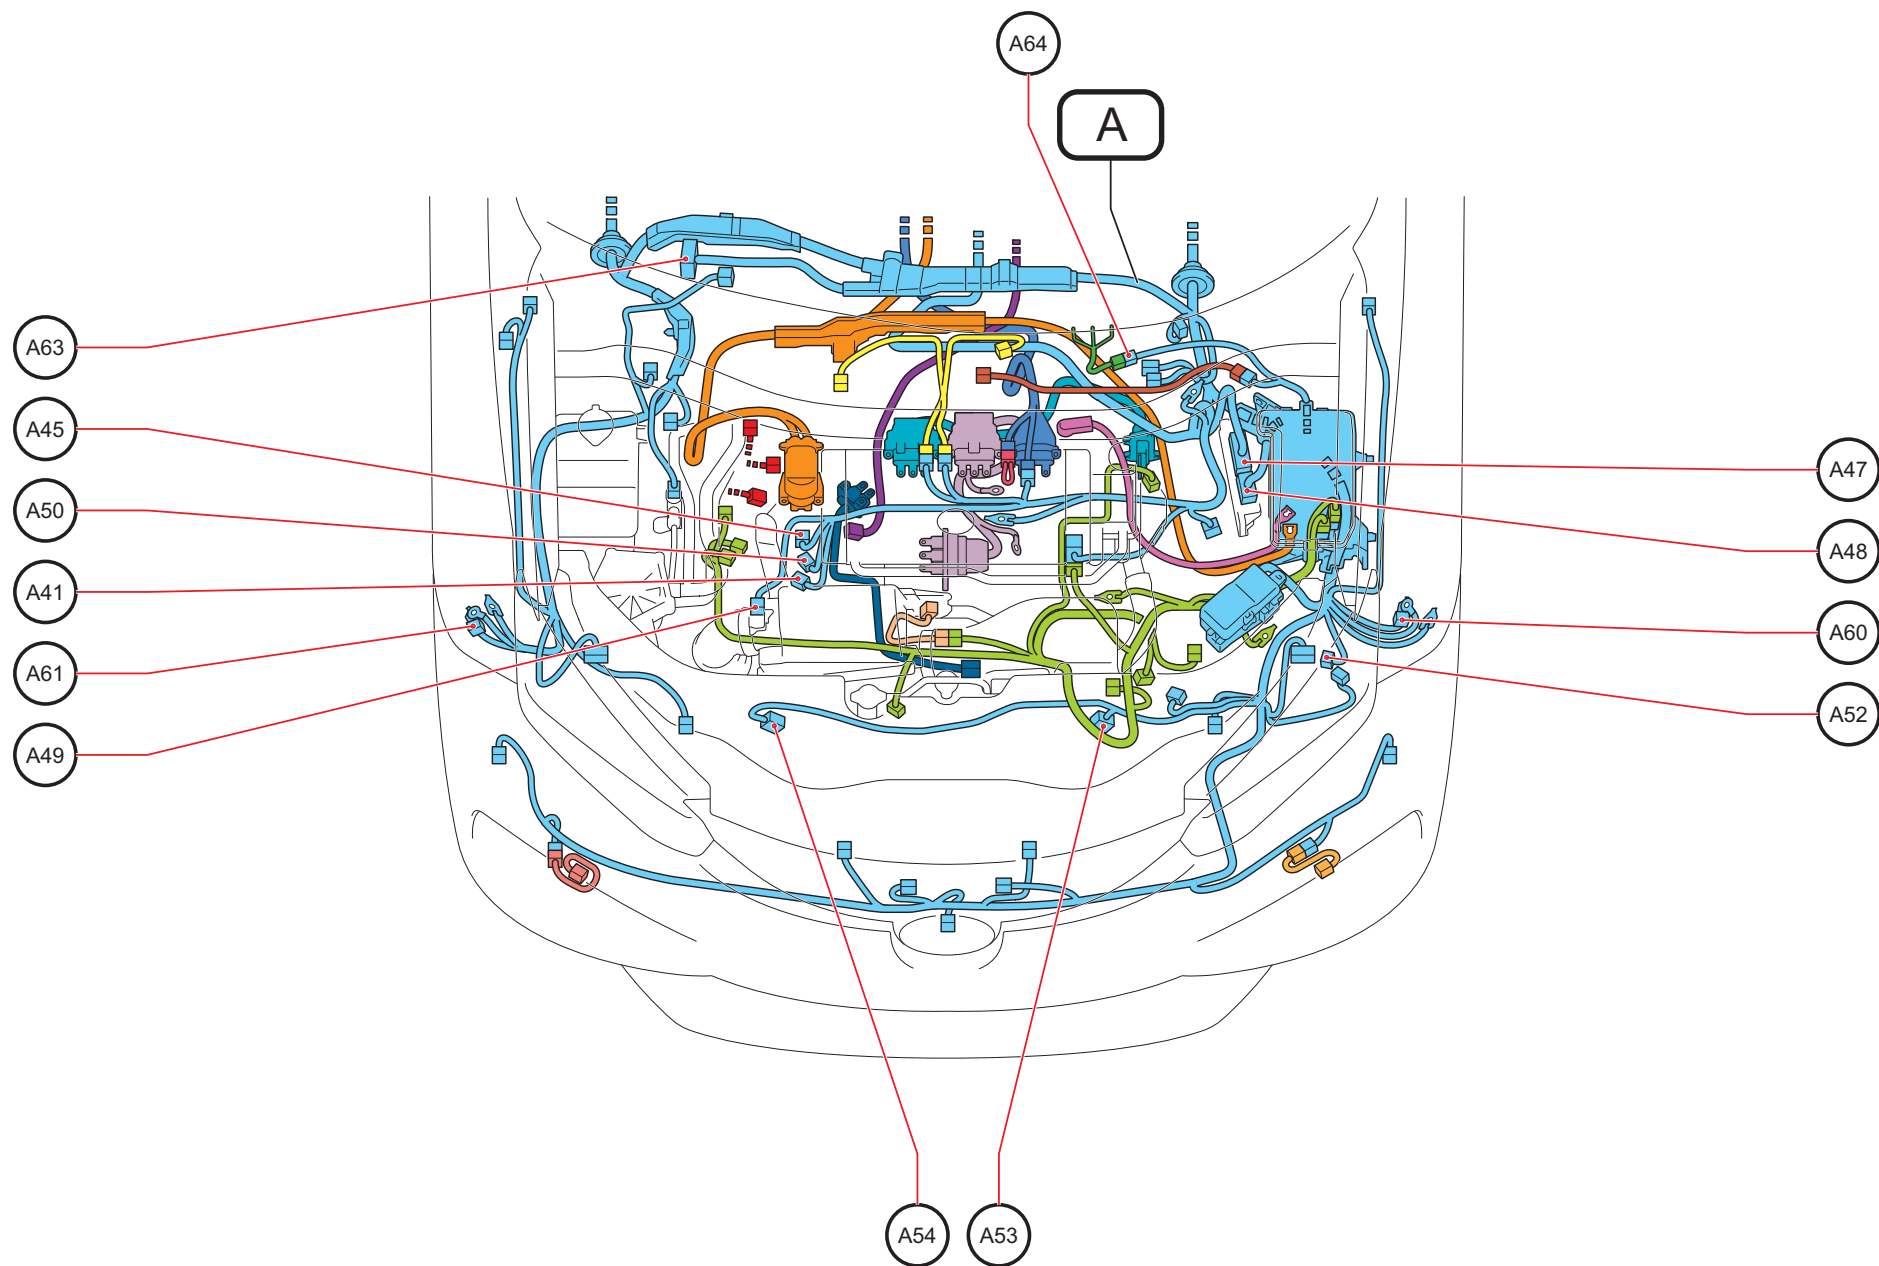


A41	FC Water & Hydrogen Pump Inverter Assembly
A45	FC Inverter Input Junction Cover
A47	FC Control ECU
A48	FC Control ECU
A49	Intake Mass Air Flow Meter Sub-Assembly
A50	FC Water & Hydrogen Pump Inverter Assembly
A52	Solenoid Resistor Assembly
A53	No. 1 Cooling Fan with Controller Motor
A54	No. 2 Cooling Fan with Controller Motor
A60	No. 1 Ground Junction Connector
A61	No. 2 Ground Junction Connector
A63	Skid Control ECU Assembly
A64	Front Wiper Deicer (Windshield Glass)

Position of Parts in Motor Compartment (RHD)

A41

Gray

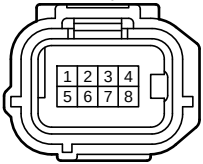

90980-12520

A45


Gray



90980-11162

A47


Black

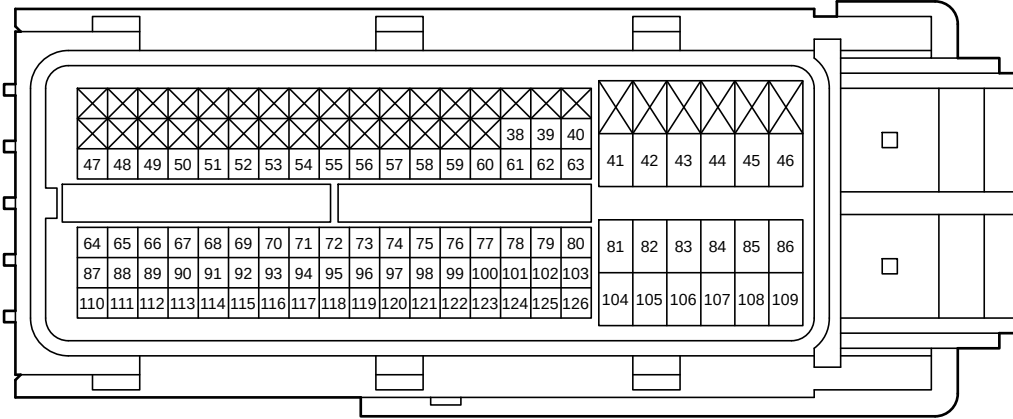

90980-12398

A48


Black

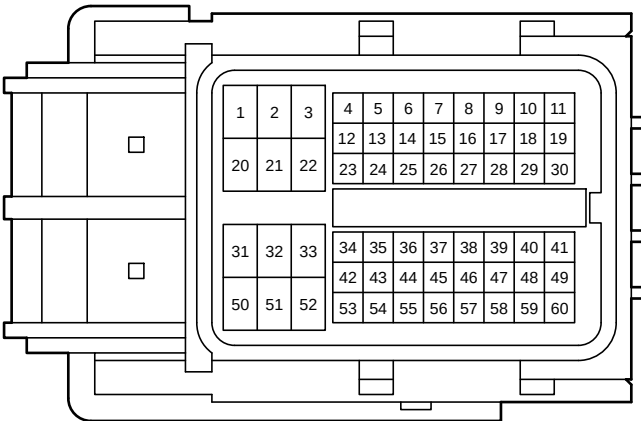

90980-12461

A49


Black

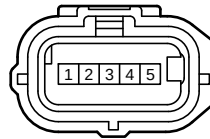

90980-12292

A50


Black

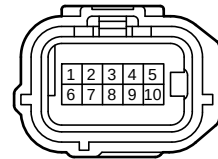

90980-12380

A52


Black

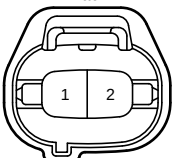

90980-11156

A53


Black

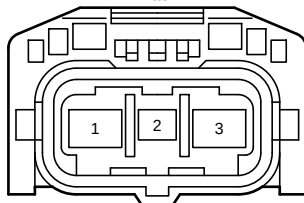

90980-12928

A54

Black

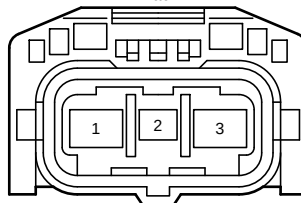

90980-12928

Position of Parts in Motor Compartment (RHD)

