



Position of Parts in Instrument Panel (LHD)

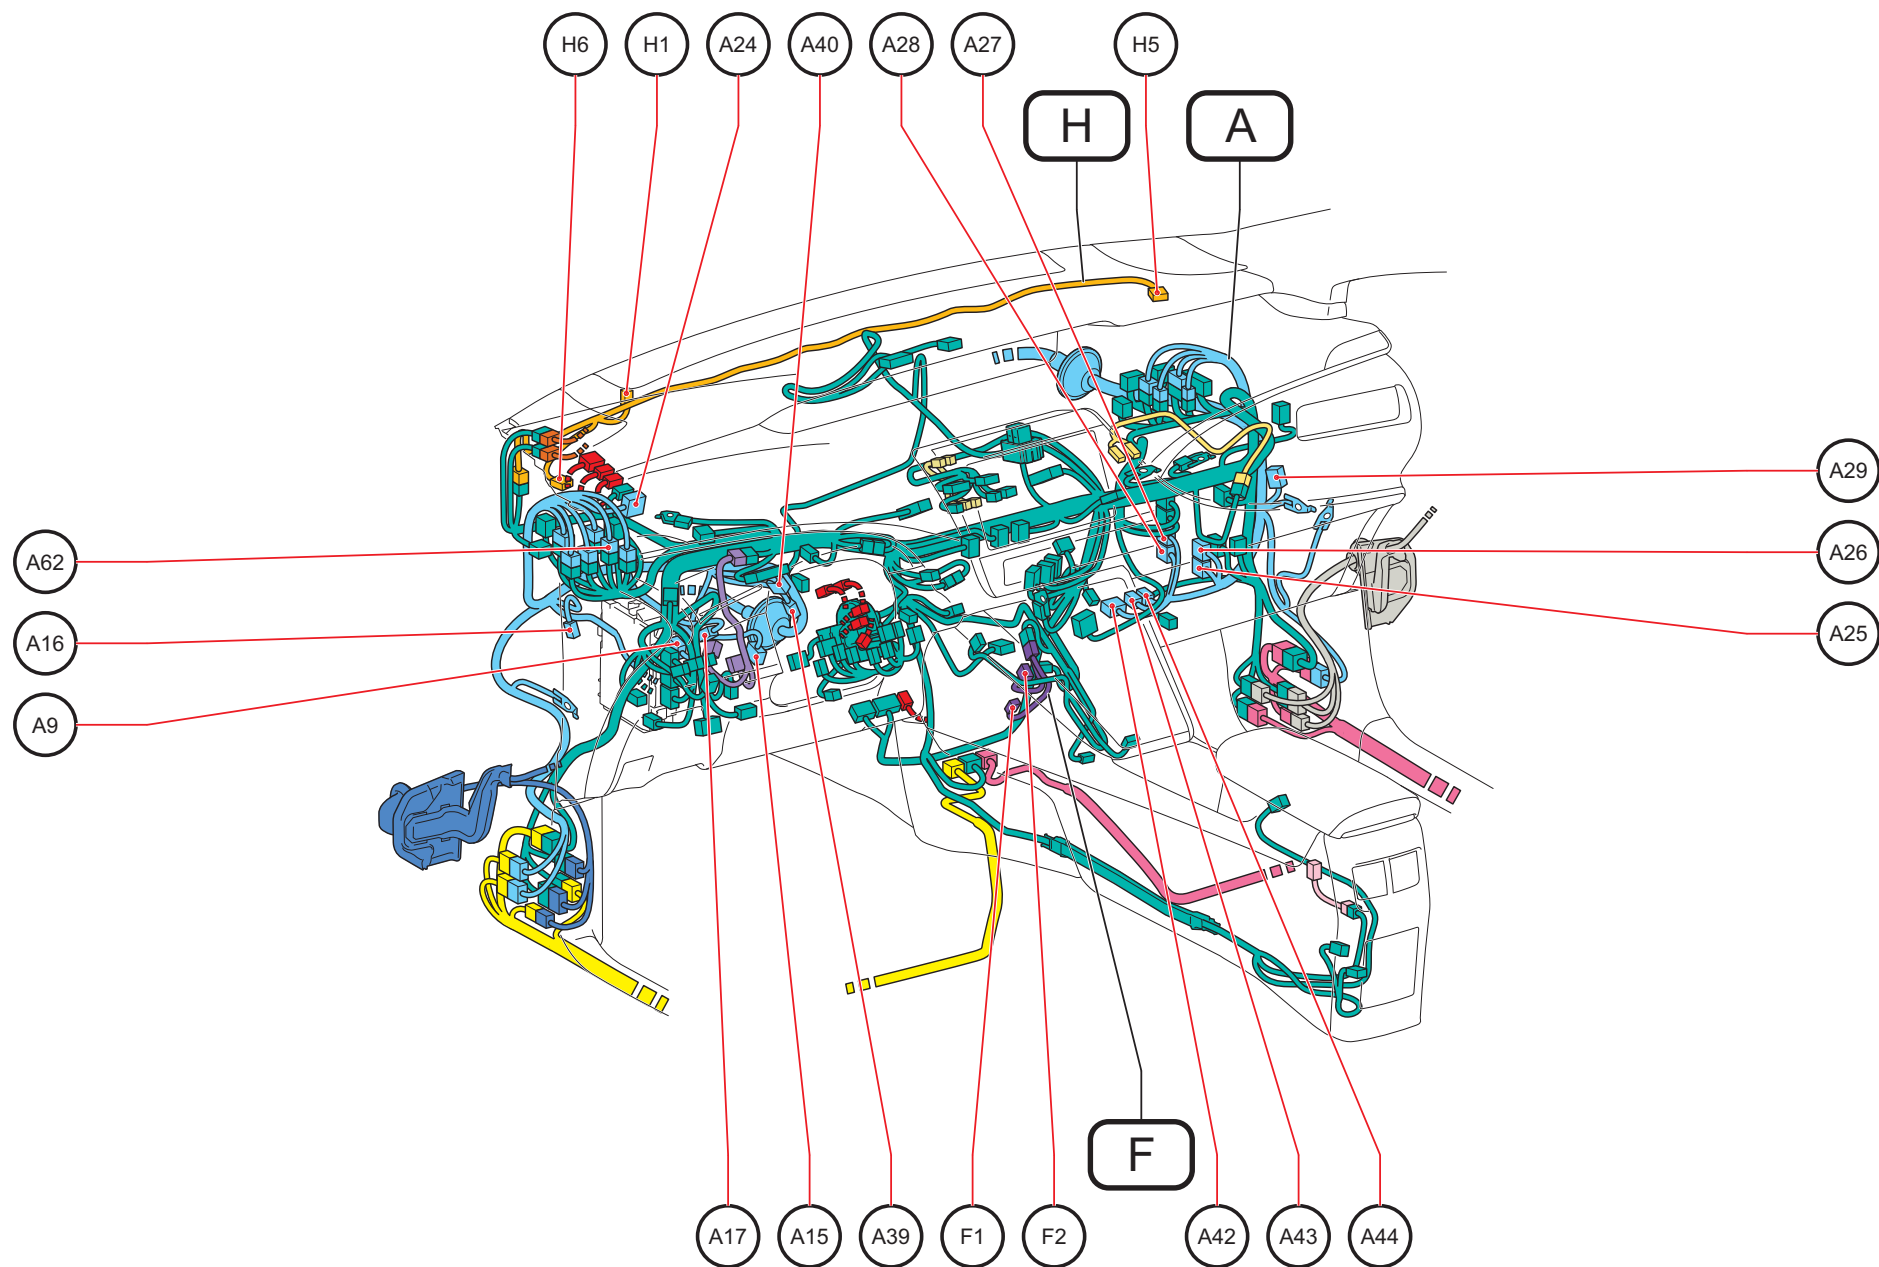


Position of Parts in Instrument Panel (LHD)

A9	Brake Pedal Stroke Sensor Assembly
A15	Accelerator Pedal Sensor Assembly
A16	Parking Brake Switch Assembly
A17	Stop Light Switch Assembly
A24	Power Steering ECU Assembly
A25	Transmission Control ECU Assembly
A26	Transmission Control ECU Assembly
A27	EV Control ECU
A28	EV Control ECU
A29	Clearance Warning ECU Assembly
A39	No. 1 Junction Connector
A40	No. 2 Junction Connector
A42	Quick Heater Assembly
A43	Quick Heater Assembly
A44	Quick Heater Assembly
A62	No. 3 Junction Connector
F1	No. 2 Shift Lever Position Sensor
F2	Shift Lever Position Sensor
H1	Automatic Light Control Sensor
H5	Front No. 2 Speaker Assembly RH
H6	Front No. 2 Speaker Assembly LH

Position of Parts in Instrument Panel (LHD)

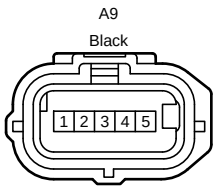


90980-12292

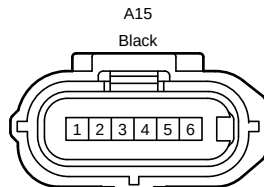


90980-12831




90980-10871

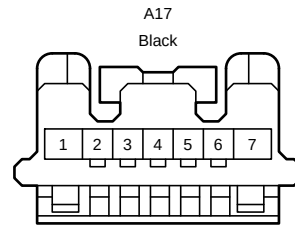


90980-12092

 


90980-12653

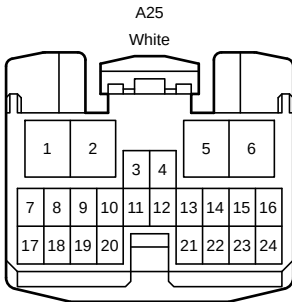


90980-12560

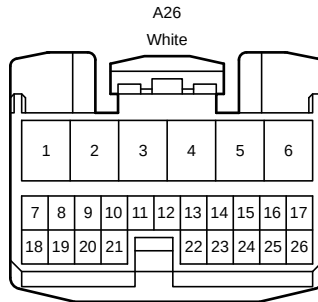


90980-12561

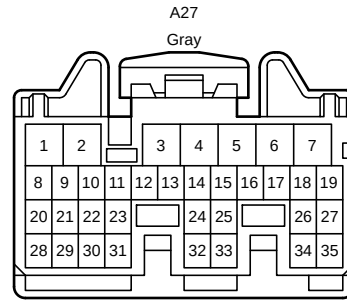


90980-12428

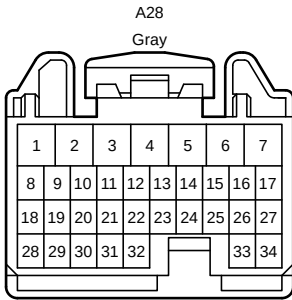



90980-12430

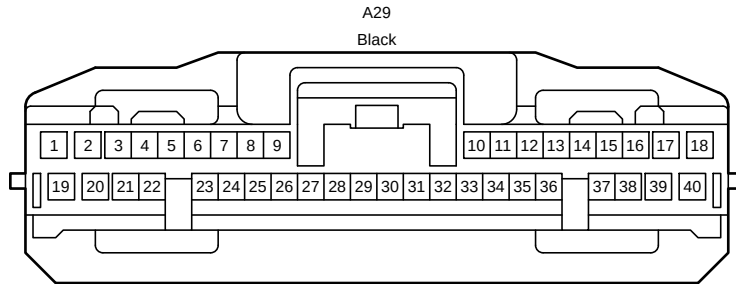


90980-12924

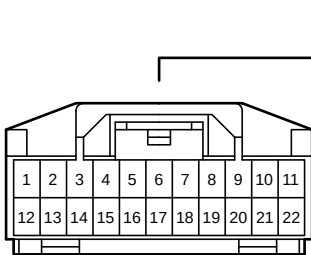

90980-11915

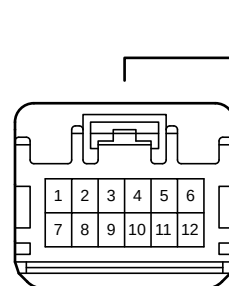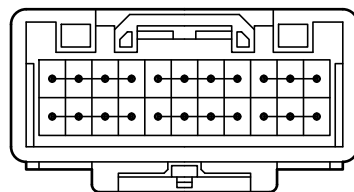

90980-12773

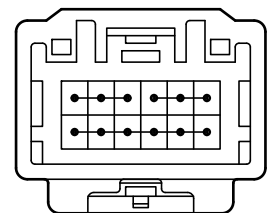

Position of Parts in Instrument Panel (LHD)

