 
 


Position of Parts in Instrument Panel (RHD)

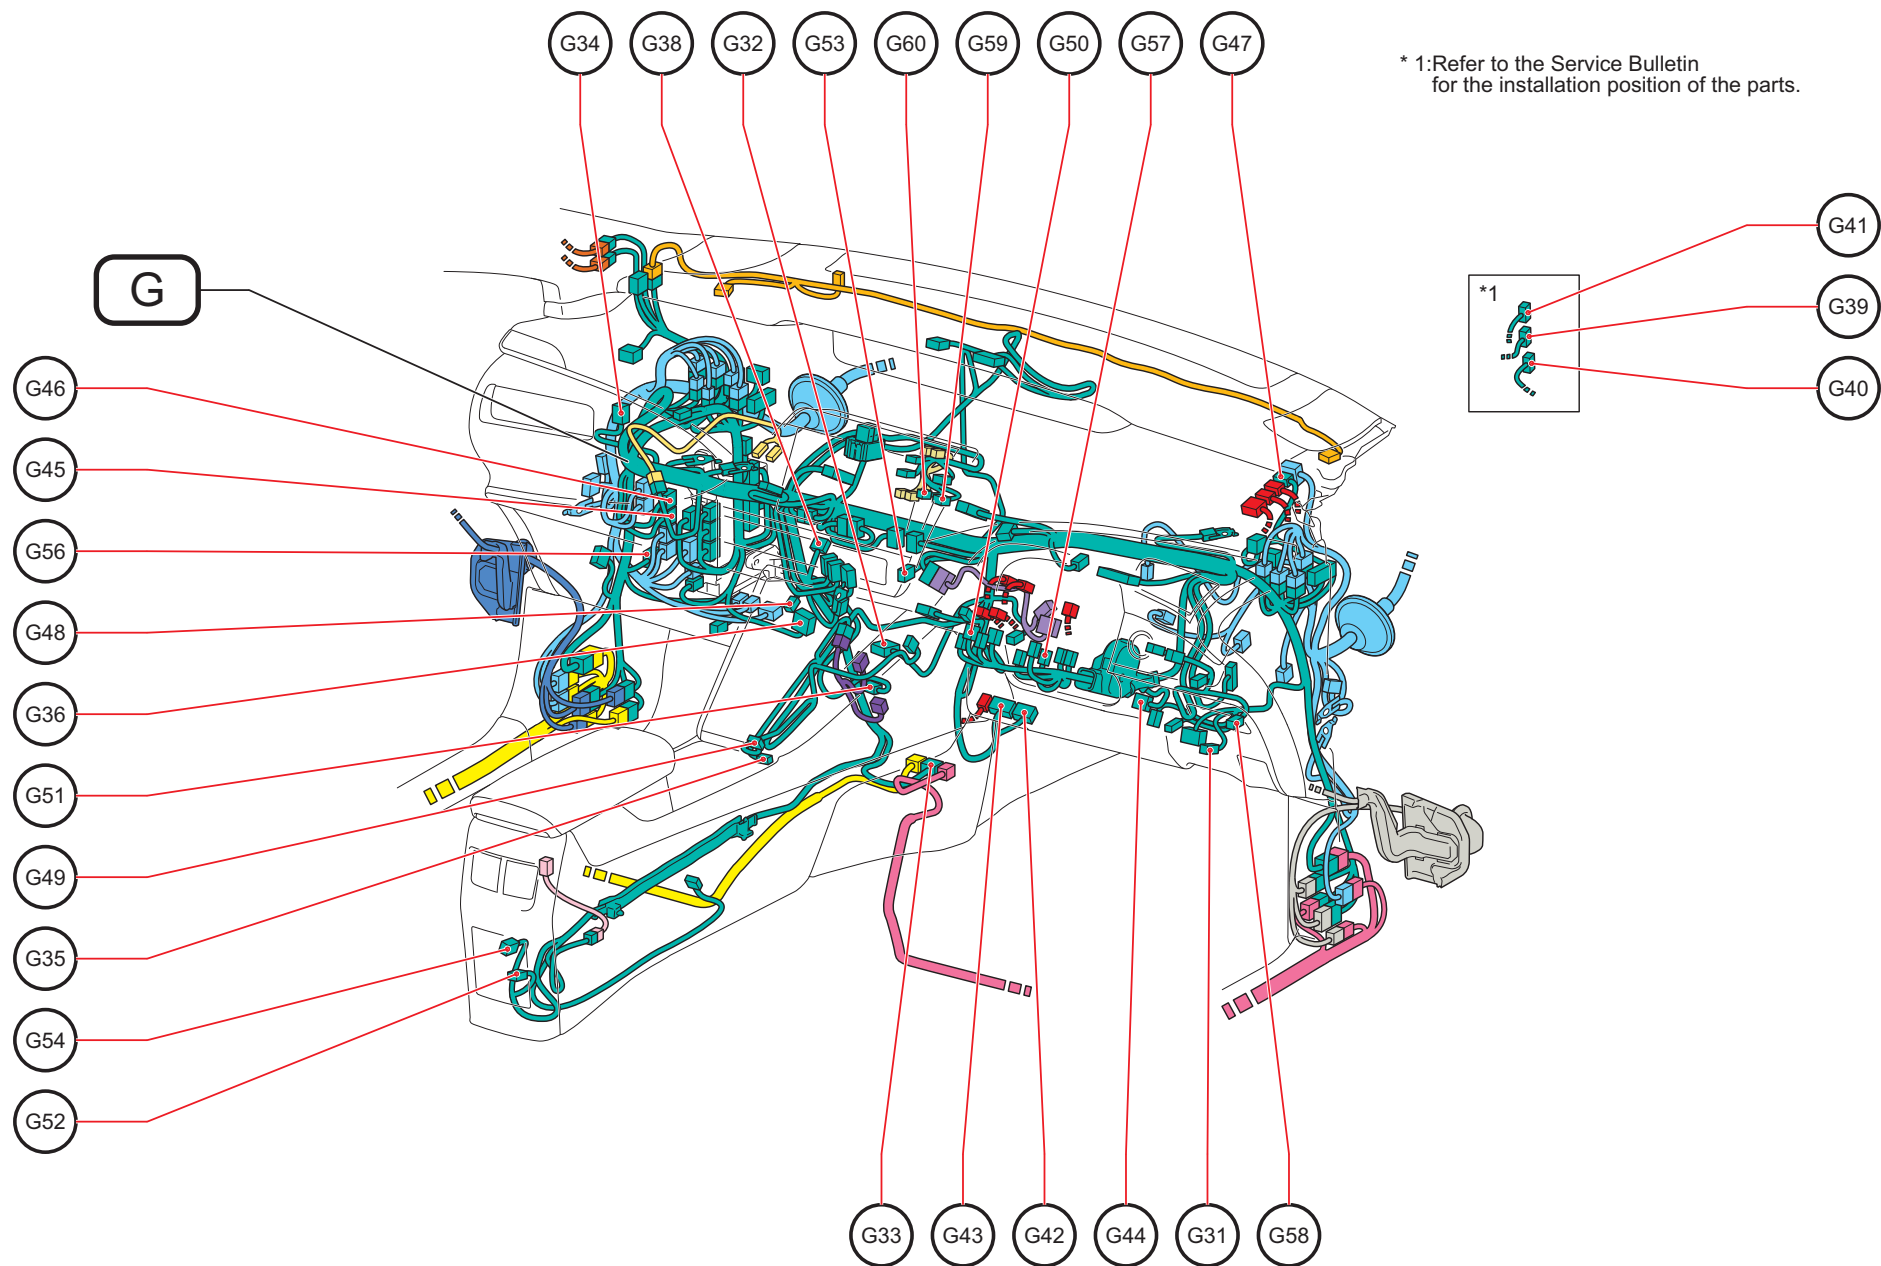


G31	Lower No. 1 Instrument Panel Airbag Assembly
G32	Windshield Wiper Relay Assembly
G33	Airbag ECU Assembly
G34	Airbag Cut Off Switch Cylinder Sub-Assembly
G35	No. 1 Indoor Electrical Key Antenna Assembly
G36	Blower with Fan Motor Sub-Assembly
G38	Diagnosis Record Computer
G39	Certification ECU Assembly
G40	Certification ECU Assembly
G41	Certification ECU Assembly
G42	Air Conditioning Amplifier Assembly
G43	Air Conditioning Amplifier Assembly
G44	Steering Column Assembly
G45	EV Control ECU
G46	EV Control ECU
G47	Power Steering ECU Assembly
G48	Luggage Door Opening Cancel Switch Assembly
G49	Integration Control & Panel Assembly
G50	Spiral Cable with Sensor Sub-Assembly
G51	Cooler Blower Assembly
G52	Temperature Control Switch (Console Rear End Panel Sub-Assembly)
G53	FC Cooling Water Temperature Control Valve
G54	No. 1 Power Outlet Socket Assembly
G56	Network Gateway ECU
G57	Steering Column Assembly
G58	Luggage Door Opening Switch Assembly
G59	Radio Receiver Assembly
G60	Radio Receiver Assembly


Position of Parts in Instrument Panel (RHD)



 
90980-12452

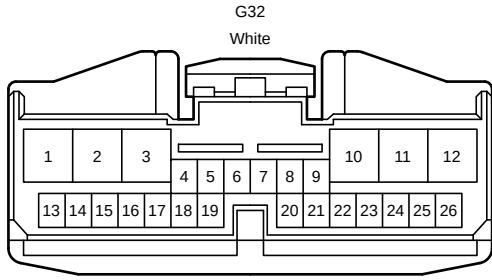


90980-12444

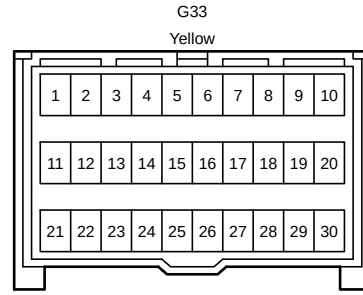 


90980-12391

 


90980-12063

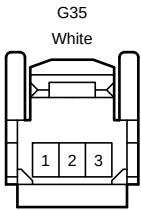 


90980-12795

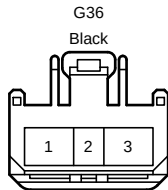 


90980-11667

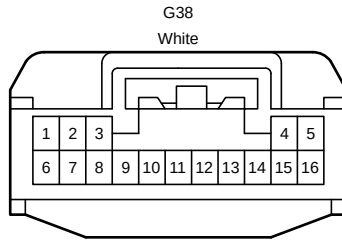 


90980-12423

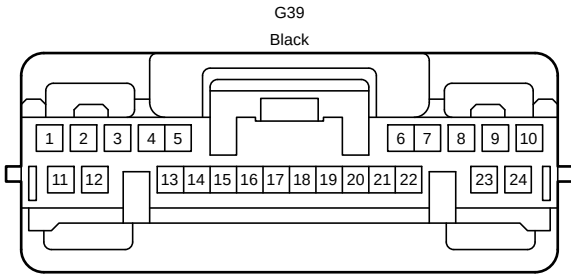 


90980-12912

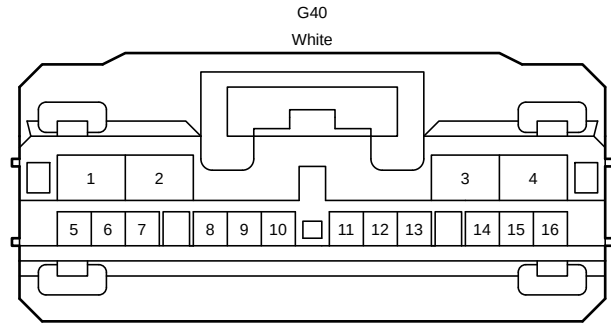 


90980-12763

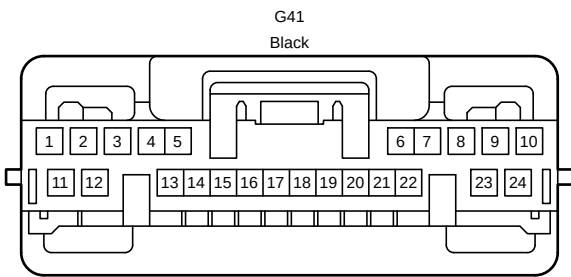 


90980-12A42

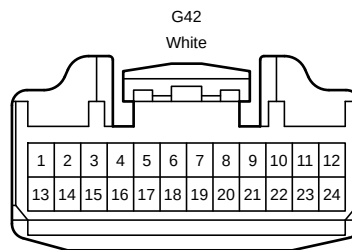 


90980-12554

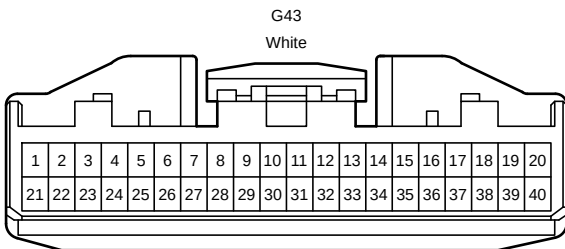 

90980-12557

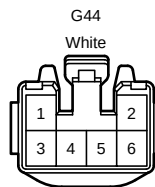 


90980-10797

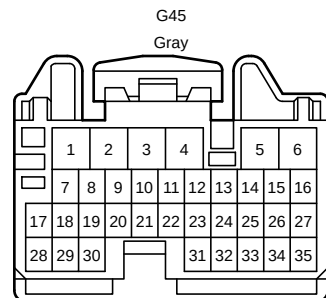 


90980-12429

 
Position of Parts in Instrument Panel (RHD)

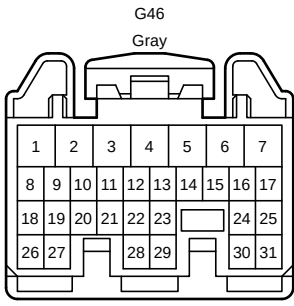


90980-12431

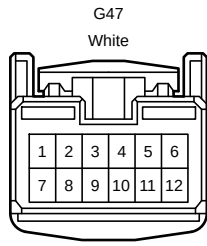 


90980-12614

 


90980-10825

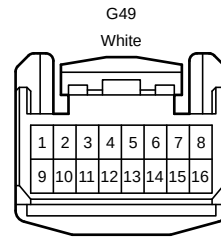 


90980-12553

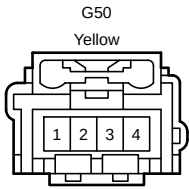 


90980-12160

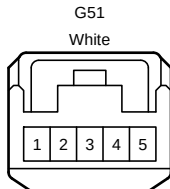 


90980-12366

 


90980-11148

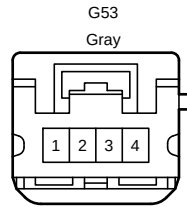 

90980-12733

 


90980-12498

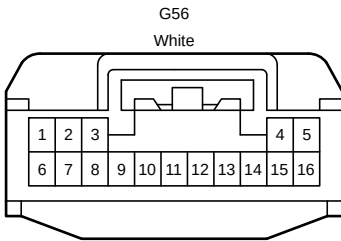 


90980-12423



 
90980-10871

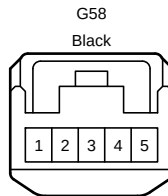

90980-12366

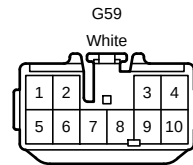 

90980-10997

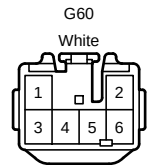 

90980-10996