

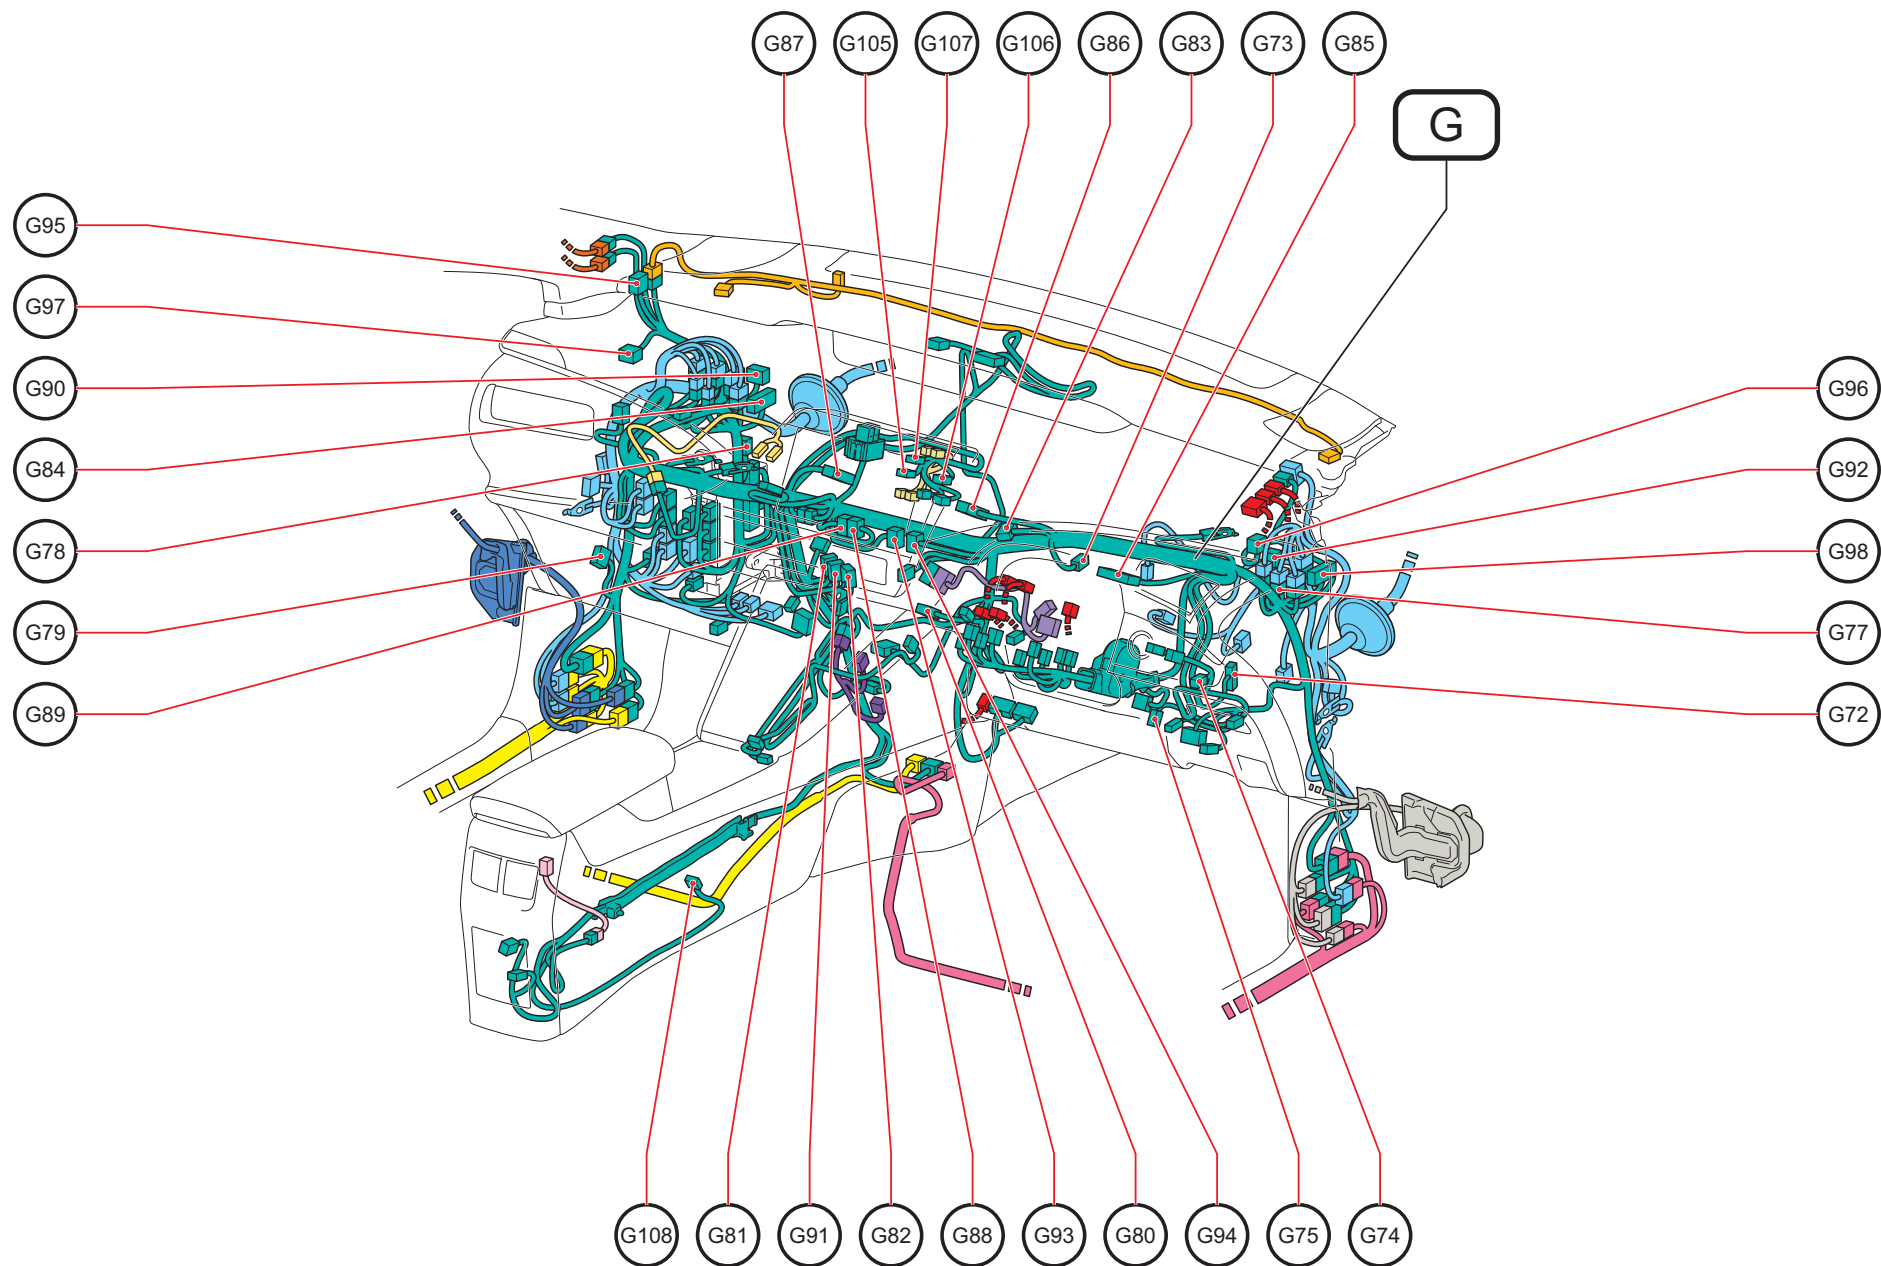
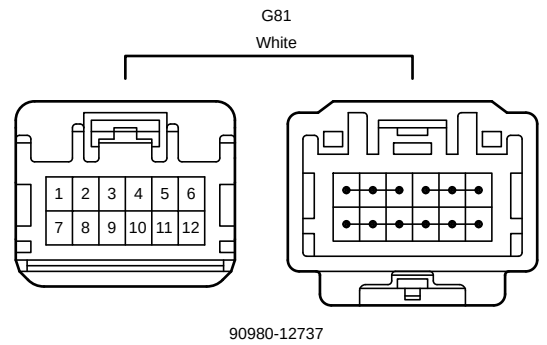
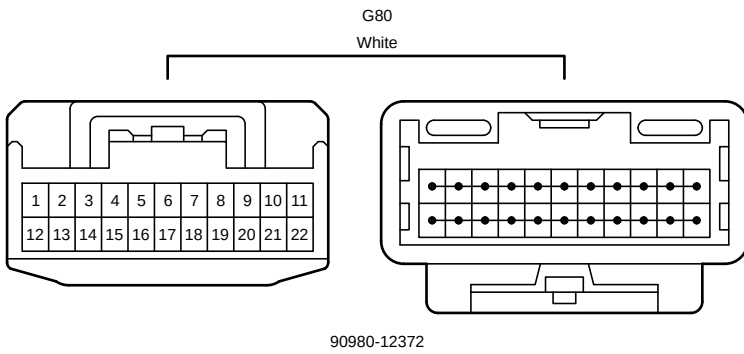
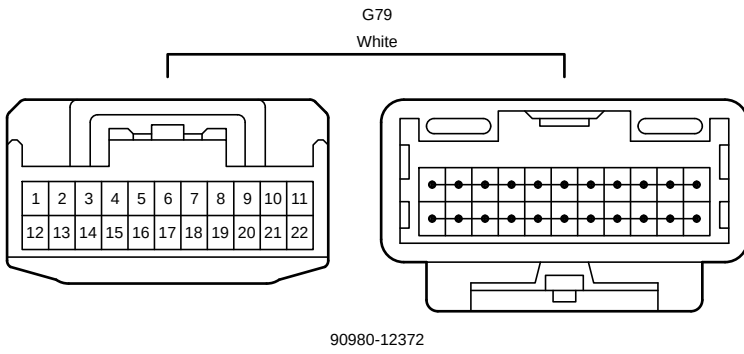
 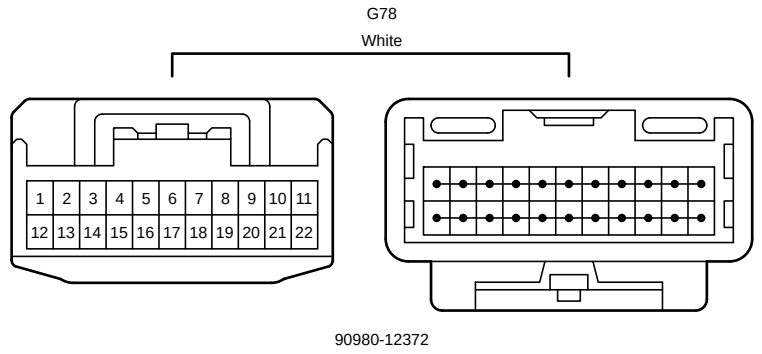
 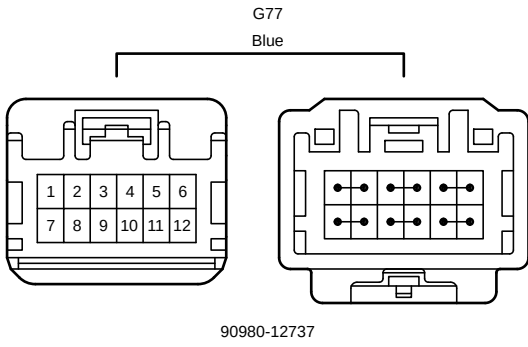
 



Position of Parts in Instrument Panel (RHD)




G72	Driving Support ECU Assembly
G73	Skid Control Buzzer
G74	No. 1 Clearance Warning Buzzer
G75	Pre-Crash System Cancel Switch Assembly
G77	No. 3 Junction Connector
G78	No. 4 Junction Connector
G79	No. 5 Junction Connector
G80	No. 6 Junction Connector
G81	No. 7 Junction Connector
G82	No. 8 Junction Connector
G83	No. 9 Junction Connector
G84	No. 2 CAN Junction Connector
G85	No. 3 CAN Junction Connector
G86	No. 4 CAN Junction Connector
G87	No. 5 CAN Junction Connector
G88	No. 6 CAN Junction Connector
G89	No. 6 CAN Junction Connector
G90	No. 10 Junction Connector
G91	No. 11 Junction Connector
G92	No. 12 Junction Connector
G93	No. 13 Junction Connector
G94	No. 14 Junction Connector
G95	Tank Shut Valve Relay
G96	No. 1 Heater Relay
G97	No. 2 Heater Relay
G98	Fuse Block
G105	Radio Receiver Assembly
G106	Radio Receiver Assembly
G107	Extension Module
G108	No. 1 Stereo Jack Adapter Assembly

Position of Parts in Instrument Panel (RHD)

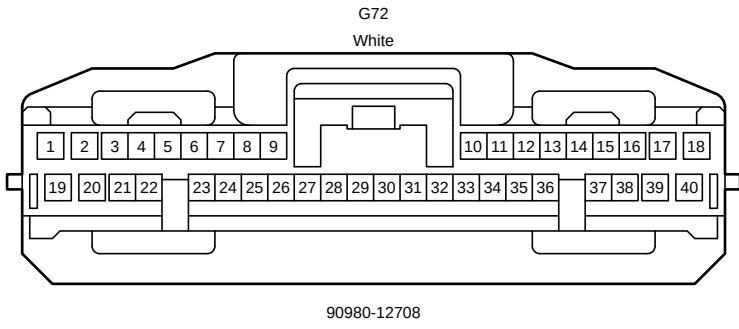


Position of Parts in Instrument Panel (RHD)

G82
White

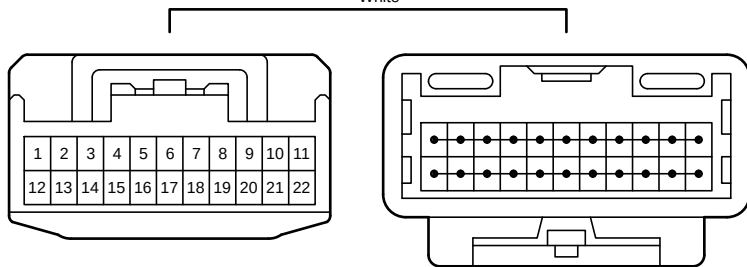


90980-12372

G83
White

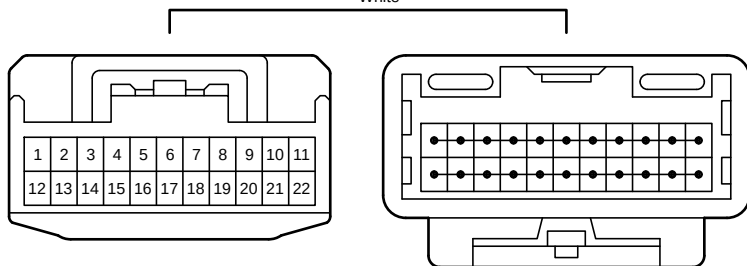


90980-12372

G84
White

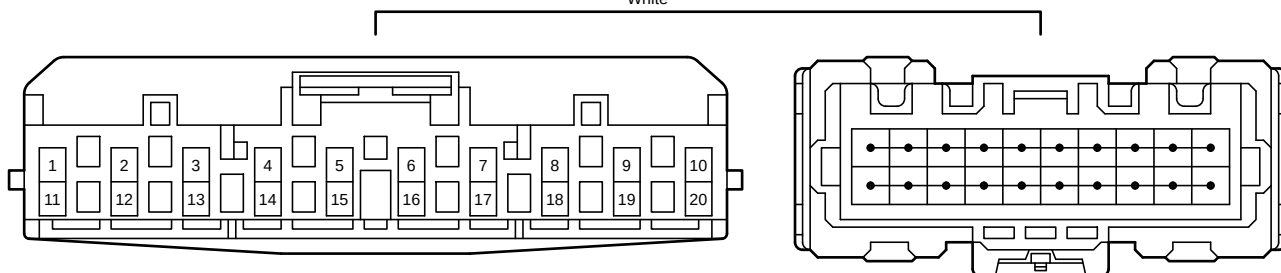

90980-12A58



G85
White

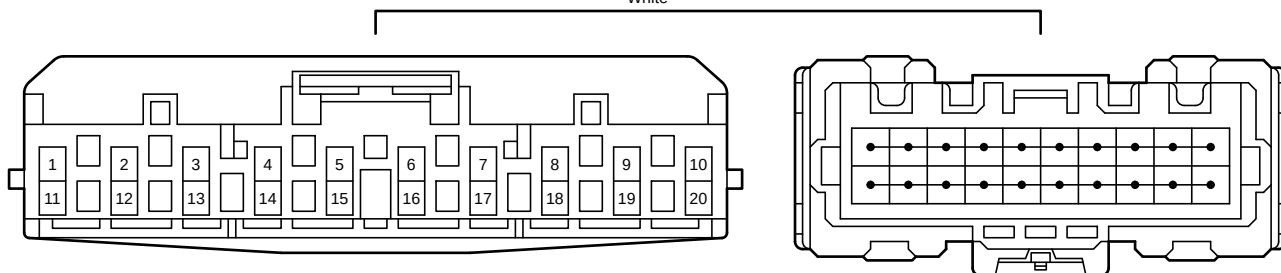

90980-12A58



Position of Parts in Instrument Panel (RHD)

G86
White

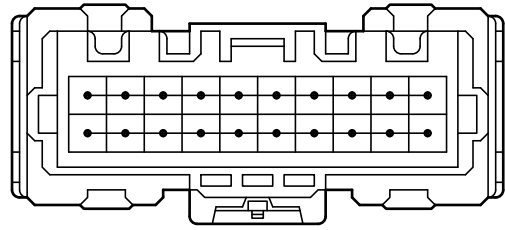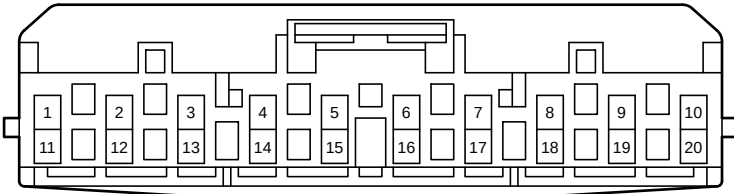



90980-12A58

G87
White

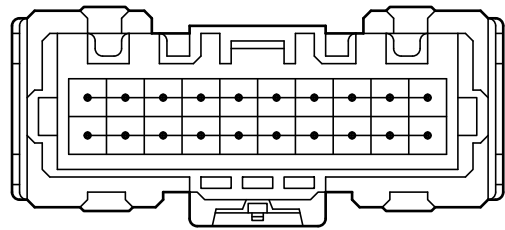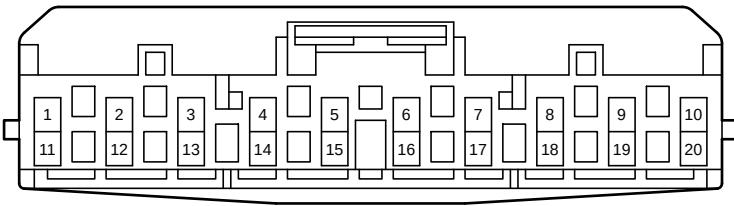



90980-12A58

G88
White

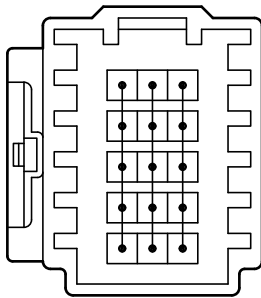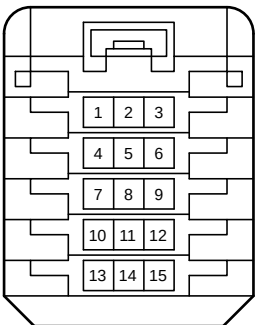



90980-12815

G89
White

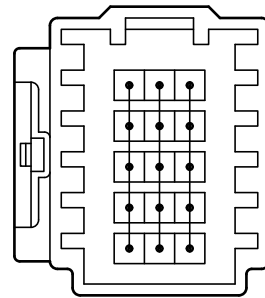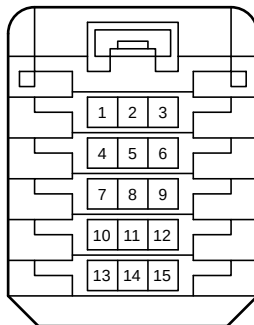



90980-12815

G90
White

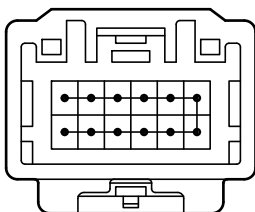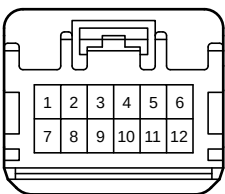

90980-12737

G91
White

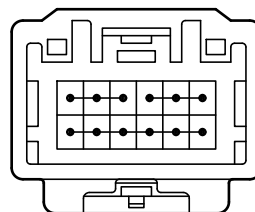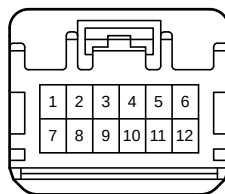

90980-12737

Position of Parts in Instrument Panel (RHD)

