


Position of Parts in Body <LHD>

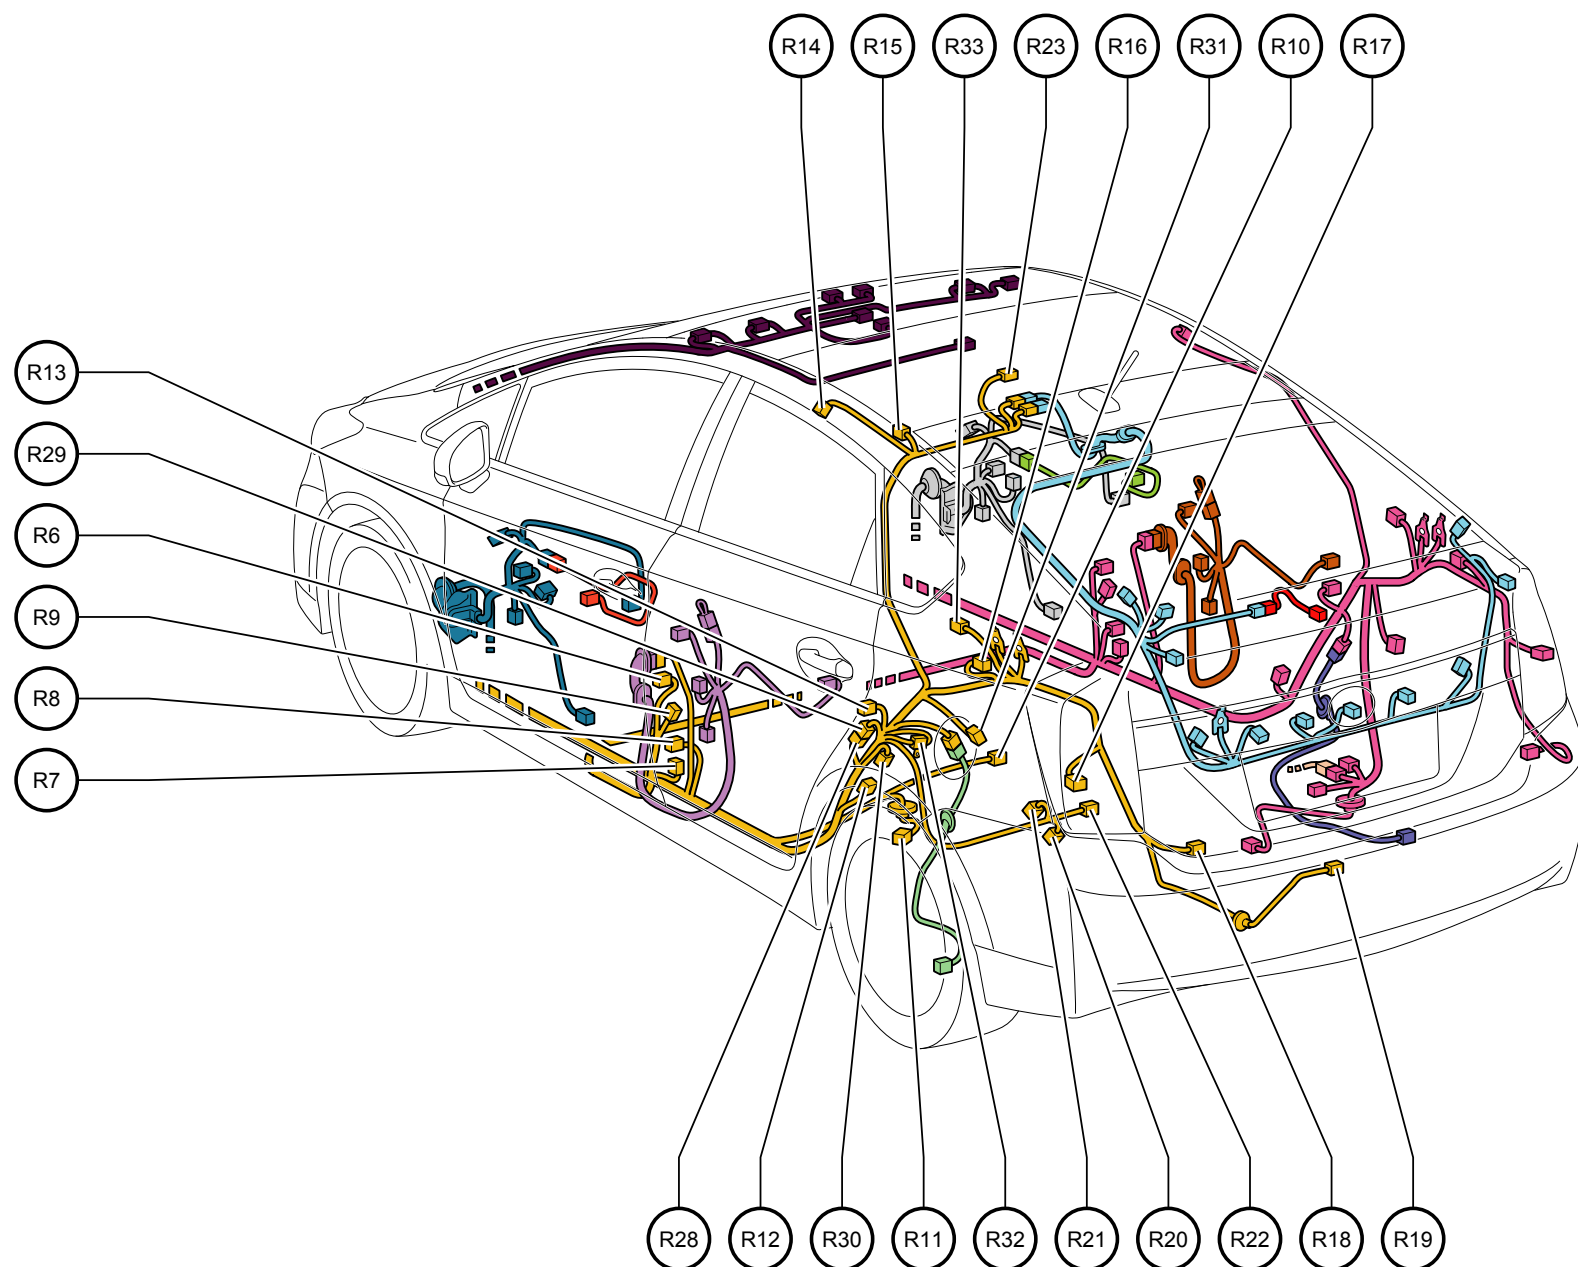

- R 6 Front Door Courtesy Light Switch Assembly LH
- R 7 Front Pretensioner LH
- R 8 Front Pre-Crash Seat Belt Motor LH
- R 9 Front Side Airbag Sensor Assembly LH
- R 10 Rear Indoor Electrical Key Oscillator
- R 11 Fuel Sender Gage Assembly
- R 12 Rear Side Airbag Sensor Assembly LH
- R 13 Rear Door Courtesy Light Switch Assembly LH
- R 14 Curtain Shield Airbag Assembly Circuit LH
- R 15 Noise Filter (Solar Ventilation System)
- R 16 No. 2 Room Light Assembly
- R 17 Rear Combination Light Assembly LH
- R 18 Back Door Lock Assembly
- R 19 Outside Luggage Electrical Key Antenna
- R 20 Rear Seat Inner with Center Belt Assembly LH
- R 21 Rear Seat Inner with Center Belt Assembly LH
- R 22 Rear Seat Belt Assembly Inner RH
- R 23 Sliding Roof Control ECU
- R 28 Junction Connector
- R 29 Junction Connector
- R 30 Diode (Back Door Courtesy Light)
- R 31 Junction Connector
- R 32 Noise Filter (Rear Window Defogger)
- R 33 Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly)

# Position of Parts in Body <LHD>

