


Position of Parts in Engine Compartment <RHD>

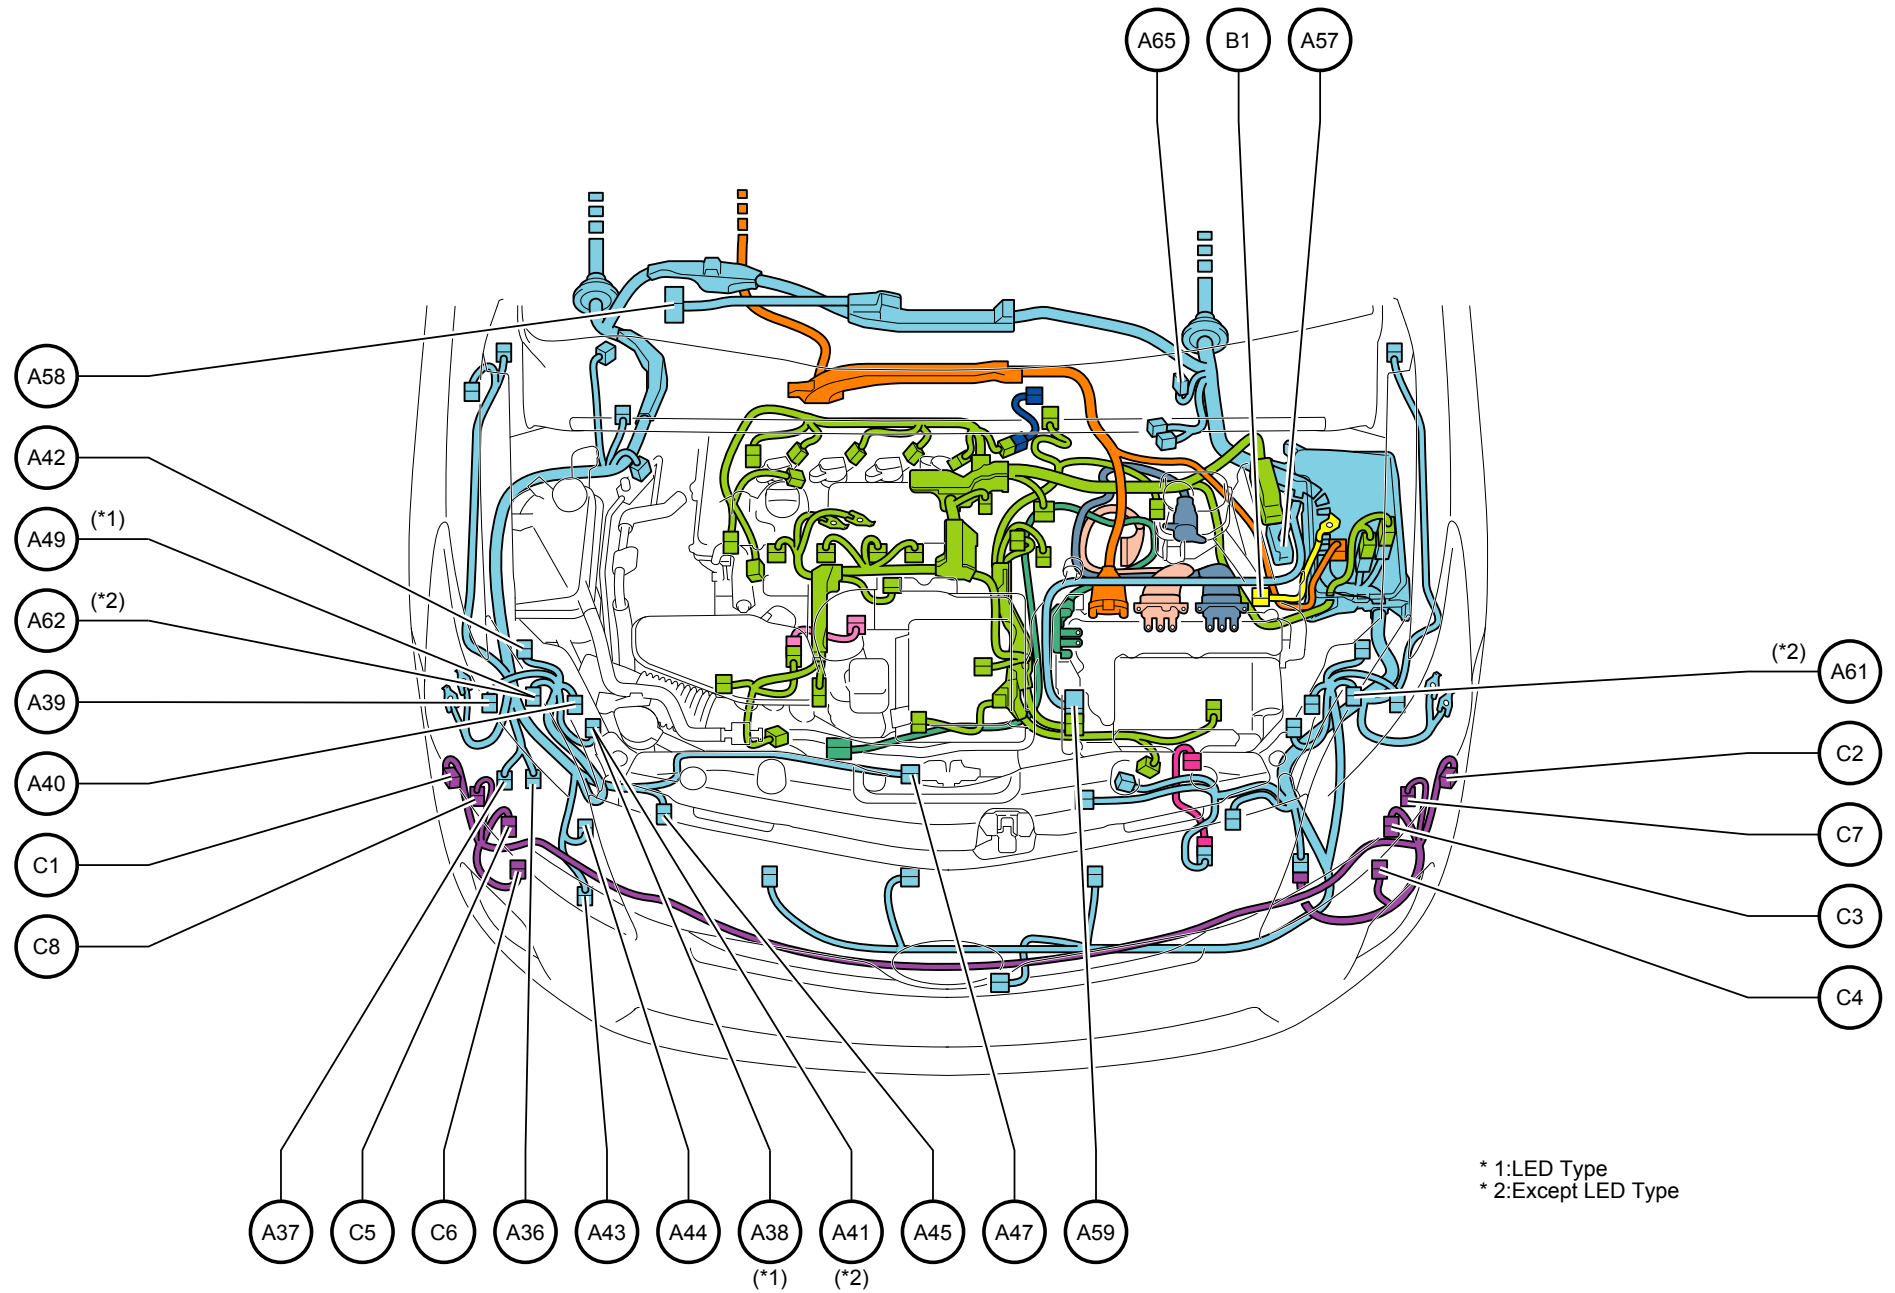


A 36 Windshield Washer Motor and Pump Assembly
A 37 Rear Washer Motor and Pump Assembly
A 38 Headlight Assembly RH
A 39 Headlight Assembly RH
A 40 Headlight Assembly RH
A 41 Headlight Assembly RH
A 42 Headlight Assembly RH
A 43 Headlight Cleaner Motor and Pump Assembly
A 44 Headlight Cleaner Relay
A 45 Front Airbag Sensor RH
A 47 Engine Hood Courtesy Switch Assembly
A 49 Headlight Assembly RH
A 57 ECM
A 58 Skid Control ECU with Actuator Assembly
A 59 Inverter with Converter Assembly
A 61 Headlight Assembly LH
A 62 Headlight Assembly RH
A 65 Security Horn Assembly

B 1 Inverter with Converter Assembly

C 1 No. 1 Ultrasonic Sensor RH
C 2 No. 1 Ultrasonic Sensor LH
C 3 Front Turn Signal Light LH
C 4 Fog Light Assembly LH
C 5 Front Turn Signal Light RH
C 6 Fog Light Assembly RH
C 7 Front Turn Signal Light LH
C 8 Front Turn Signal Light RH

Position of Parts in Engine Compartment <RHD>

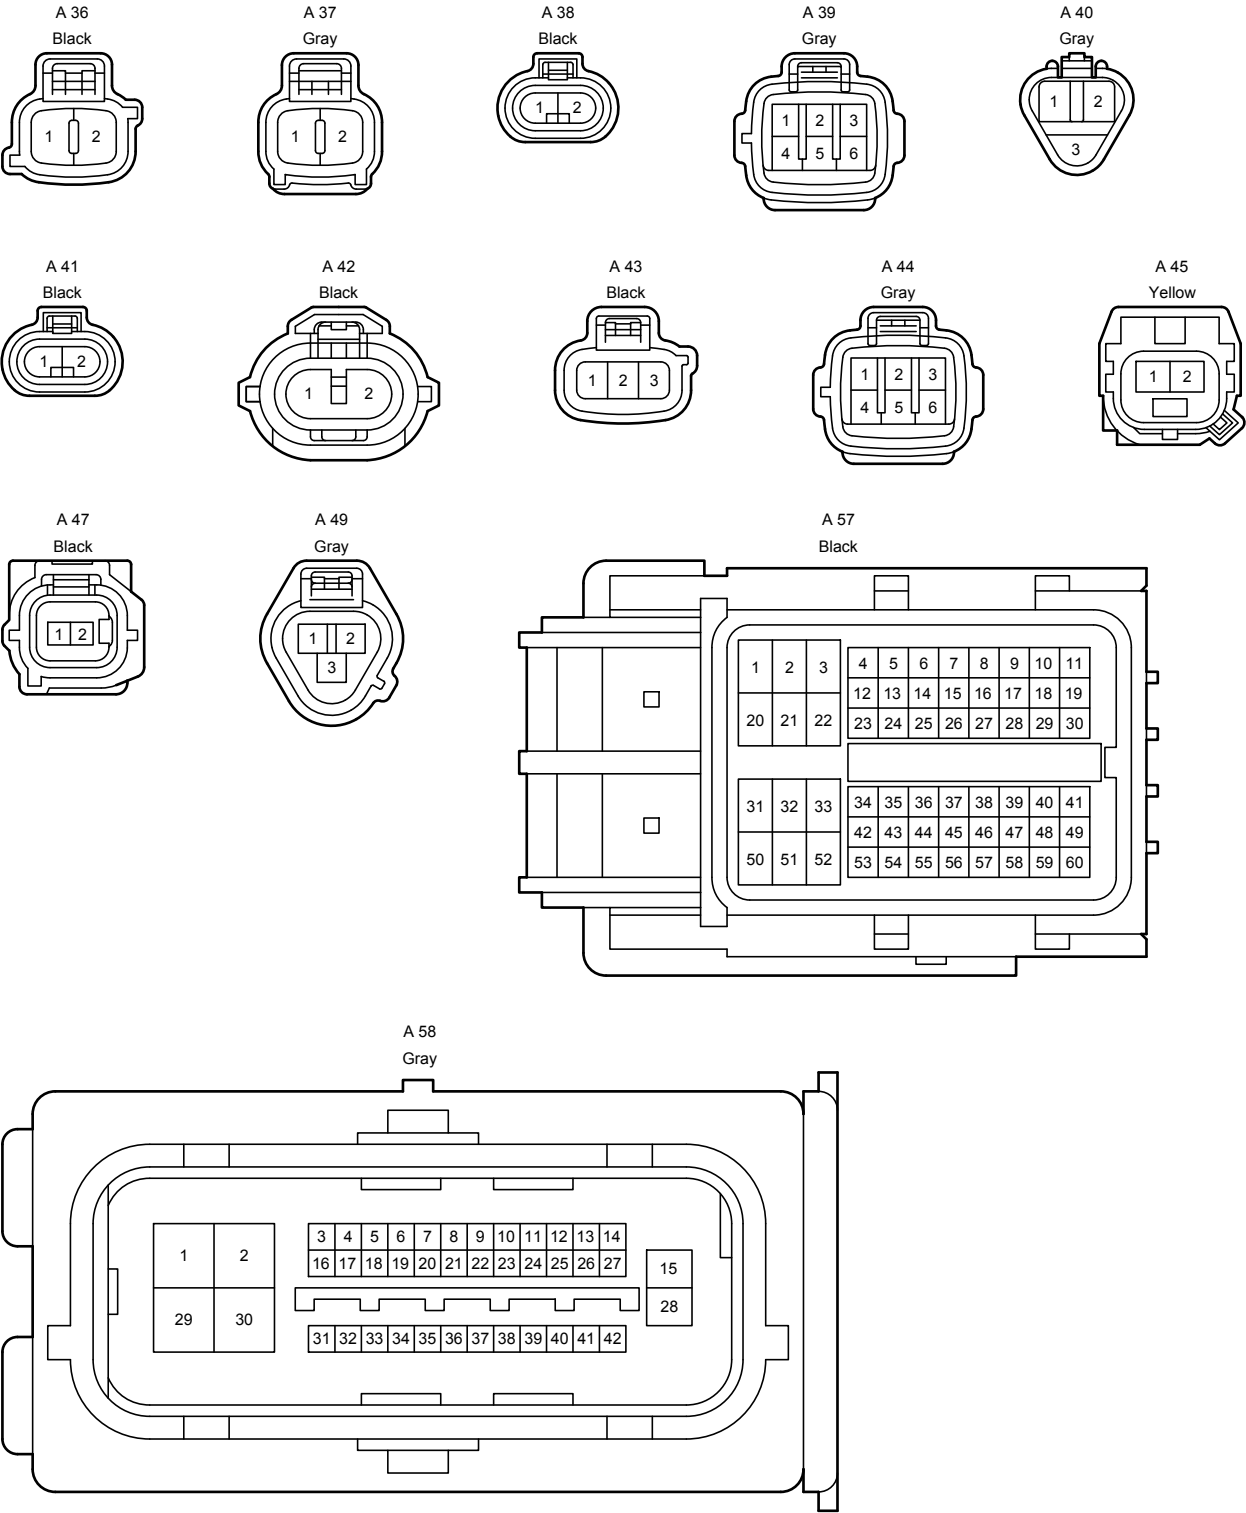

Position of Parts in Engine Compartment <RHD>

