 























Position of Parts in Instrument Panel <LHD>

- * 6:w/o Headlight Cleaner
- * 11:Refer to the Service Bulletin for the installation position of the parts.
- * 12:Before Dec. 2011 Production
- * 13:From Dec. 2011 Production
- * 14:*13 *19
- * 15:*13 *18
- * 16:*12 *19
- * 18:w/ Radio & Display Receiver Assembly w/o Extension Module
- * 19:w/ Navigation Receiver Assembly Type
- * 21:From Dec. 2011 Production w/ Headlight Cleaner
- * 22:w/ Radio & Display Receiver Assembly w/ Extension Module

















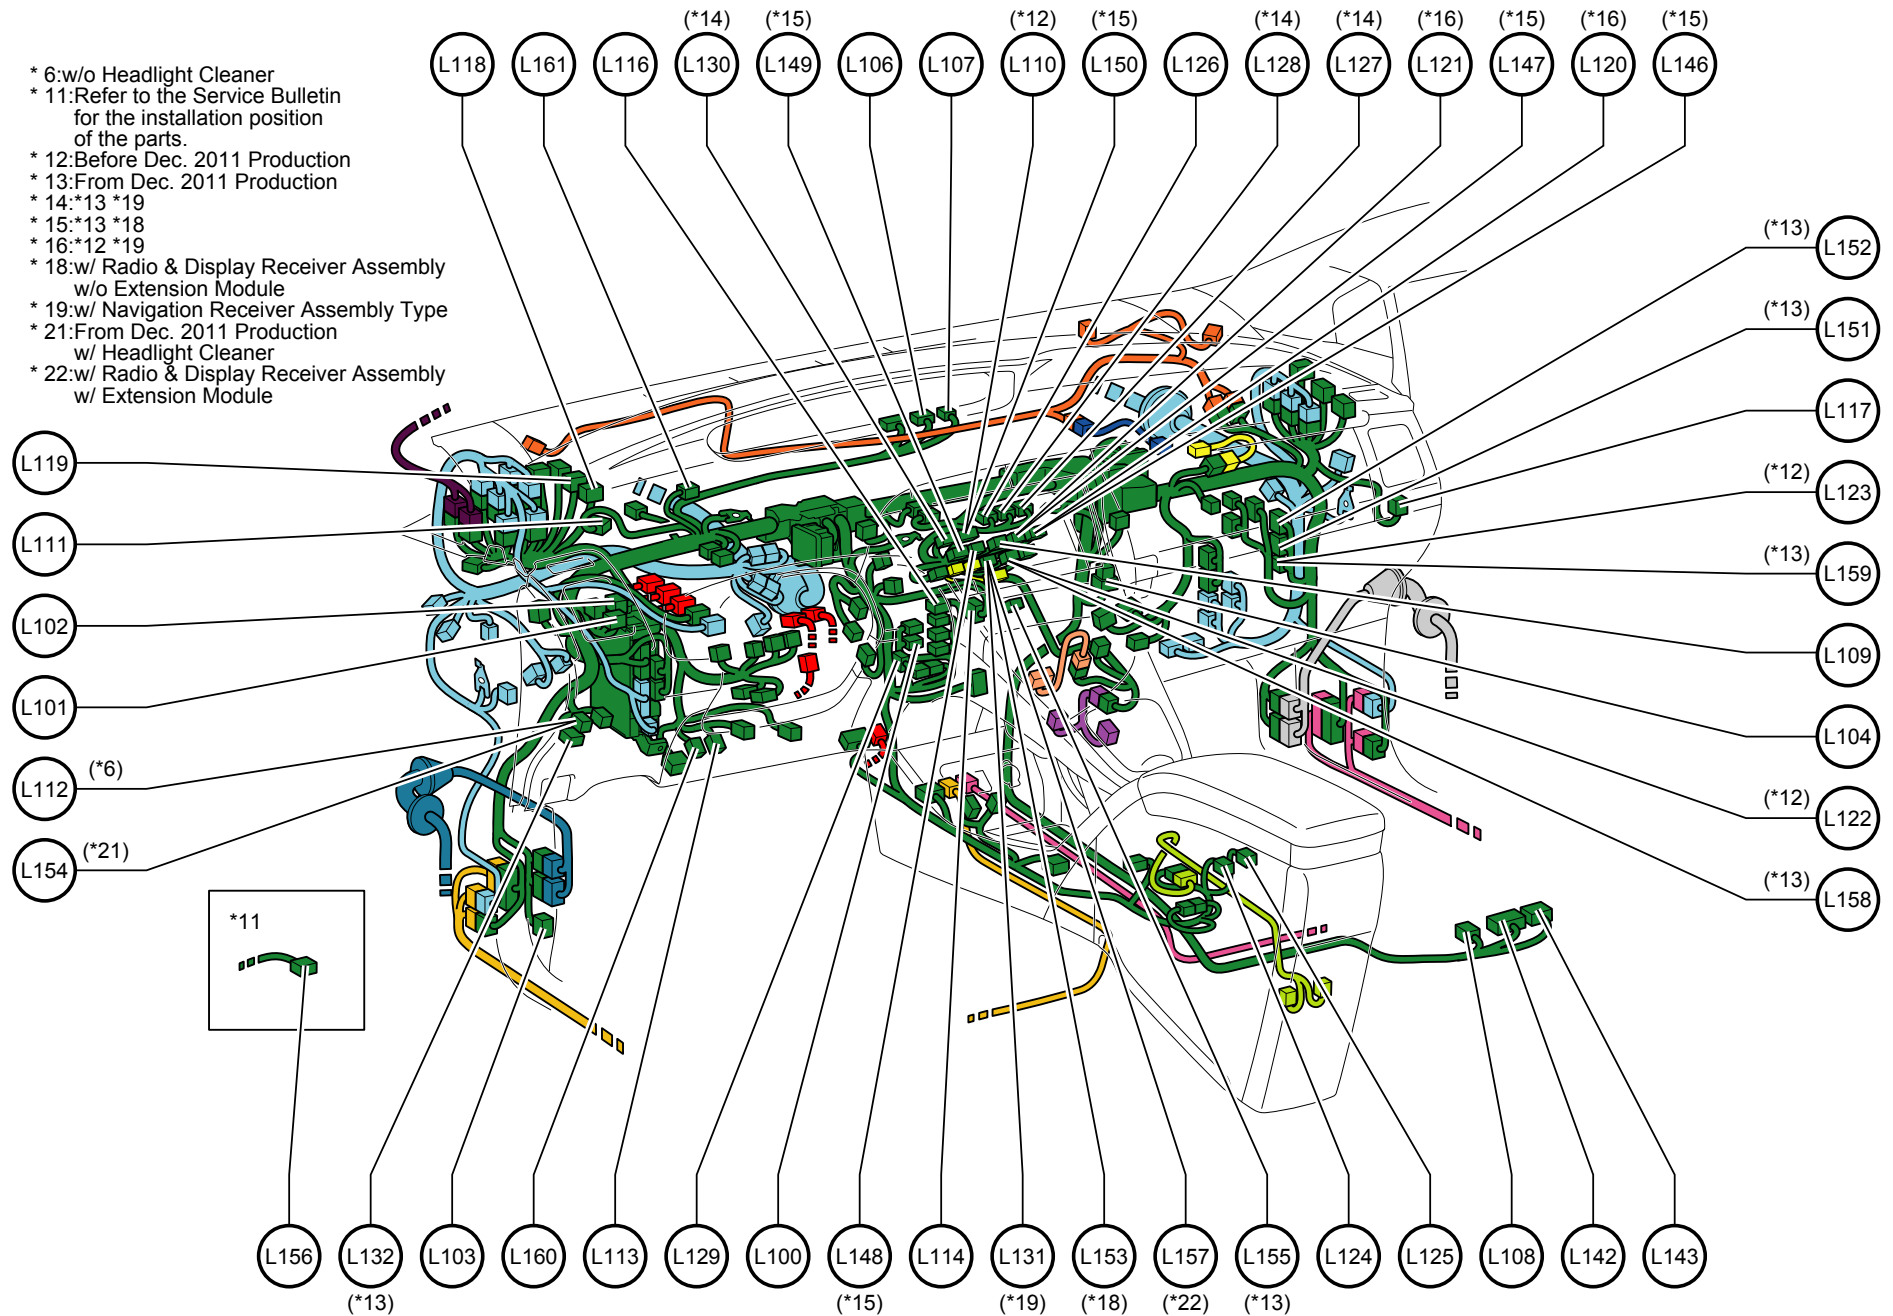


L 100	Junction Connector
L 101	Junction Connector
L 102	Junction Connector
L 103	Fuse Block
L 104	Solar Ventilation Relay
L 106	Combination Meter Assembly
L 107	Combination Meter Assembly
L 108	Stereo Component Amplifier Assembly
L 109	Navigation Receiver Assembly
L 110	Navigation Receiver Assembly
L 111	Combination Meter Mirror
L 112	Headlight Leveling Switch
L 113	Pre-Crash System Cancel Switch Assembly
L 114	Windshield Wiper Relay Assembly
L 116	Junction Connector
L 117	Airbag Cut Off Switch Cylinder Sub-Assembly
L 118	Rear Fog Light Relay
L 119	Panel Relay
L 120	Navigation Receiver Assembly
L 121	Navigation Receiver Assembly
L 122	Navigation Receiver Assembly
L 123	Parking Assist ECU
L 124	No. 1 Stereo Jack Adapter Assembly
L 125	Center Power Outlet Socket Assembly
L 126	Radio Receiver Assembly
L 127	Navigation Receiver Assembly
L 128	Navigation Receiver Assembly
L 129	Junction Connector
L 130	Navigation Receiver Assembly
L 131	Navigation Receiver Assembly
L 132	Outer Mirror Switch Assembly
L 142	Stereo Component Amplifier Assembly
L 143	Stereo Component Amplifier Assembly
L 146	Radio & Display Receiver Assembly
L 147	Radio & Display Receiver Assembly
L 148	Radio & Display Receiver Assembly
L 149	Radio & Display Receiver Assembly
L 150	Navigation Receiver Assembly
L 151	Parking Assist ECU
L 152	Parking Assist ECU
L 153	Radio & Display Receiver Assembly
L 154	Headlight Cleaner Switch Assembly
L 155	A/C Control Assembly
L 156	Telephone Transceiver Assembly
L 157	Extension Module
L 158	Navigation Receiver Assembly
L 159	Parking Assist ECU
L 160	Tire Pressure Warning Reset Switch (No. 1 Tire Pressure Warning Switch)
L 161	Junction Connector

                     Position of Parts in Instrument Panel <LHD>

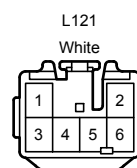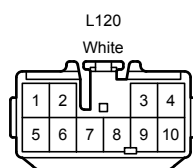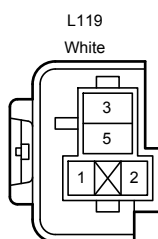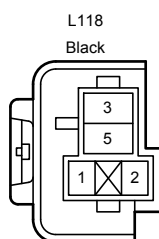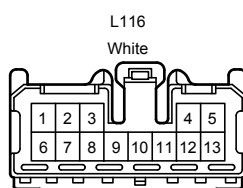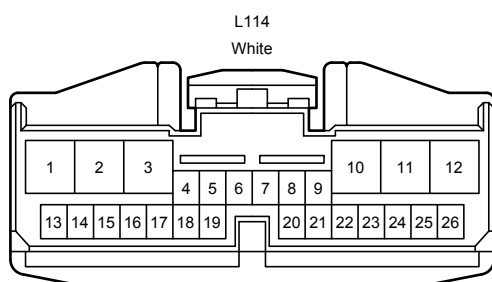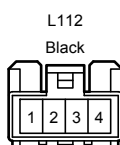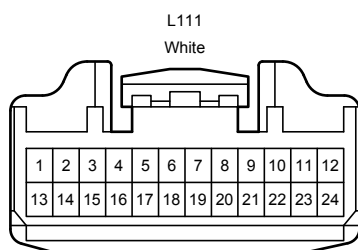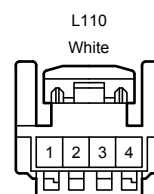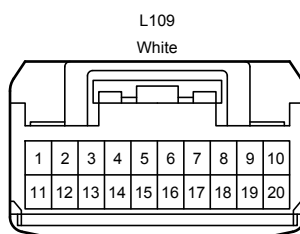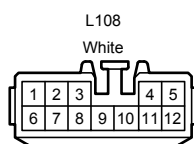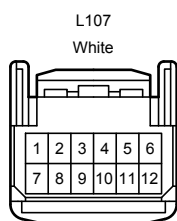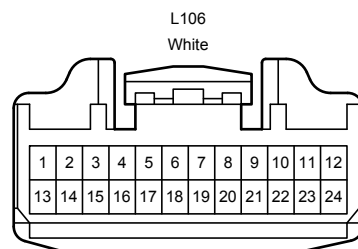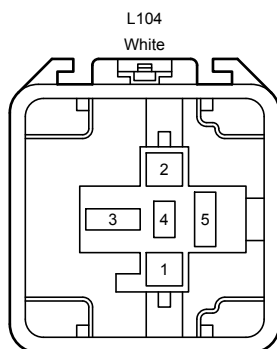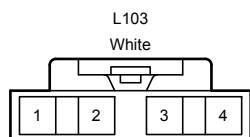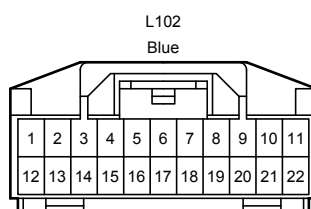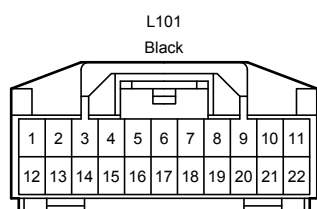


                 Position of Parts in Instrument Panel <LHD>

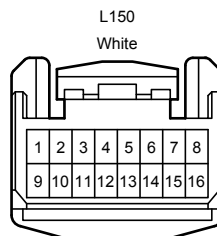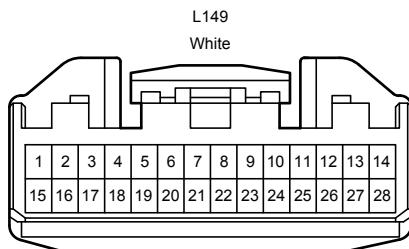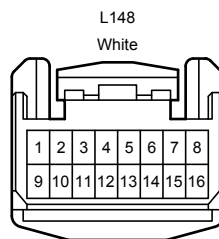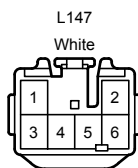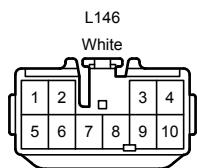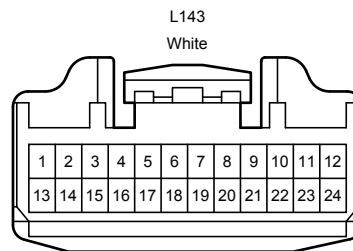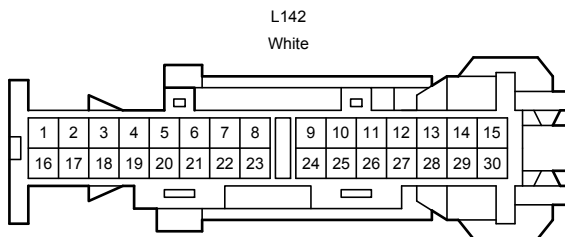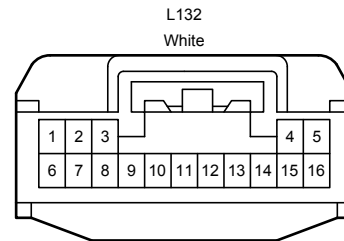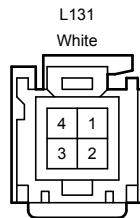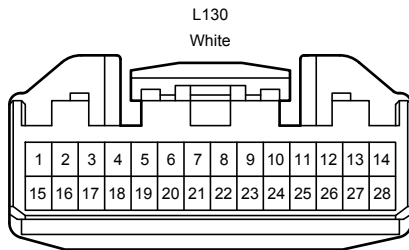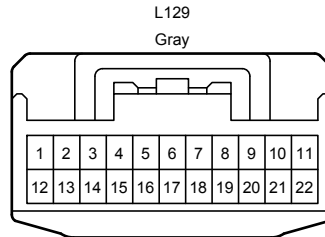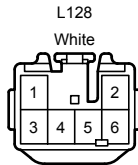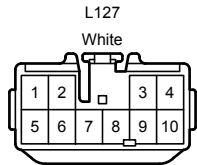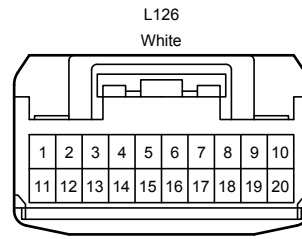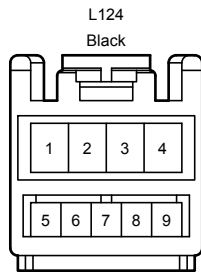


Position of Parts in Instrument Panel <LHD>

 
L151
Black

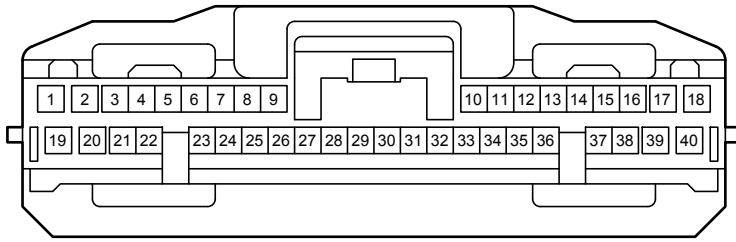


L152
White

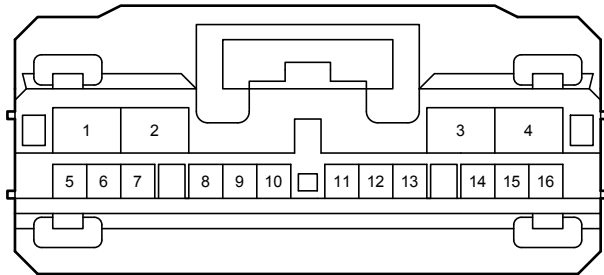 


L153
White

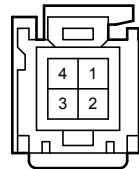 


L154
Gray

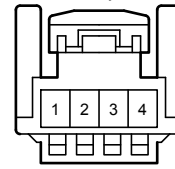 


L155
Gray

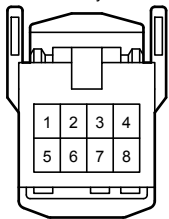 


L156
White

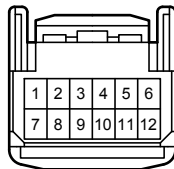 


L157
White

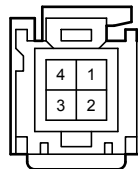 


L158
White

 

L159
Gray

 

L160
White

 

L161
Black

