
















Position of Parts in Instrument Panel <RHD>

- * 17:Refer to the Service Bulletin for the installation position of the parts.
- * 18:Before Dec. 2011 Production

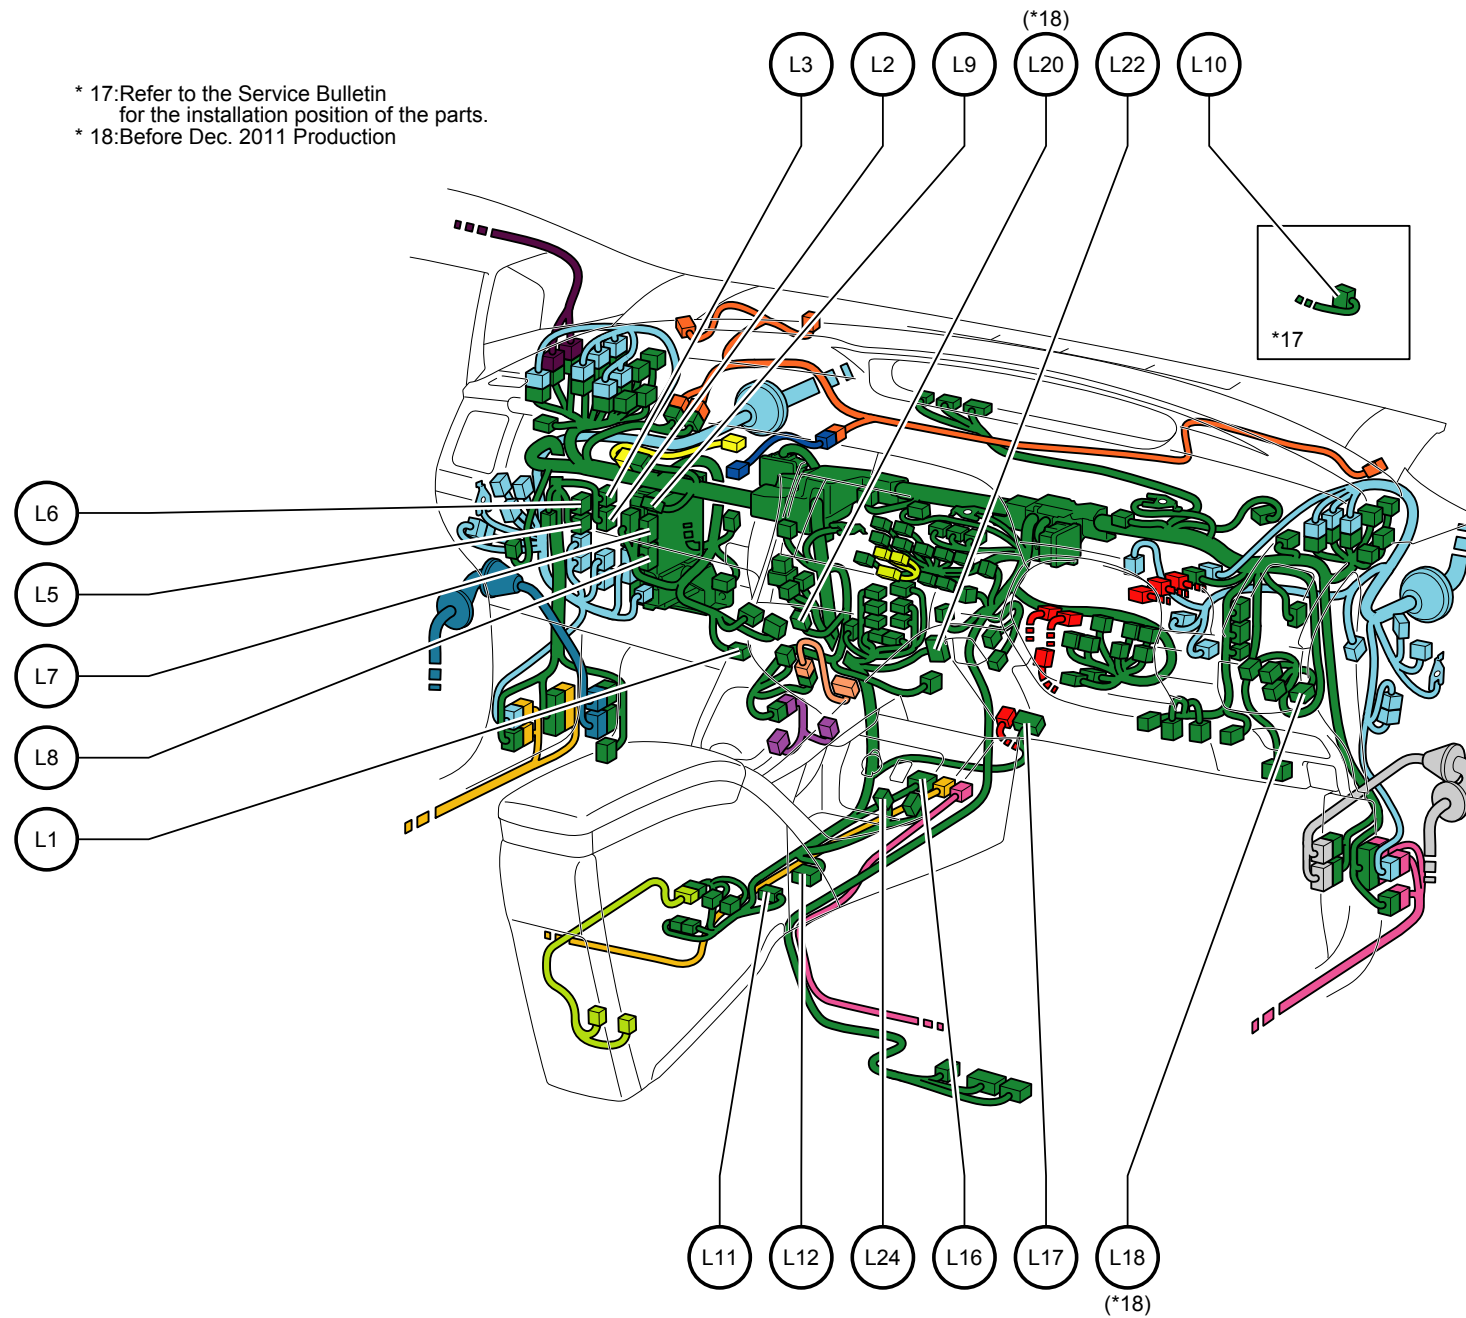

- L 1 No. 1 Interior Illumination Light Assembly RH
- L 2 Seat Belt Control ECU
- L 3 Seat Belt Control ECU
- L 5 Power Management Control ECU
- L 6 Power Management Control ECU
- L 7 Main Body ECU
- L 8 Main Body ECU
- L 9 Glove Box Light (No. 1 Interior Illumination Light Assembly)
- L 10 ID Code Box
- L 11 Front Indoor Electrical Key Oscillator
- L 12 Yaw Rate Sensor Assembly
- L 16 Center Airbag Sensor Assembly
- L 17 A/C Amplifier Assembly
- L 18 Outer Mirror Switch Assembly
- L 20 A/C Control Assembly
- L 22 Solar Battery Air Conditioning Blower Vent ECU
- L 24 Power Outlet Socket Assembly

 Position of Parts in Instrument Panel <RHD>

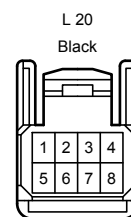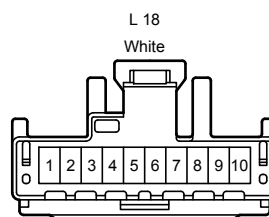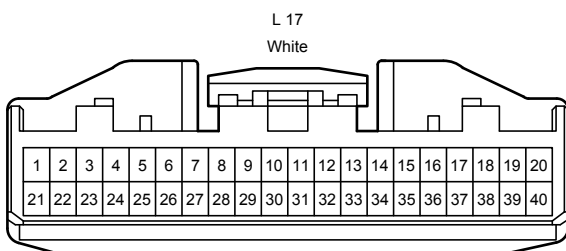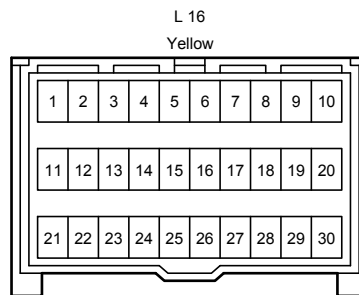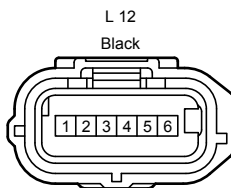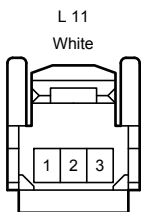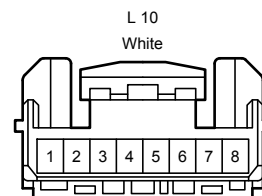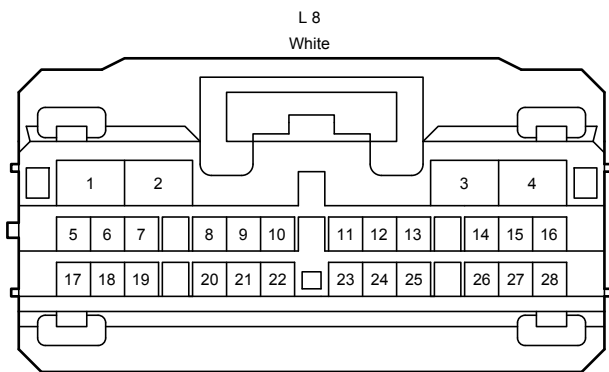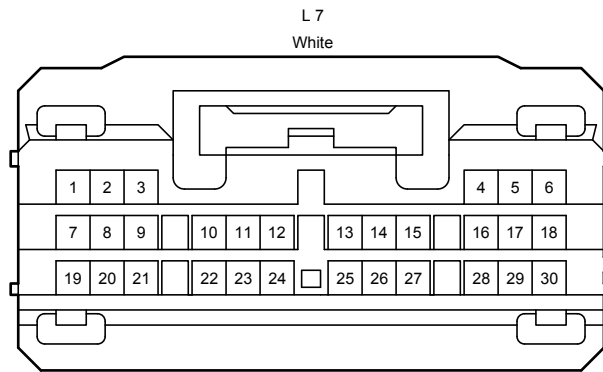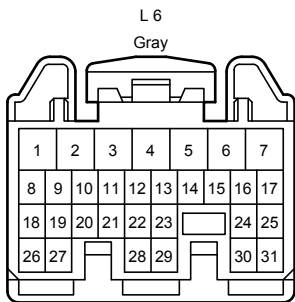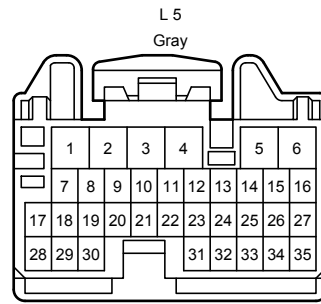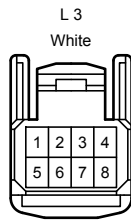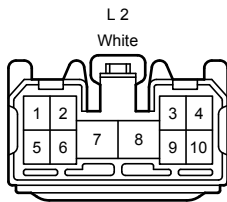

Position of Parts in Instrument Panel <RHD>

