


Position of Parts in Instrument Panel <RHD>

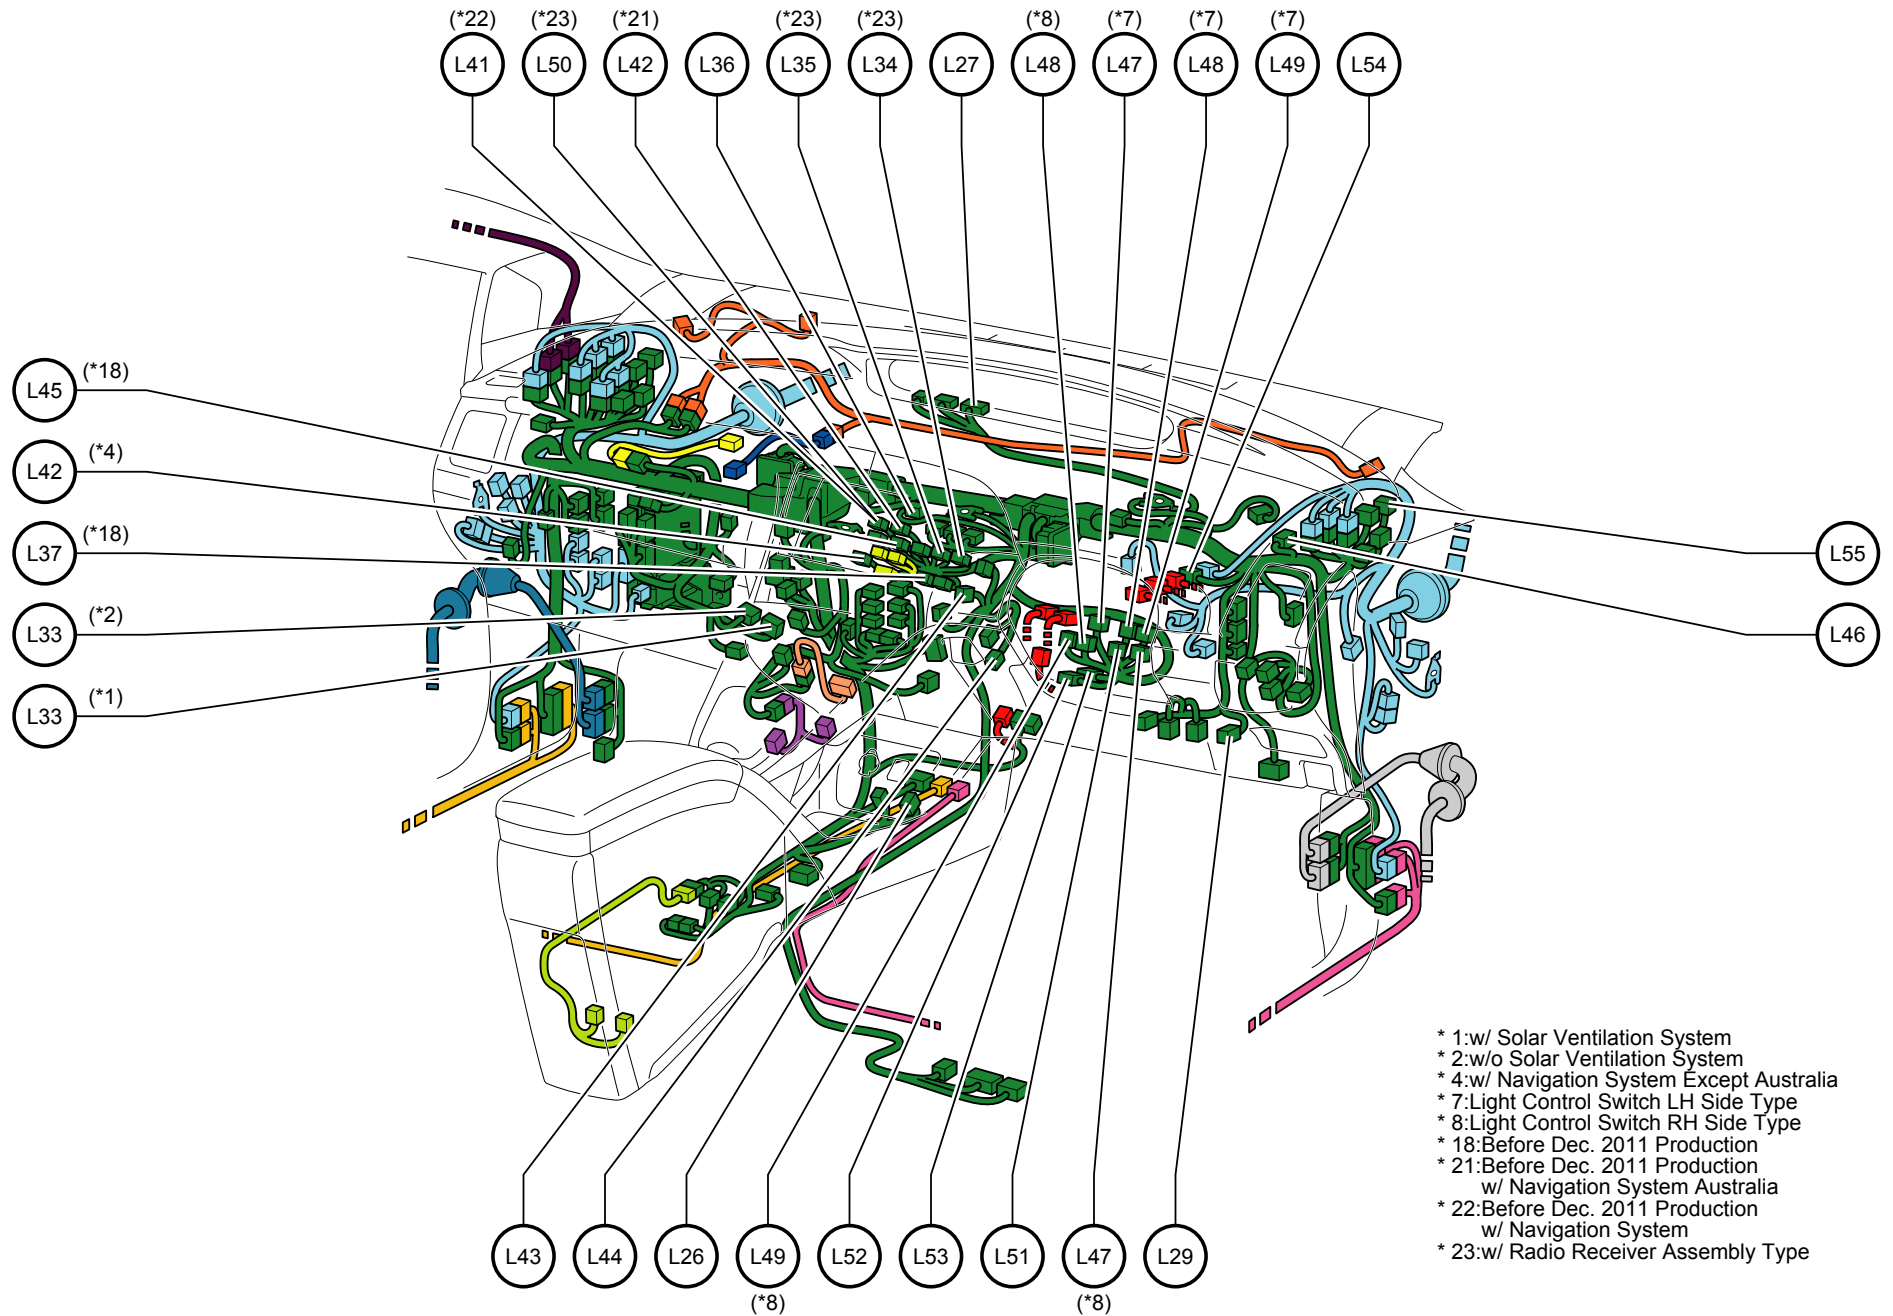

- L 26 Seat Heater Switch
- L 27 Combination Meter Assembly
- L 29 Lower No. 1 Instrument Panel Airbag Assembly
- L 33 Front Blower with Fan Motor Sub-Assembly
- L 34 Radio Receiver Assembly
- L 35 Radio Receiver Assembly
- L 36 Amplifier Antenna Assembly
- L 37 Navigation Receiver Assembly
- L 41 Navigation Receiver Assembly
- L 42 Navigation Receiver Assembly
- L 43 Power Switch
- L 44 Front Room Temperature Sensor
- L 45 Radio Receiver Assembly
- L 46 Skid Control Buzzer Assembly
- L 47 Headlight Dimmer Switch Assembly
- L 48 Windshield Wiper Switch Assembly
- L 49 Windshield Wiper Switch Assembly
- L 50 Radio Receiver Assembly
- L 51 Steering Sensor
- L 52 Spiral Cable Sub-Assembly
- L 53 Spiral Cable Sub-Assembly
- L 54 Power Steering ECU Assembly
- L 55 Turn Signal Flasher Assembly

Position of Parts in Instrument Panel <RHD>

