


Position of Parts in Instrument Panel <RHD>

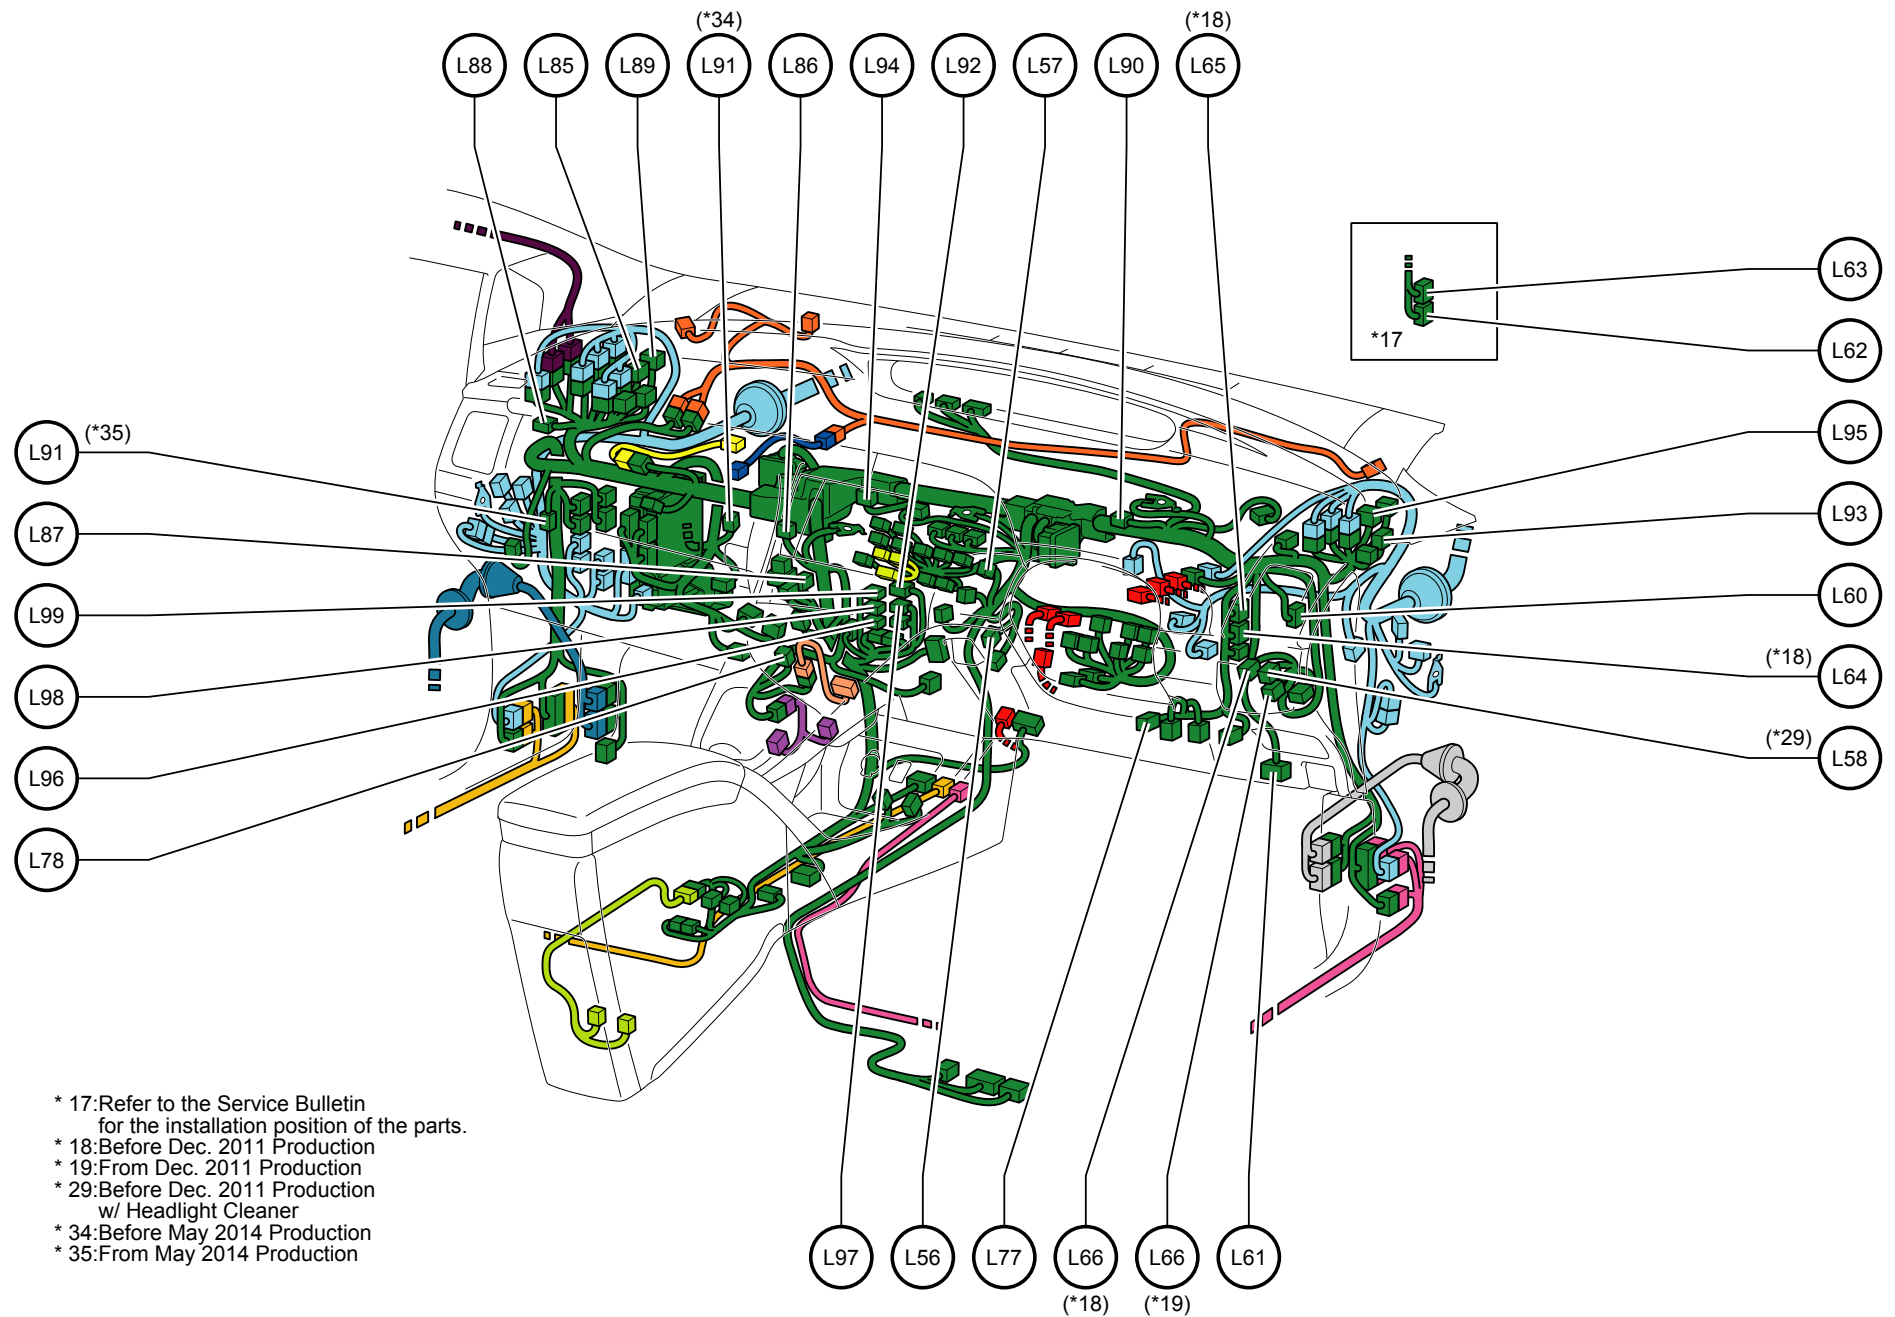


- L 56 Back Sonar or Clearance Sonar Switch Assembly
- L 57 Trip Switch
- L 58 Headlight Cleaner Switch Assembly
- L 60 Driving Support ECU Assembly
- L 61 DLC3
- L 62 Certification ECU Assembly
- L 63 Certification ECU Assembly
- L 64 Parking Assist ECU
- L 65 Parking Assist ECU
- L 66 Ventilator Switch
- L 77 No. 1 Interior Illumination Light Assembly LH
- L 78 Integration Control and Panel Assembly
- L 85 Junction Connector
- L 86 Junction Connector
- L 87 Junction Connector
- L 88 Junction Connector
- L 89 Junction Connector
- L 90 Diode (Front Courtesy Light RH)
- L 91 Diode (Front Courtesy Light LH)
- L 92 Junction Connector
- L 93 Junction Connector
- L 94 Junction Connector
- L 95 Junction Connector
- L 96 Junction Connector
- L 97 Junction Connector
- L 98 Junction Connector
- L 99 Junction Connector

# Position of Parts in Instrument Panel <RHD>


L 56

Black

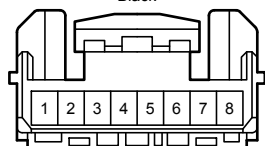


L 57

Black

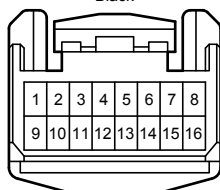


L 58

Gray

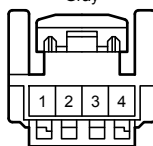


L 60

White

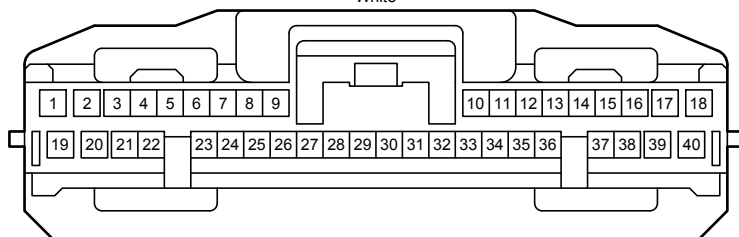


L 61

White

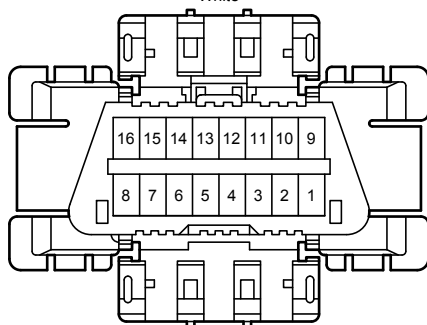


L 62

White

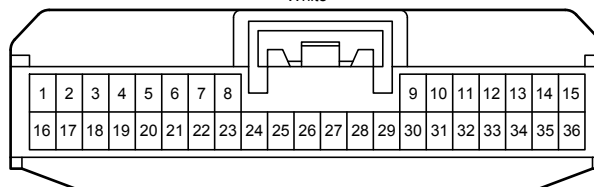


L 63

White

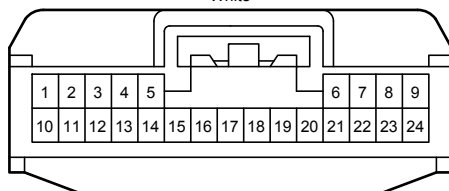


L 64

White

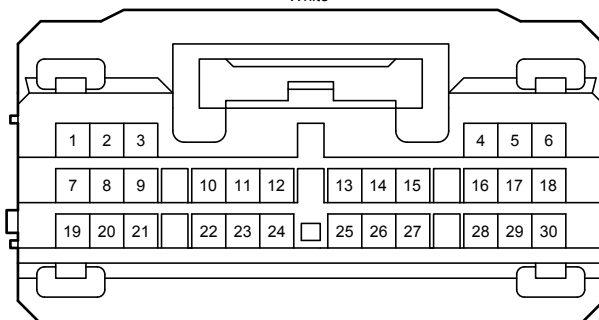


L 65

White

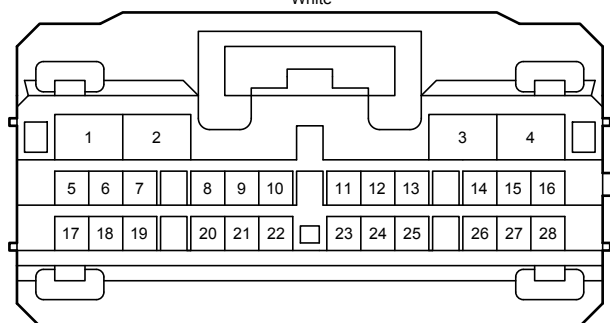

L 66

White

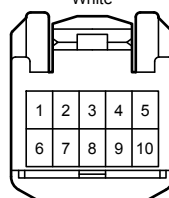

L 77


White



# Position of Parts in Instrument Panel <RHD>


L 78

Black

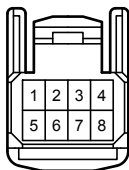


L 85

White

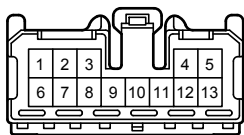


L 86

Black

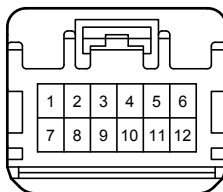


L 87

Black

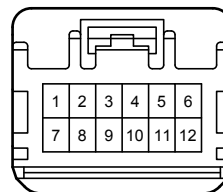


L 88

 Black



L 89

Black

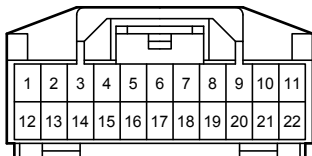

L 90

Black




L 91

Black




L 92

White

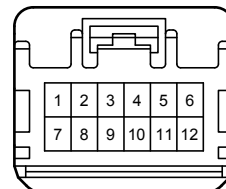


L 93

White

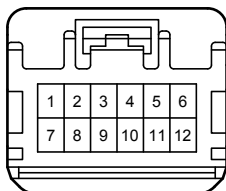


L 94

White

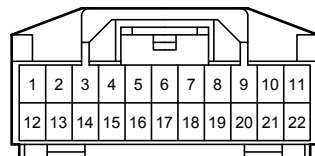

L 95

White

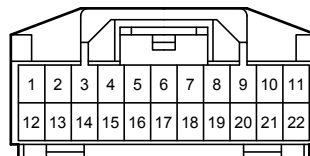


L 96

White




L 97

 White



L 98

 White



L 99

White

