


Position of Parts in Instrument Panel <RHD>

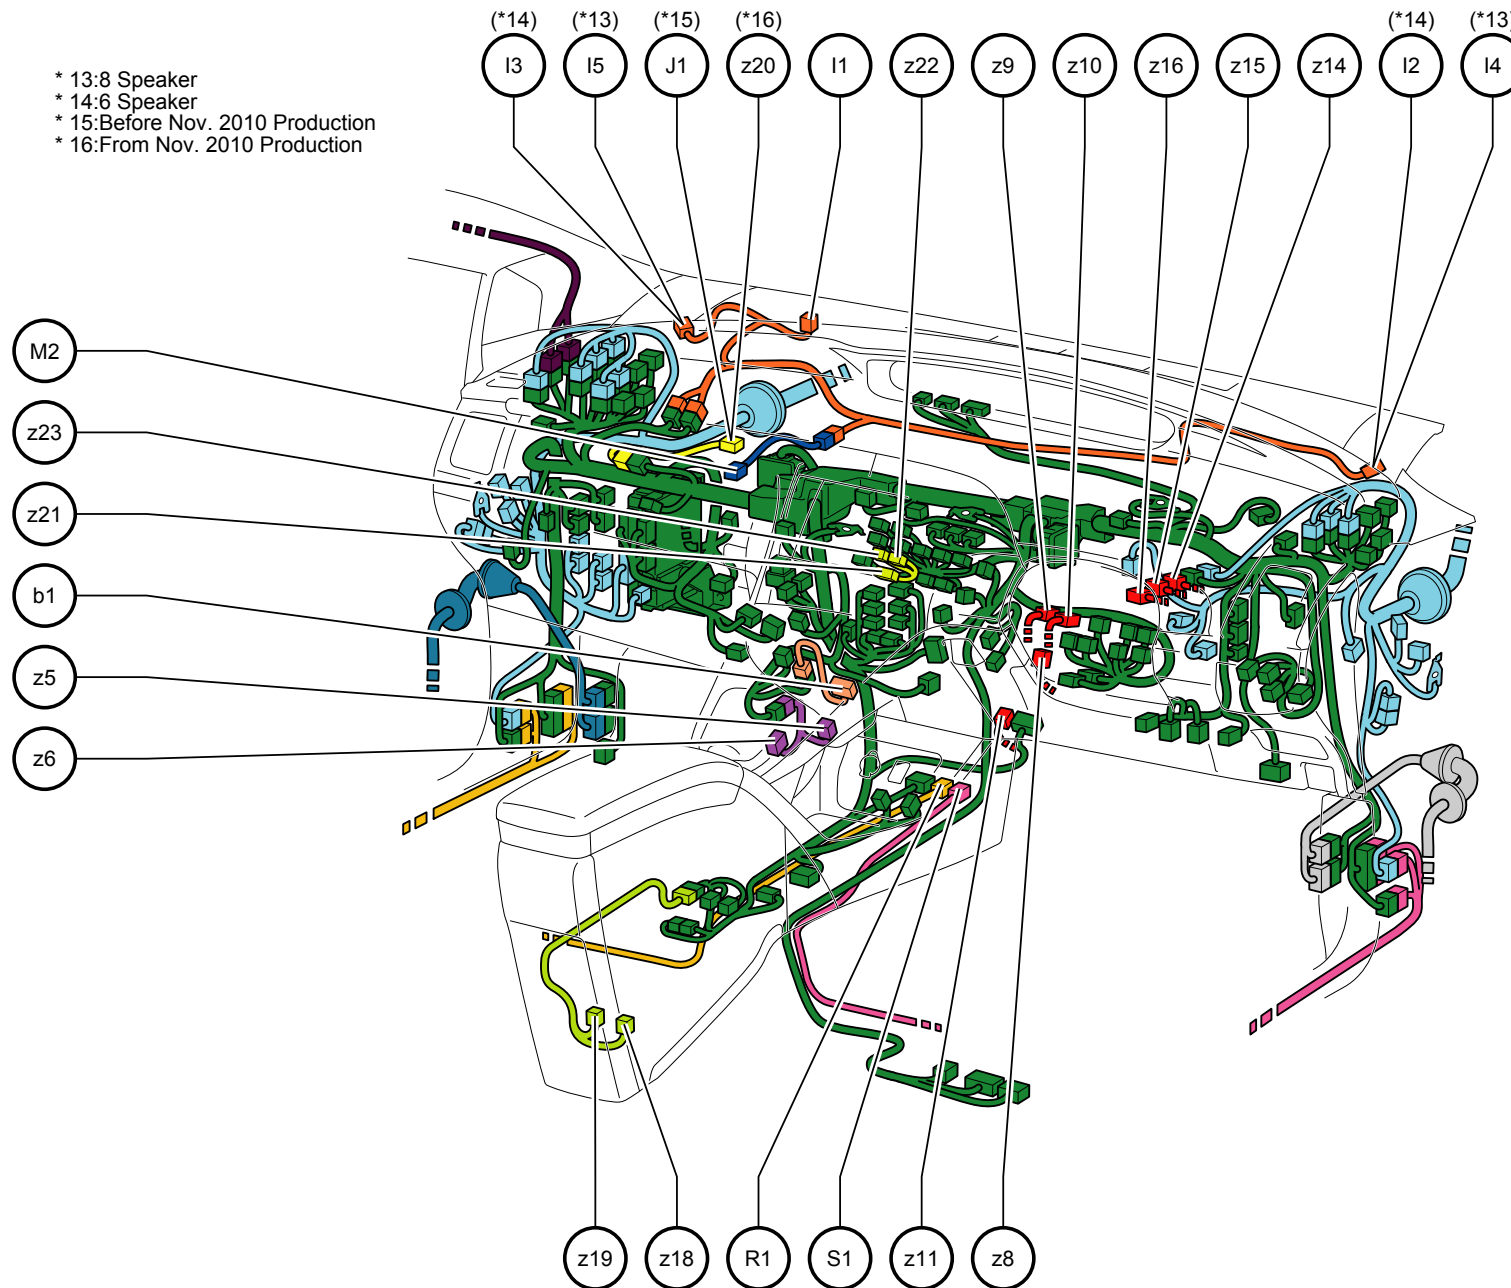

- I 1 Automatic Light Control Sensor
- I 2 Front No. 2 Speaker Assembly RH
- I 3 Front No. 2 Speaker Assembly LH
- I 4 Instrument Panel Speaker RH (No. 1 Instrument Panel Speaker Panel Sub-Assembly)
- I 5 Instrument Panel Speaker LH (No. 2 Instrument Panel Speaker Panel Sub-Assembly)

- J 1 Front Passenger Side Squib Circuit

- M 2 Passenger Seat Belt Warning Light Assembly

- R 1 Center Airbag Sensor Assembly

- S 1 Center Airbag Sensor Assembly

- b 1 Transmission Shift Main Switch

- z 5 Shift Lever Position Sensor
- z 6 No. 2 Shift Lever Position Sensor
- z 8 Driver Side Squib Circuit , Spiral Cable Sub-Assembly
- z 9 Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
- z 10 Cruise Control Main Switch , Spiral Cable Sub-Assembly
- z 11 A/C Amplifier Assembly , A/C Blower Assembly
- z 14 Power Steering ECU Assembly , Power Steering Torque Sensor
- z 15 Power Steering ECU Assembly , Power Steering Motor Assembly
- z 16 Power Steering ECU Assembly , Power Steering Motor Assembly
- z 18 Center Power Outlet Socket Assembly
- z 19 No. 1 Stereo Jack Adapter Assembly
- z 20 Front Passenger Side Squib Circuit
- z 21 Extension Module
- z 22 Radio & Display Receiver Assembly
- z 23 Radio & Display Receiver Assembly

Position of Parts in Instrument Panel <RHD>

