


Position of Parts in Luggage Room <LHD>

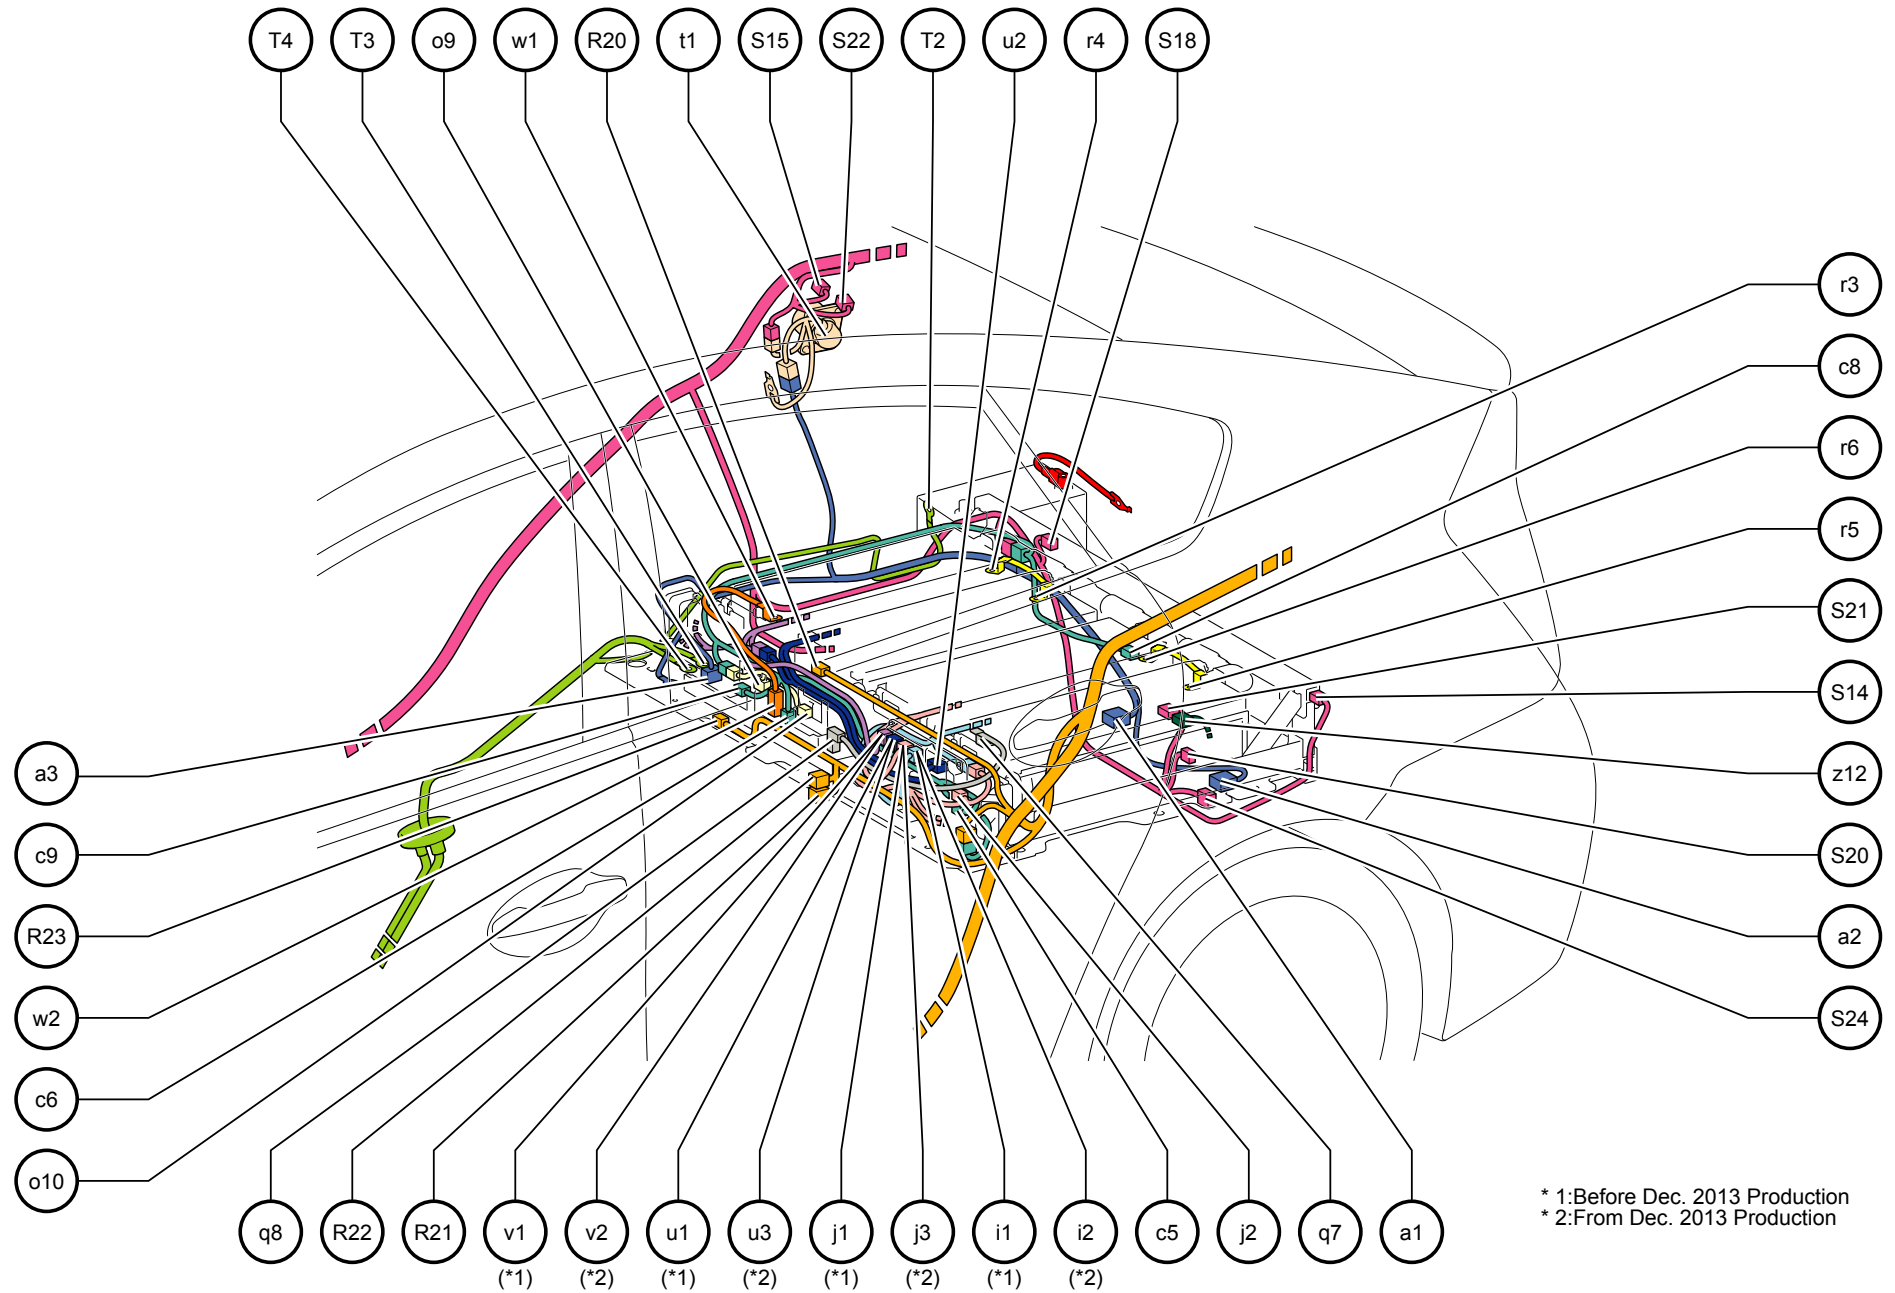

- R 20 Indoor Luggage Compartment Electrical Key Oscillator
- R 21 Rear Seat Inner with Center Belt Assembly LH
- R 22 Rear Seat Inner with Center Belt Assembly LH
- R 23 Rear Seat Belt Assembly Inner RH

- S 14 Battery Cooling Blower Assembly (Main)
- S 15 Spot Light Assembly
- S 18 Battery Cooling Blower Assembly (Sub 1)
- S 20 Electric Vehicle Charger Assembly
- S 21 Plug-in Charge Control ECU Assembly
- S 22 Indicator Light Assembly
- S 24 Junction Connector

- T 2 Fusible Link Block
- T 3 HV Battery Junction Block Assembly (Main)
- T 4 HV Battery Junction Block Assembly (Main)

- a 1 Electric Vehicle Charger Assembly
- a 2 Electric Vehicle Charger Assembly
- a 3 HV Battery Junction Block Assembly (Main)

- c 5 Battery Voltage Sensor
- c 6 HV Battery Junction Block Assembly (Main)
- c 8 Inter Lock Switch
- c 9 HV Battery Junction Block Assembly (Main)

- i 1 Battery Voltage Sensor , HV Battery
- i 2 Battery Voltage Sensor , HV Battery

- j 1 Battery Voltage Sensor , HV Battery
- j 2 Battery Voltage Sensor , HV Battery
- j 3 Battery Voltage Sensor , HV Battery

- o 9 HV Battery Junction Block Assembly (Main)
- o 10 HV Battery Junction Block Assembly (Main)

- q 7 HV Battery
- q 8 HV Battery Junction Block Assembly (Main)

- r 3 HV Battery
- r 4 HV Battery
- r 5 HV Battery
- r 6 HV Battery

- t 1 Charger Inlet


- u 1 Battery Voltage Sensor , HV Battery
- u 2 Battery Voltage Sensor , HV Battery
- u 3 Battery Voltage Sensor , HV Battery

- v 1 Battery Voltage Sensor , HV Battery
- v 2 Battery Voltage Sensor , HV Battery

- w 1 HV Battery
- w 2 HV Battery Junction Block Assembly (Main)

- z 12 Electric Vehicle Charger Assembly , Plug-in Charge Control ECU Assembly

Position of Parts in Luggage Room <LHD>

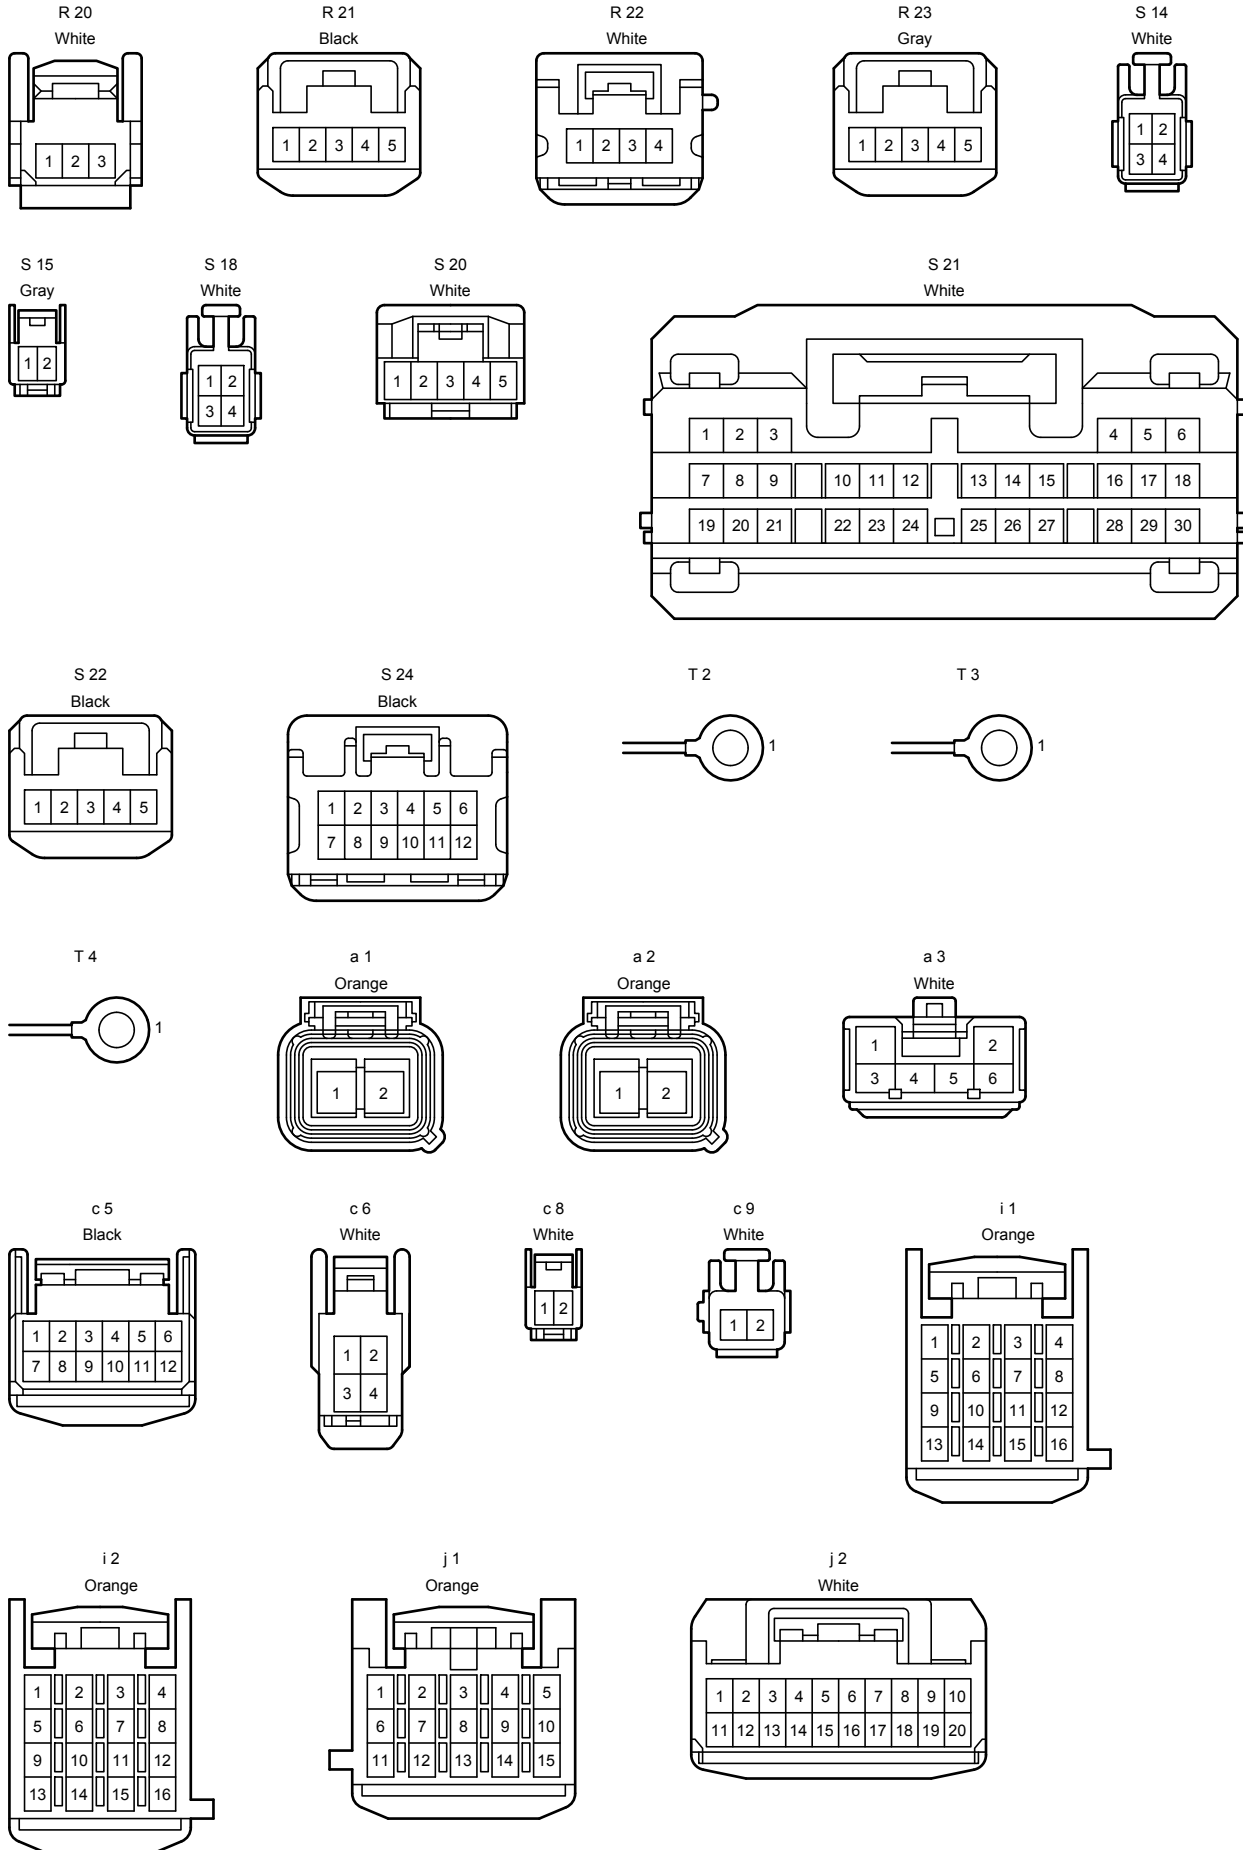

Position of Parts in Luggage Room <LHD>

