


Position of Parts in Instrument Panel <LHD>

- * 2:w/ Navigation Receiver Assembly Type
- * 3:w/ Radio & Display Receiver Assembly Type

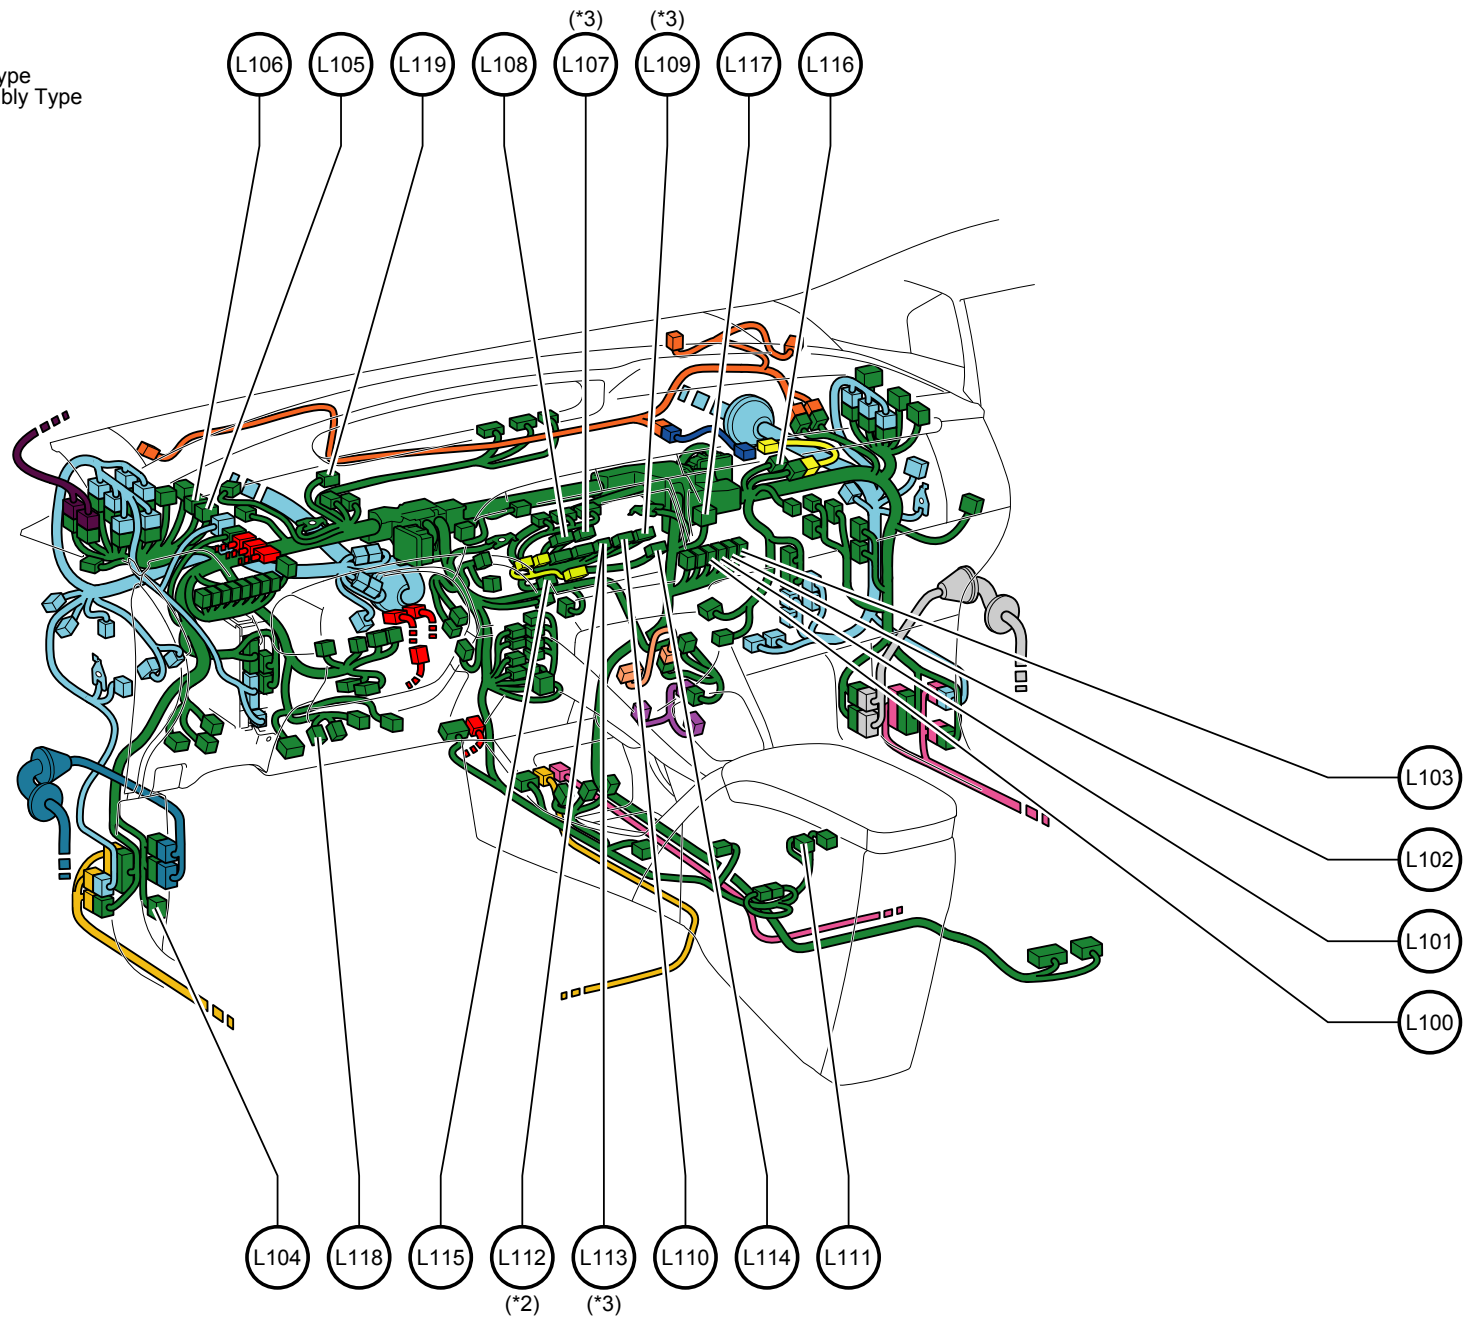

- L 100 Junction Connector
- L 101 Junction Connector
- L 102 Junction Connector
- L 103 Junction Connector
- L 104 Fuse Block
- L 105 Rear Fog Light Relay
- L 106 PIMR Relay
- L 107 Radio & Display Receiver Assembly
- L 108 Radio & Display Receiver Assembly
- L 109 Radio & Display Receiver Assembly
- L 110 Radio & Display Receiver Assembly
- L 111 No. 1 Stereo Jack Adapter Assembly
- L 112 Navigation Receiver Assembly
- L 113 Radio & Display Receiver Assembly
- L 114 Extension Module
- L 115 Navigation Receiver Assembly
- L 116 Navigation Antenna Assembly
- L 117 Junction Connector
- L 118 Tire Pressure Warning Reset Switch (No. 1 Tire Pressure Warning Switch)
- L 119 Junction Connector

Position of Parts in Instrument Panel <LHD>

