

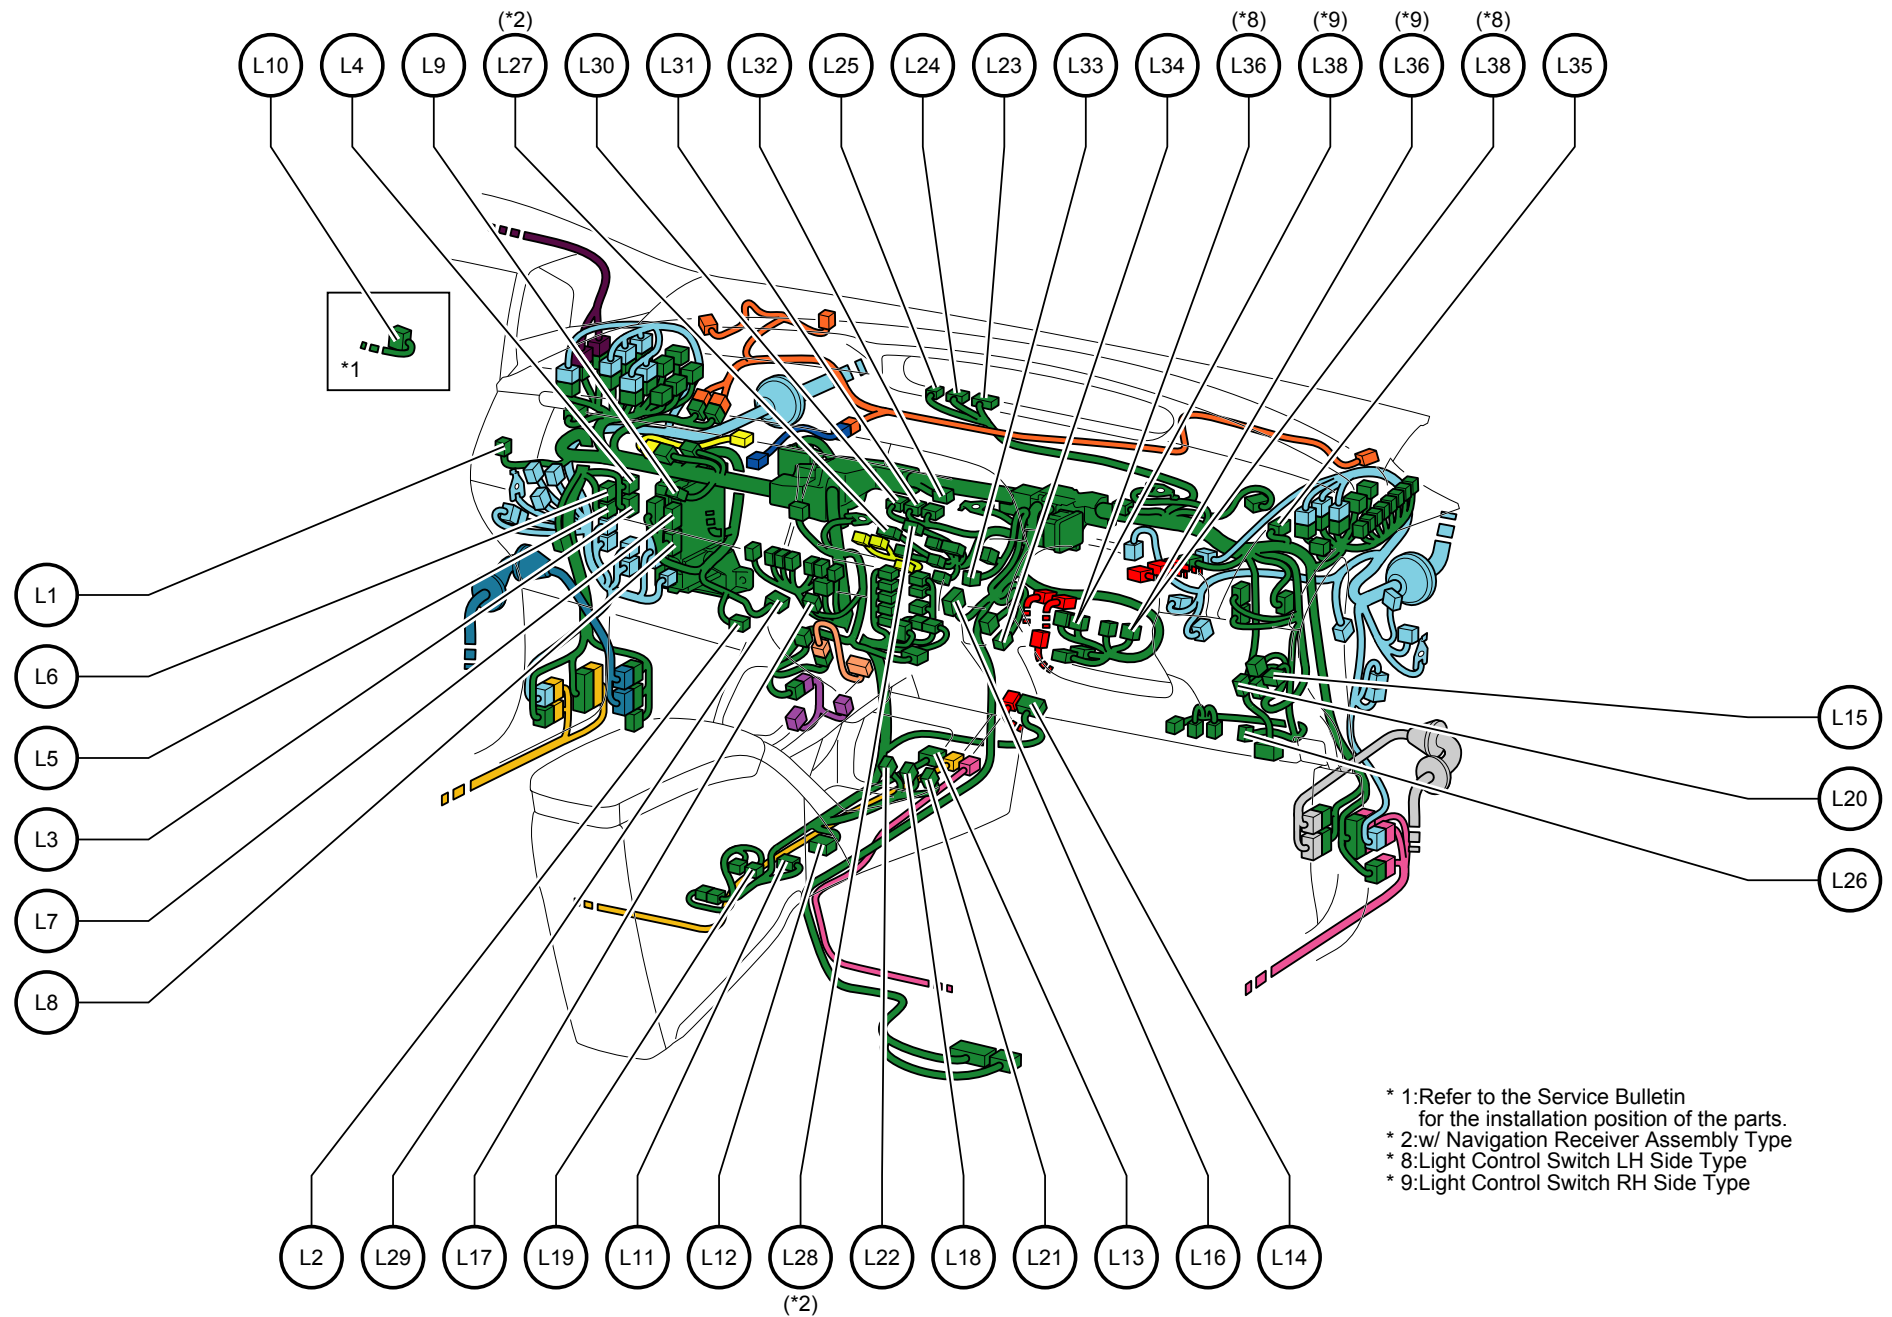
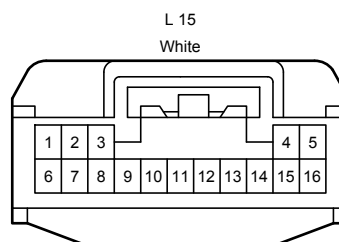
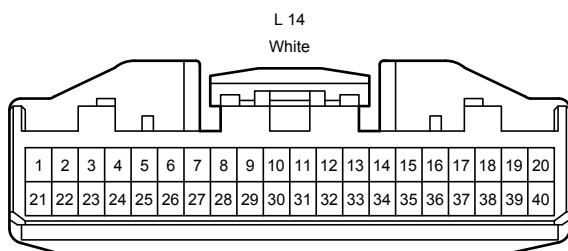
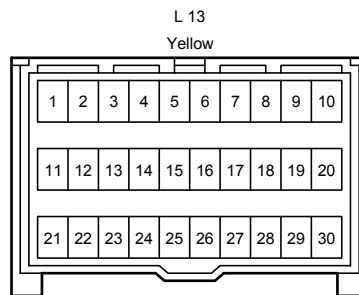
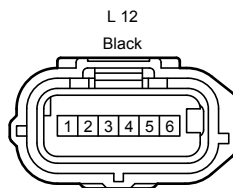
 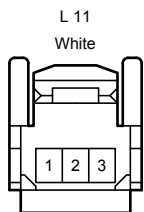
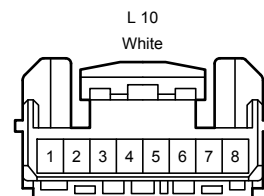

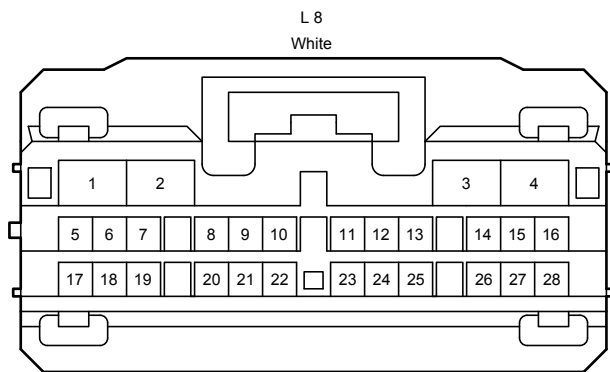
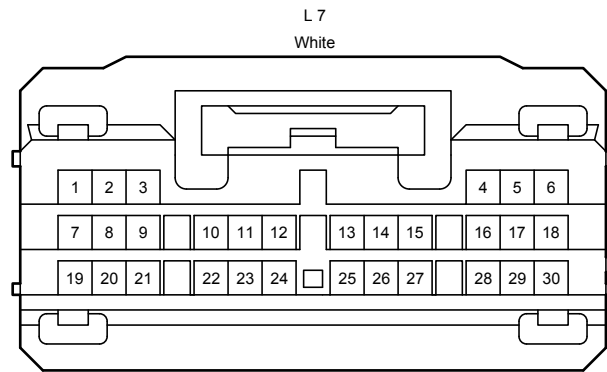
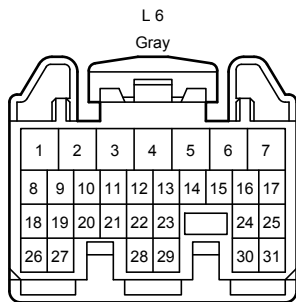
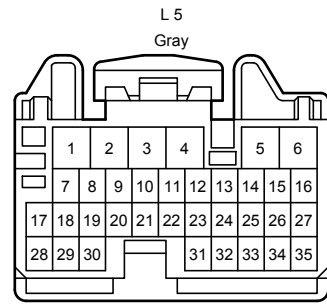
 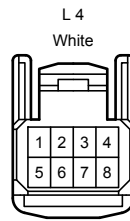


Position of Parts in Instrument Panel <RHD>

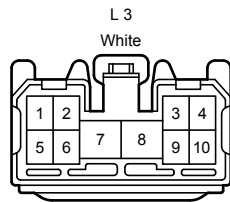

- L 1 Airbag Cut Off Switch Cylinder Sub-Assembly
- L 2 No. 1 Interior Illumination Light Assembly RH
- L 3 Seat Belt Control ECU
- L 4 Seat Belt Control ECU
- L 5 Power Management Control ECU
- L 6 Power Management Control ECU
- L 7 Main Body ECU
- L 8 Main Body ECU
- L 9 Glove Box Light (No. 1 Interior Illumination Light Assembly)
- L 10 ID Code Box
- L 11 Front Indoor Electrical Key Oscillator
- L 12 Yaw Rate Sensor Assembly
- L 13 Airbag ECU Assembly
- L 14 A/C Amplifier Assembly
- L 15 Outer Mirror Switch Assembly
- L 16 Double Lock Door Control Relay Assembly
- L 17 A/C Control Assembly
- L 18 No. 3 Power Outlet Socket Assembly
- L 19 Center Power Outlet Socket Assembly
- L 20 Pattern Select Switch Assembly
- L 21 Seat Heater Switch RH
- L 22 Seat Heater Switch LH
- L 23 Combination Meter Assembly
- L 24 Combination Meter Assembly
- L 25 Combination Meter Assembly
- L 26 Lower No. 1 Instrument Panel Airbag Assembly
- L 27 Navigation Receiver Assembly
- L 28 Navigation Receiver Assembly
- L 29 Blower with Fan Motor Sub-Assembly
- L 30 Radio Receiver Assembly
- L 31 Radio Receiver Assembly
- L 32 Amplifier Antenna Assembly
- L 33 Power Switch
- L 34 Cooler (Room Temperature Sensor) Thermistor
- L 35 Skid Control Buzzer Assembly
- L 36 Headlight Dimmer Switch Assembly
- L 38 Windshield Wiper Switch Assembly

Position of Parts in Instrument Panel <RHD>



Position of Parts in Instrument Panel <RHD>

