


Position of Parts in Body <LHD>

* 5:Before May 2016 Production
* 6:From May 2016 Production

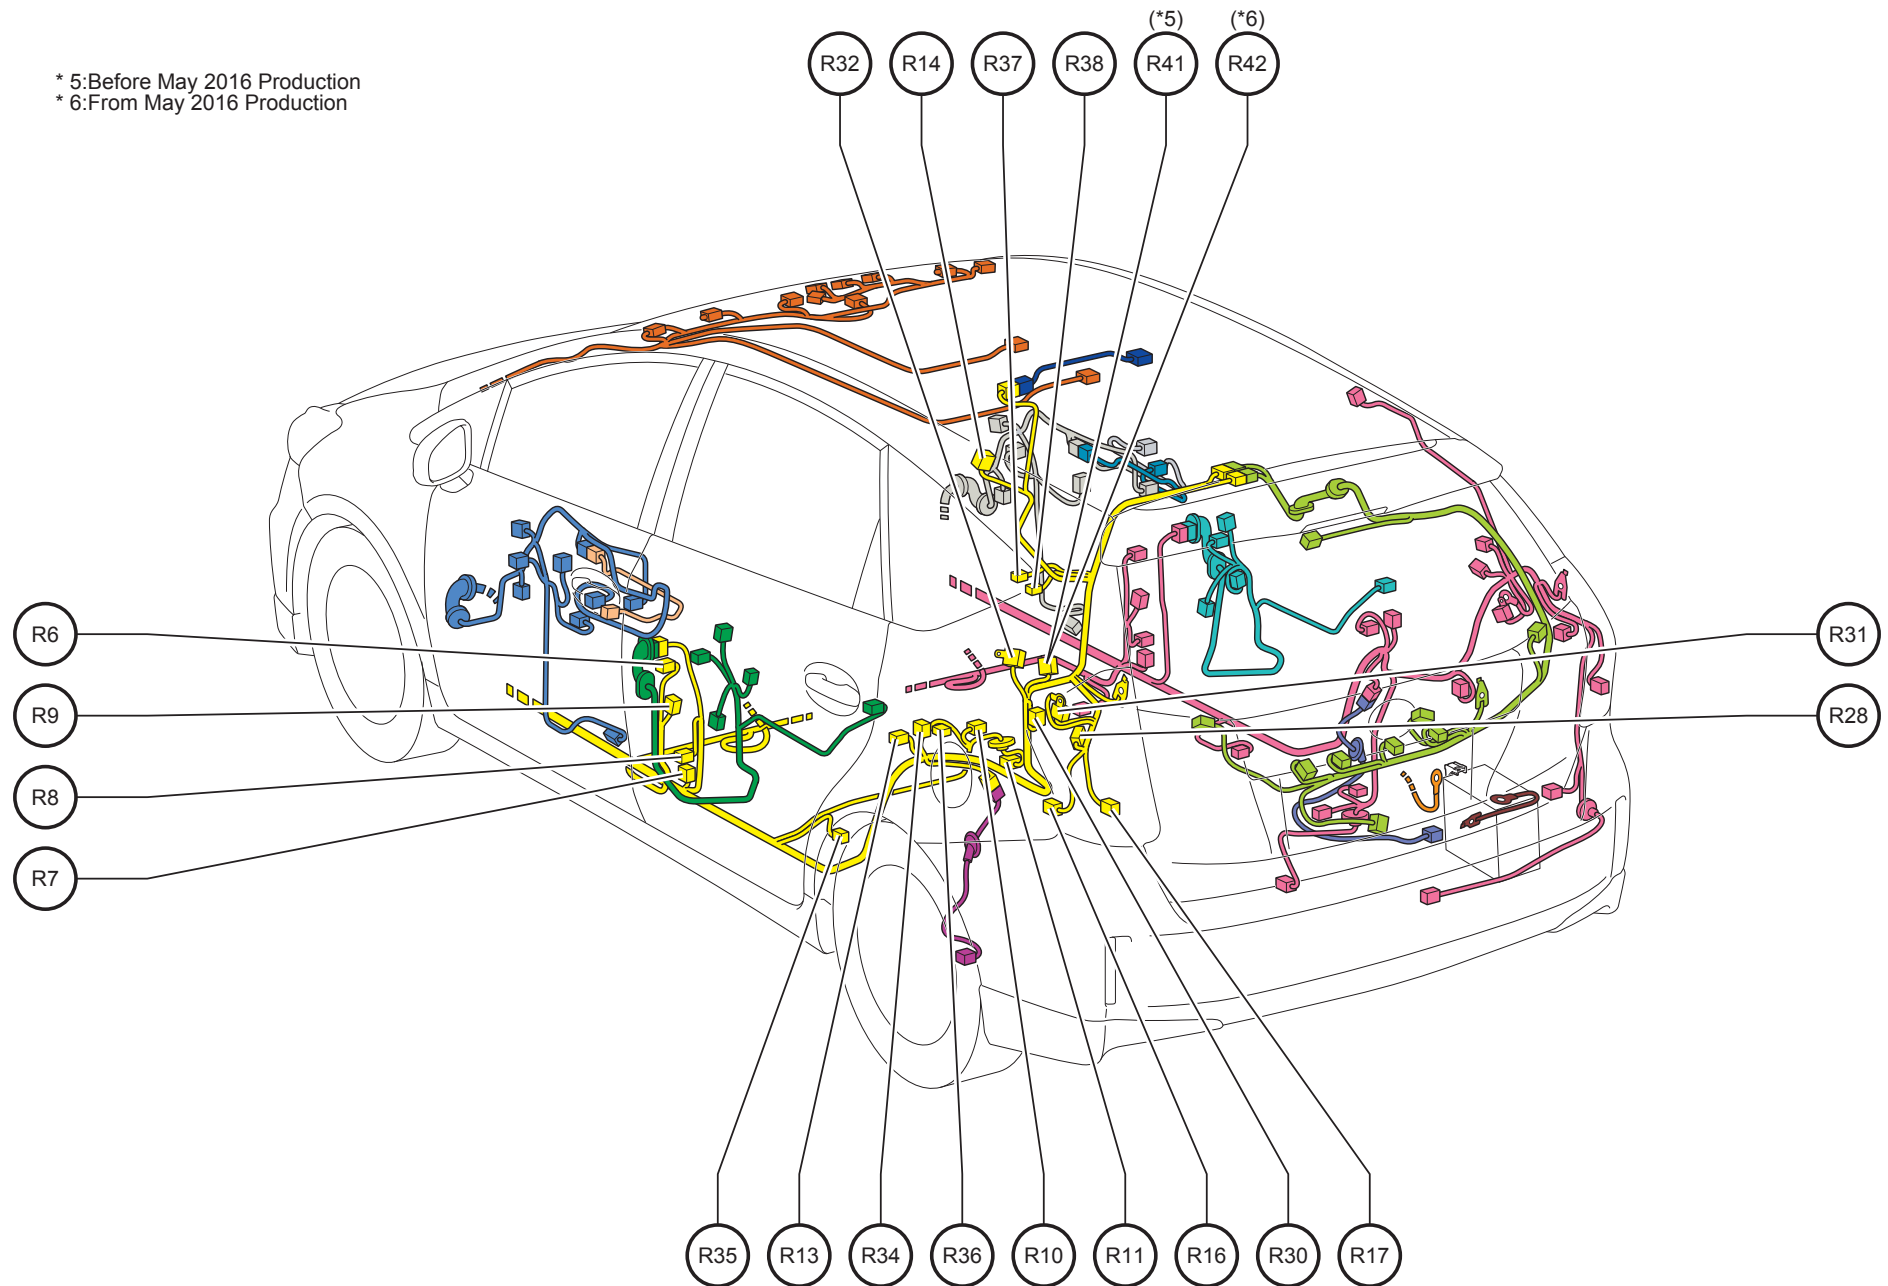

- R 6 Front Door Courtesy Light Switch Assembly LH
- R 7 Front Pretensioner LH (Front Seat Outer Belt Assembly LH)
- R 8 Front Pre-Crash Seat Belt Motor LH (Front Seat Outer Belt Assembly LH)
- R 9 Side Airbag Sensor Assembly LH
- R 10 No. 3 Indoor Electrical Key Antenna Assembly
- R 11 Fuel Sender Gage Assembly
- R 13 Rear Door Courtesy Light Switch Assembly LH
- R 14 Curtain Shield Airbag Assembly LH
- R 16 No. 2 Room Light Assembly
- R 17 Rear Combination Light Assembly LH
- R 28 Junction Connector
- R 30 Diode (Back Door Courtesy Light)
- R 31 Junction Connector
- R 32 Noise Filter (Rear Window Defogger & Stop Light)
- R 34 No. 2 Side Airbag Sensor Assembly LH
- R 35 Rear Seat 3 Point Type Belt Assembly LH
- R 36 Rear Seat Lap Type Belt Assembly Center
- R 37 Glass Breakage Sensor LH (Quarter Window Assembly LH)
- R 38 Glass Breakage Sensor LH (Quarter Window Assembly LH)
- R 41 Tire Pressure Warning ECU (Tire Pressure Monitor ECU)
- R 42 Tire Pressure Warning ECU and Receiver (Door Control and Tire Pressure Monitoring System Receiver Assembly)

Position of Parts in Body <LHD>

