


* 9: Before Dec. 2017 Production
 * 10: From Dec. 2017 Production

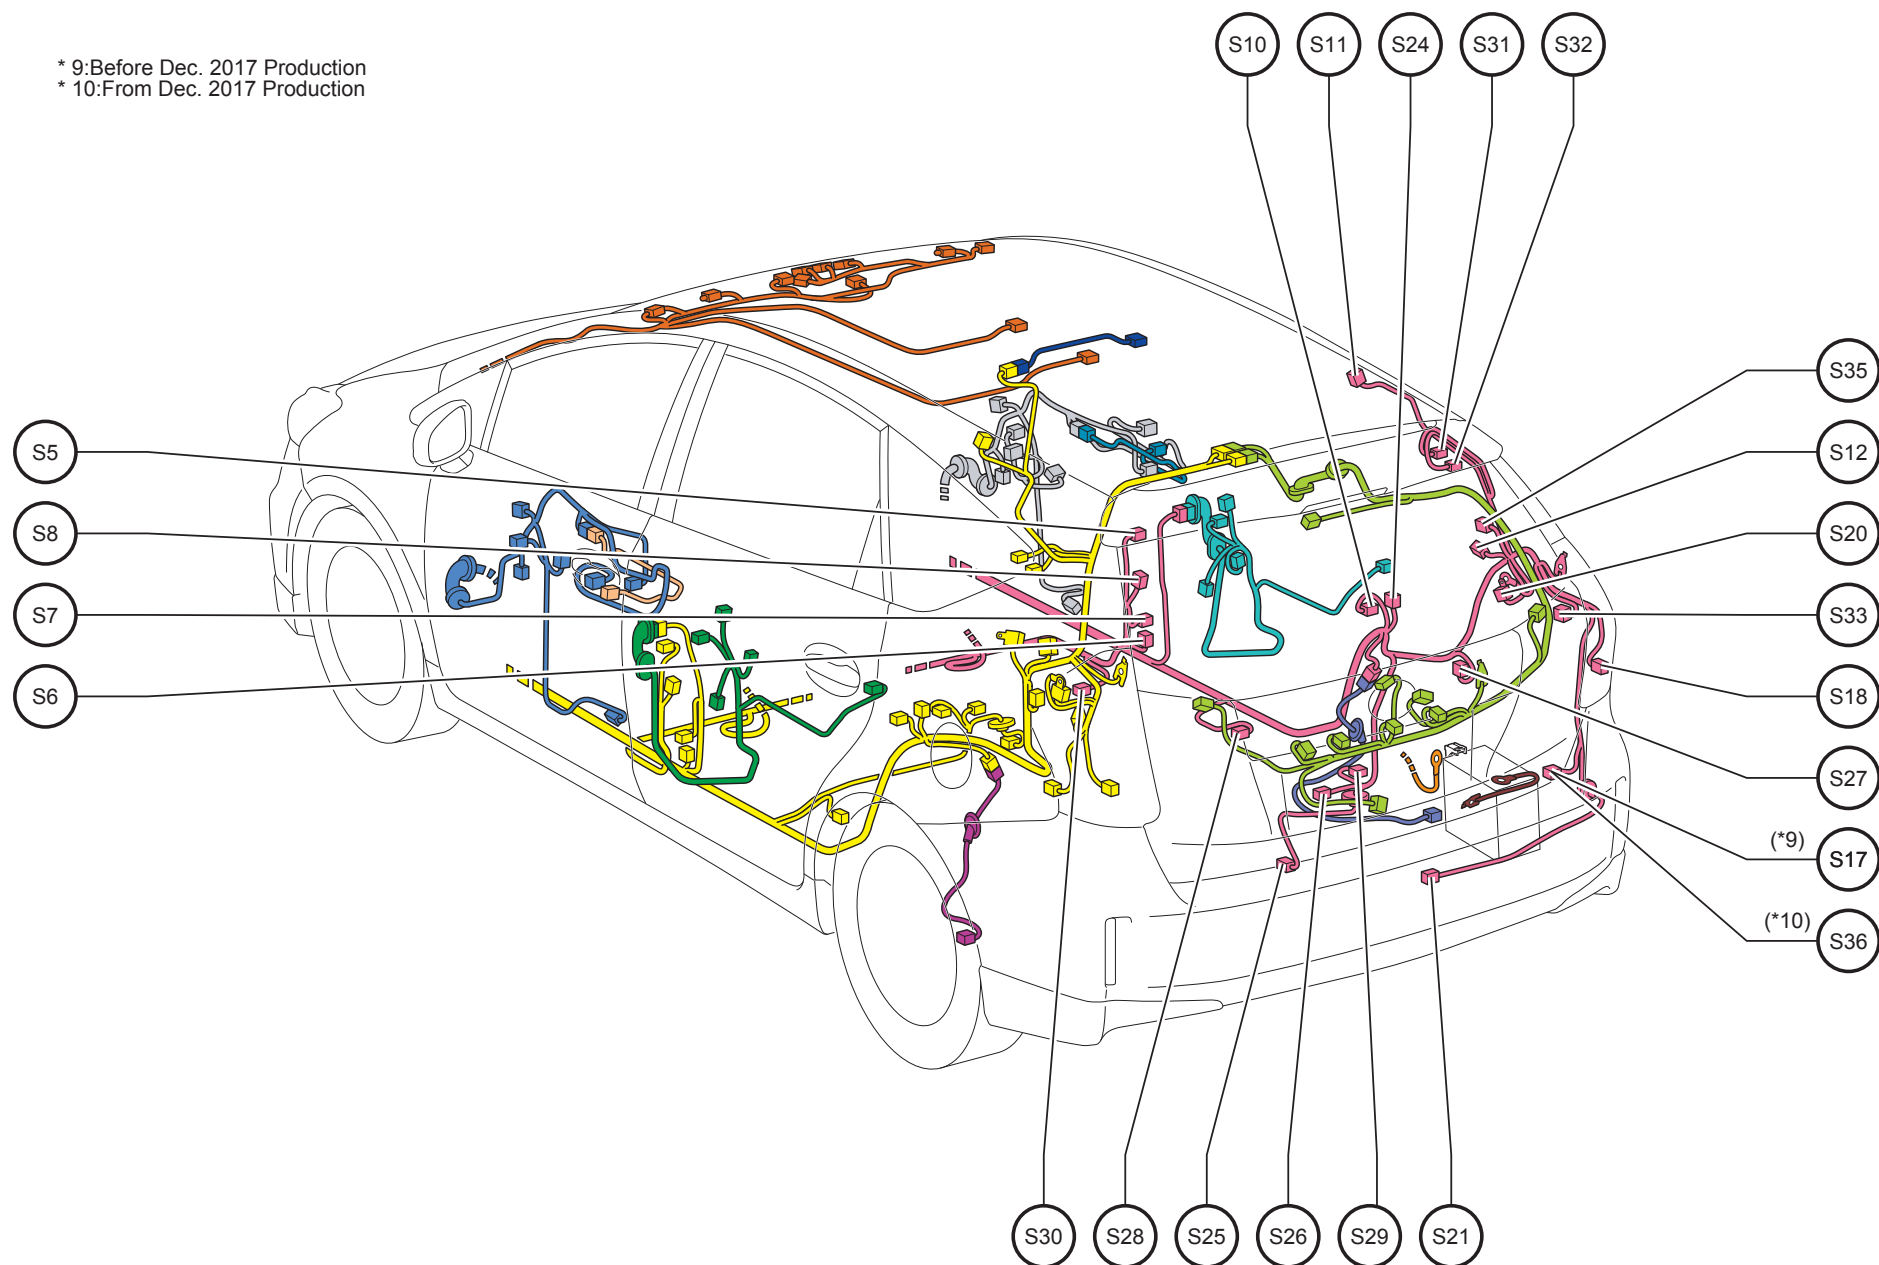

- S 5 Front Door Courtesy Light Switch Assembly RH
- S 6 Front Pretensioner RH (Front Seat Outer Belt Assembly RH)
- S 7 Front Pre-Crash Seat Belt Motor RH (Front Seat Outer Belt Assembly RH)
- S 8 Side Airbag Sensor Assembly RH
- S 10 Rear Door Courtesy Light Switch Assembly RH
- S 11 Curtain Shield Airbag Assembly RH
- S 12 Door Control Receiver
- S 17 HV Battery Thermometer (Thermistor Assembly)
- S 18 Rear Combination Light Assembly RH
- S 20 Junction Connector
- S 21 Outside Luggage Electrical Key Antenna (Electrical Key Antenna)
- S 24 No. 2 Side Airbag Sensor Assembly RH
- S 25 Rear Height Control Sensor Sub-Assembly RH
- S 26 No. 2 Indoor Electrical Key Antenna Assembly
- S 27 Rear Power Point Socket Assembly
- S 28 Rear Seat 3 Point Type Belt Assembly RH
- S 29 Rear No. 2 Seat Inner Belt Sub-Assembly
- S 30 Battery Cooling Blower Assembly
- S 31 Glass Breakage Sensor RH (Quarter Window Assembly RH)
- S 32 Glass Breakage Sensor RH (Quarter Window Assembly RH)
- S 33 Theft Warning Siren Assembly
- S 35 Glass Breakage Sensor RH (Quarter Window Assembly RH)
- S 36 HV Battery Thermometer (Thermistor Assembly)

Position of Parts in Body <RHD>

