 


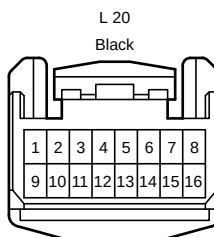
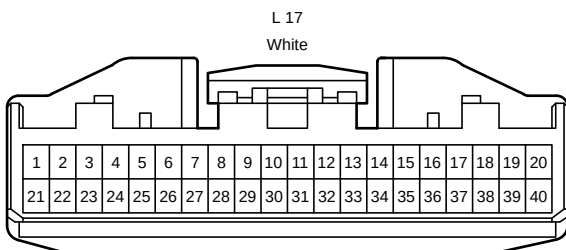
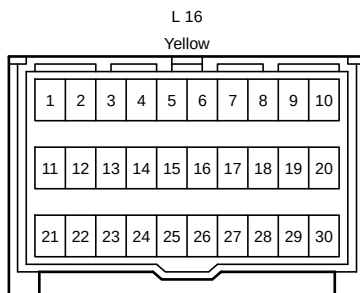
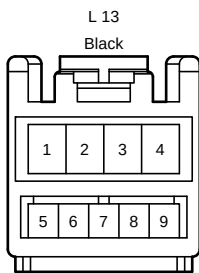
 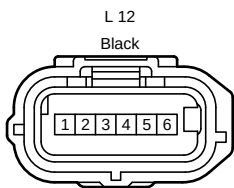
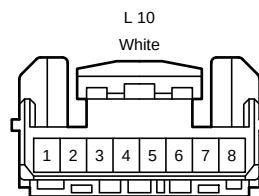

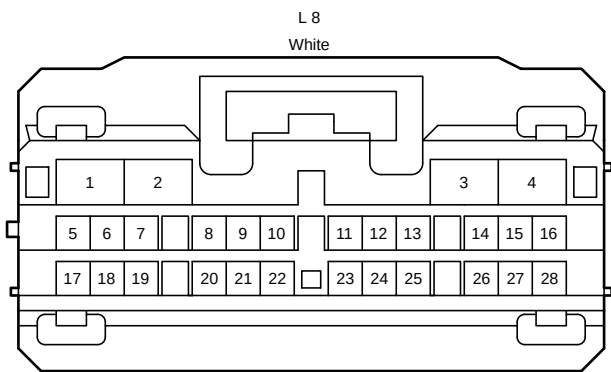
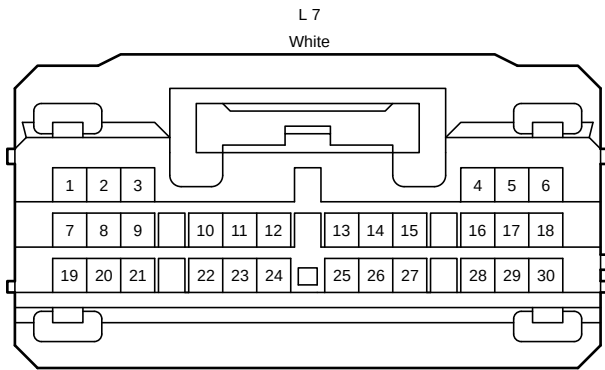
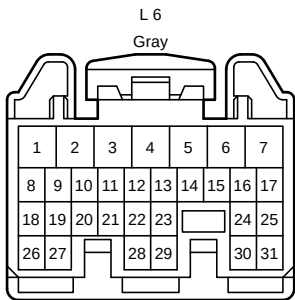
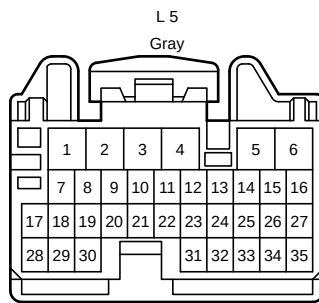
 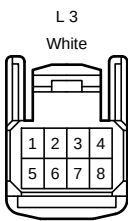


- L 1 No. 1 Interior Illumination Light Assembly RH
- L 2 Seat Belt Control ECU
- L 3 Seat Belt Control ECU
- L 5 Power Management Control ECU
- L 6 Power Management Control ECU
- L 7 Main Body ECU
- L 8 Main Body ECU
- L 9 Glove Box Light Assembly
- L 10 ID Code Box
- L 12 Yaw Rate Sensor
- L 13 No. 1 Stereo Jack Adapter Assembly
- L 16 Airbag ECU Assembly
- L 17 A/C Amplifier Assembly
- L 20 A/C Control Assembly
- L 24 Power Outlet Socket Assembly
- L 26 Seat Heater Switch
- L 27 Combination Meter Assembly
- L 29 Lower No. 1 Instrument Panel Airbag Assembly
- L 30 Stereo Component Amplifier Assembly
- L 31 Stereo Component Amplifier Assembly
- L 33 Blower with Fan Motor Sub-Assembly
- L 34 Radio & Display Receiver Assembly
- L 35 Radio & Display Receiver Assembly
- L 36 Radio & Display Receiver Assembly
- L 37 Navigation Receiver Assembly
- L 38 Navigation Receiver Assembly
- L 39 Navigation Receiver Assembly
- L 40 Navigation Receiver Assembly
- L 41 Radio & Display Receiver Assembly
- L 43 Power Switch
- L 44 Cooler (Room Temperature Sensor) Thermistor
- L 46 Skid Control Buzzer Assembly
- L 47 Headlight Dimmer Switch Assembly
- L 48 Windshield Wiper Switch Assembly
- L 49 Windshield Wiper Switch Assembly

Position of Parts in Instrument Panel <LHD>

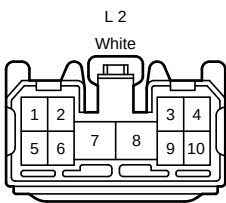

Position of Parts in Instrument Panel <LHD>

